

SERVICE MANUAL

notebook

NS70PU / NS71PU



Notebook Computer
NS70PU / NS71PU
Service Manual

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0
April 2022

Trademarks

Pentium and Celeron are trademarks of Intel Corporation.

Windows[®] is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and /or registered trademarks of their respective companies.

About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the *NS70PU* / *NS71PU* series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.

Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

Preface

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit with an AC Input of 100 - 240V, 50 - 60Hz, DC Output of 19V, 4.74A (**90** Watts) minimum AC/DC Adapter.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.


Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:


1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.



2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

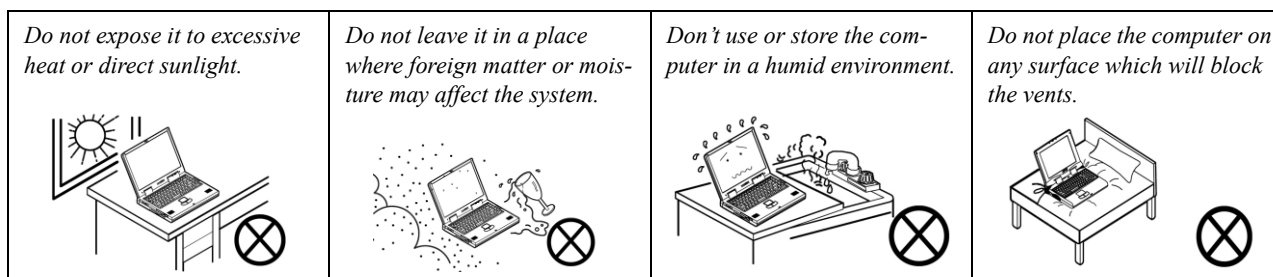


3. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

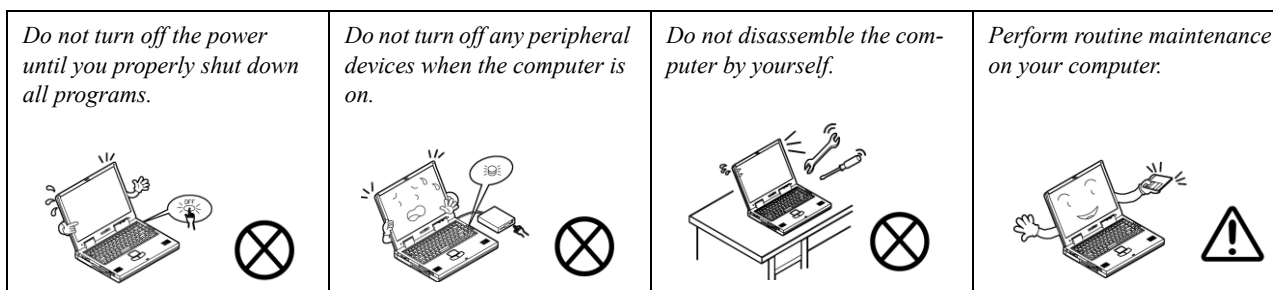

Preface


4. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
5. **Take care when using peripheral devices.**

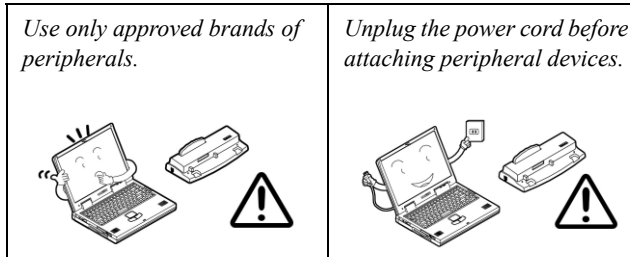

Power Safety

The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.

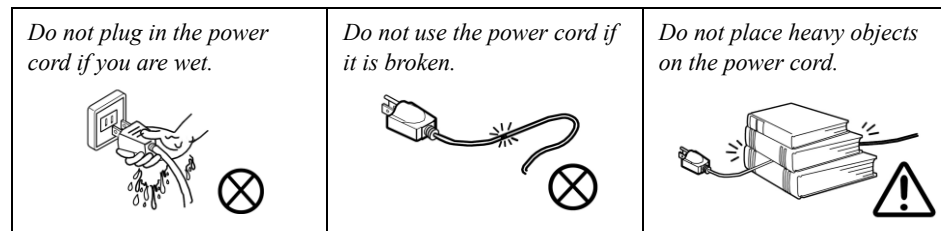

Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

Battery Guidelines

The following can also apply to any backup batteries you may have.

- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Before removing the battery for storage charge it to 60% - 70%.
- Check stored batteries at least every 3 months and charge them to 60% - 70%.



Battery Disposal

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Battery Level

Click the battery icon  in the taskbar to see the current battery level and charge status. A battery that drops below a level of 10% will not allow the computer to boot up. Make sure that any battery that drops below 10% is recharged within one week.

Preface

Related Documents

You may also need to consult the following manual for additional information:

User's Manual on CD/DVD

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Securely attach any peripherals you want to use with the computer (e.g. keyboard and mouse) to their ports.
4. **When first setting up the computer use the following procedure** (as to safeguard the computer during shipping, the battery will be locked to not power the system until first connected to the AC/DC adapter and initially set up as below):
 - Attach the AC/DC adapter cord to the DC-In jack on the left of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter. The battery will now be unlocked.
5. Use one hand to raise the lid/LCD to a comfortable viewing angle (do not exceed 180 degrees); use the other hand (as illustrated in Figure 1) to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).
6. Press the power button on the left side of the computer to turn it on (note that the lid/LCD must be open for the power button to function).



Powering the Computer On

After every disassembly, make sure that the bottom case's screws are all inserted and tightened before turning the computer on.



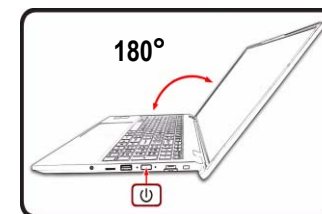



Figure 1
Opening the Lid/LCD/Computer with AC/DC Adapter Plugged-In

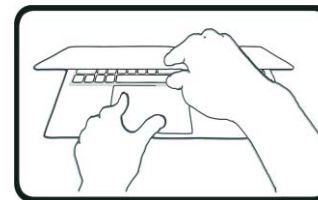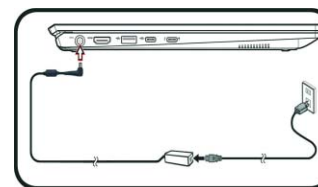

Shut Down

Note that you should always shut your computer down by choosing the **Shut down** command in **Windows** (see below). This will help prevent hard disk or system problems.

1. Click the Start Menu icon .
2. Click the **Power** item .
3. Choose **Shut down** from the menu.

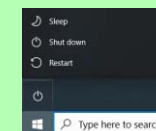

Contents

Introduction1-1

Overview	1-1
Specifications	1-2
External Locator - Top View with LCD Panel Open	1-4
External Locator - Front & Right Side Views	1-5
External Locator - Left Side & Rear View	1-6
External Locator - Bottom View	1-7
Mainboard Overview - Top (Key Parts)	1-8
Mainboard Overview - Bottom (Key Parts)	1-9
Mainboard Overview - Top (Connectors)	1-10
Mainboard Overview - Bottom (Connectors)	1-11

Disassembly2-1

Overview	2-1
Maintenance Tools	2-2
Connections	2-2
Maintenance Precautions	2-3
Disassembly Steps	2-4
Removing the Battery	2-5
Removing the Keyboard	2-7
Removing the System Memory (RAM)	2-8
Removing the Wireless LAN Module	2-10
Wireless LAN, and Combo Module Cables	2-11
Removing the M.2 SSD Module	2-12
Removing the CCD	2-14

Part ListsA-1

Part List Illustration Location	A-2
Top	A-3
Bottom	A-4
LCD	A-5

MB	A-6
----------	-----

Schematic Diagrams.....B-1

System Block Diagram	B-2
Processor 1/13	B-3
Processor 2/13	B-4
Processor 3/13	B-5
Processor 4/13	B-6
Processor 5/13	B-7
Processor 6/13	B-8
Processor 7/13	B-9
Processor 8/13	B-10
Processor 9/13	B-11
Processor 10/13	B-12
Processor 11/13	B-13
Processor 12/13	B-14
Processor 13/13	B-15
DDR4 SO-DIMM A	B-16
DDR4 SO-DIMM B	B-17
HDMI	B-18
Audio Codec	B-19
M.2 PCIE Gen4 SSD	B-20
M.2 SSD	B-21
USB Port	B-22
Panel	B-23
IT5570	B-24
RGB KB, LID Conn	B-25
WLAN/BT	B-26
CCD	B-27
Type-C USB	B-28
Retimer 1/2	B-29

Preface

Retimer 2/2	B-30
Type-C	B-31
Fan, TP	B-32
VDD3, VDD5	B-33
VDDQ, VDDQ_VTT, 1.8VA	B-34
3.3VA, 1.8VS	B-35
2.5V, VCCST, VCCSTG	B-36
MP2964 Controller	B-37
VCore	B-38
VCCGT	B-39
VCCIN AUX	B-40
3.3V, 5V, 3VS, 5VS, CTL	B-41
Charger	B-42
Option BOM	B-43
AC_In	B-44
Multi Board - USB, LED	B-45
Multi Board - RTL8111H RTD3	B-46
Audio Board	B-47
OZ711LV2	B-48
Hall Sensor Board	B-49
Power Sequence	B-50

Chapter 1: Introduction

Overview

This manual covers the information you need to service or upgrade the **NS70PU / NS71PU** series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in the *User's Manual*. The manual is shipped with the computer.

Operating systems (e.g. *Window 10*, etc.) have their own manuals as do application softwares (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The **NS70PU / NS71PU** series notebook is designed to be upgradeable. See [Disassembly on page 2 - 1](#) for a detailed description of the upgrade procedures for each specific component. Please take note of the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer's technical specifications and features.

Introduction

Specifications



Latest Specification Information

The specifications listed in this section are correct at the time of going to press. Certain items (particularly processor types/speeds) may be changed, delayed or updated due to the manufacturer's release schedule. Check with your service center for details.

Note that this computer model series may support a range of CPUs and/or video adapters.

To find out which CPU is installed on your system go to the **Start** menu and select **Settings**, and then select **System** and click **About**. This will also provide information on the amount of **Installed RAM** etc.

To get information on your system's **video adapter** go to the **Start** menu and select **Settings**, and then select **System** and click **Display > Advanced display settings > Display adapter properties**.



CPU

The CPU is not a user serviceable part. Accessing the CPU in any way may violate your warranty.

Processor Options

Intel® Core™ i7 Processor
i7-1260P (2.10GHz), TDP 28W

Intel® Core™ i5 Processor
i5-1240P (1.70GHz), TDP 28W

Intel® Core™ i3 Processor
i3-1220P (1.50GHz), TDP 28W

BIOS

256Mb SPI Flash ROM

Insyde BIOS

Memory

Dual Channel DDR4

Two 260 Pin SO-DIMM Socket Supporting **DDR4 3200MHz** Memory

Memory Expandable up to 64GB

Compatible with 8GB, 16GB or 32GB Modules

(The real memory operating frequency depends on the FSB of the processor.)

LCD Options

LCD, 17.3" (43.94cm), 16:9, FHD (1920x1080)

Storage

One M.2 **PCIe Gen4 x4** Solid State Drive (SSD)*

One M.2 **SATA/PCIe Gen3 x4** Solid State Drive (SSD)*

*Supporting RAID Level 0/1 with two PCIe SSDs (**PCIe Gen3 x4**)

Video Adapter

Intel Iris Xe Graphics

HDR Support

Rec. 2020

Microsoft DirectX® 12 Compatible

Pointing Device

Built-in Touchpad (with Microsoft PTP Multi Gesture & Scrolling Functionality)

Keyboard

Full-size Keyboard (with Numeric Keypad)

Or

(**Factory Option**) Full-size **Multi-Color** LED Keyboard (with Numeric Keypad)

Audio

High Definition Audio Compliant Interface

Nahimic Audio

Built-In Array Microphone

Two Speakers

Security

Security (Kensington® Type) Lock Slot

BIOS Password

Intel PTT for Systems Without TPM Hardware

(**Factory Option**) TPM 2.0

M.2 Slots

Slot 1 for **WLAN and Bluetooth** Combo Module

Slot 2 for **PCIe Gen4 x4 SSD**

Slot 3 for **SATA** or **PCIe Gen3 x4 SSD**

Card Reader

MicroSD Card Reader

Interface

One USB 2.0 Port
One USB 3.2 Gen 2 Type-A Port
Or
(**Factory Option**) One Powered USB 3.2 Gen 2 Type-A Port
One USB 3.2 Gen 2 Type-C Port*
**The maximum amount of current supplied by USB Type-C ports is 500mA (USB 2.0)/900mA (USB3.2).*
One Thunderbolt 4 Port with Power Delivery (DC-In)**
***The power output of the Thunderbolt 4 port is 5V/3A in AC mode or 5V/1.5A in DC mode.*
One HDMI-Out Port
One 2- In-1 Audio Jack (Headphone / Microphone)
One RJ-45 LAN Jack
One DC-In Jack

Communication

Built-In 10/100/1000Mb Base-TX Ethernet LAN
1.0M HD Webcam
Or
(**Factory Option**) Windows Hello Camera Module

WLAN/ Bluetooth M.2 Modules:

(**Factory Option**) Intel® Dual Band Wi-Fi 6E AX211, 2x2 AX Wireless LAN + Bluetooth
(**Factory Option**) Intel® Dual Band Wi-Fi 6E AX210, 2x2 AX Wireless LAN + Bluetooth
(**Factory Option**) Intel® Dual Band Wi-Fi 6 AX201, 2x2 AX Wireless LAN + Bluetooth
(**Factory Option**) Intel® Dual Band Wi-Fi 5 Wireless-AC 9462, 1x1 AC Wireless LAN + Bluetooth

Power

Full Range AC/DC Adapter
AC Input: 100 - 240V, 50 - 60Hz
DC Output: 19V, 4.74A (**90W**)

Embedded Lithium-Ion Polymer Battery Pack, 36WH
(**Factory Option**) Embedded Lithium-Ion Polymer Battery Pack, 73WH

Environmental Spec**Temperature**

Operating: 5°C - 35°C
Non-Operating: -20°C - 60°C

Relative Humidity

Operating: 20% - 80%
Non-Operating: 10% - 90%


Dimensions & Weight

395mm (w) * 250.7mm (d) * 19.8mm (h)
2.05kg (Barebone with 36WH Battery)
Or
2.25kg (Barebone with 73WH Battery)

Introduction


Figure 1
Top View

1. Webcam
Or
(Factory Option)
Windows Hello
Camera
2. *Camera LED
**When the camera is in use, the LED will be illuminated.*
3. Built-In Array
Microphone
4. Display
5. Keyboard
6. Clickpad and
Buttons

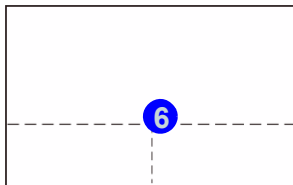

Note that the Clickpad and Buttons has a valid operational area indicated within the dotted lines.

External Locator - Top View with LCD Panel Open

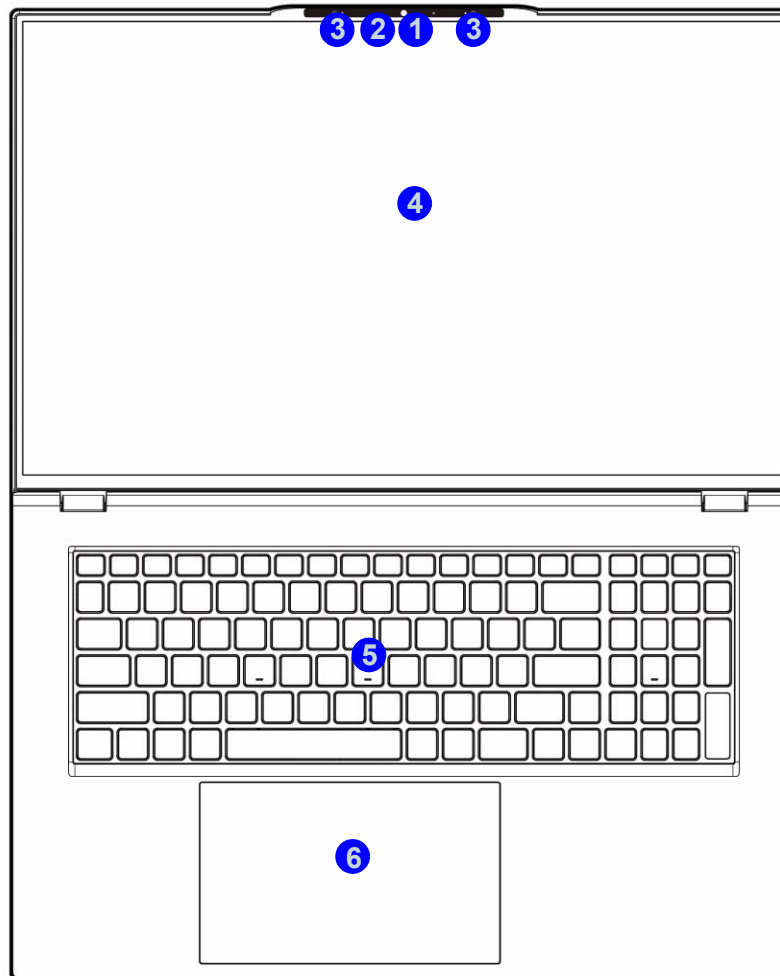

External Locator - Front & Right Side Views


Figure 2
Front View

FRONT VIEW



Figure 3
Right Side View

RIGHT SIDE VIEW

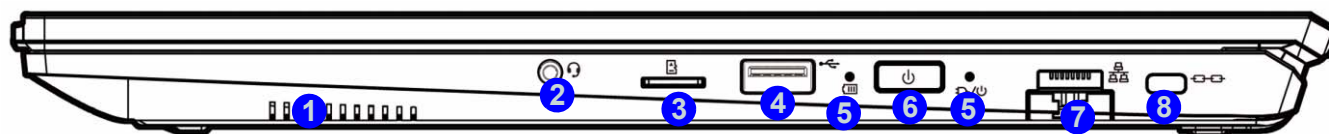

1. Speaker
2. 2-In-1 Audio Jack (Headphone and Microphone)
3. MicroSD Card Reader
4. USB 2.0 Port
5. LED Indicators
6. Power Button
7. RJ-45 LAN Jack
8. Security Lock Slot

Introduction

External Locator - Left Side & Rear View

Figure 4
Left Side View

1. DC-In Jack
2. HDMI-Out Port
3. USB 3.2 Gen 2 Type-A Port
- Or
(Factory Option)
Powered USB 3.2 Gen 2 Type-A Port
4. USB 3.2 Gen 2 Type-C Port
5. Thunderbolt 4 Port with Power Delivery (DC-In)
6. Speaker

LEFT SIDE VIEW

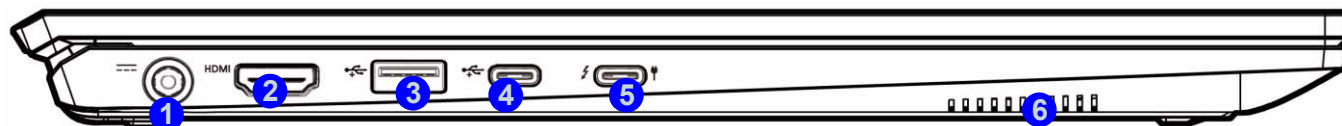


Figure 5
Rear View

1. Vent

REAR VIEW



External Locator - Bottom View

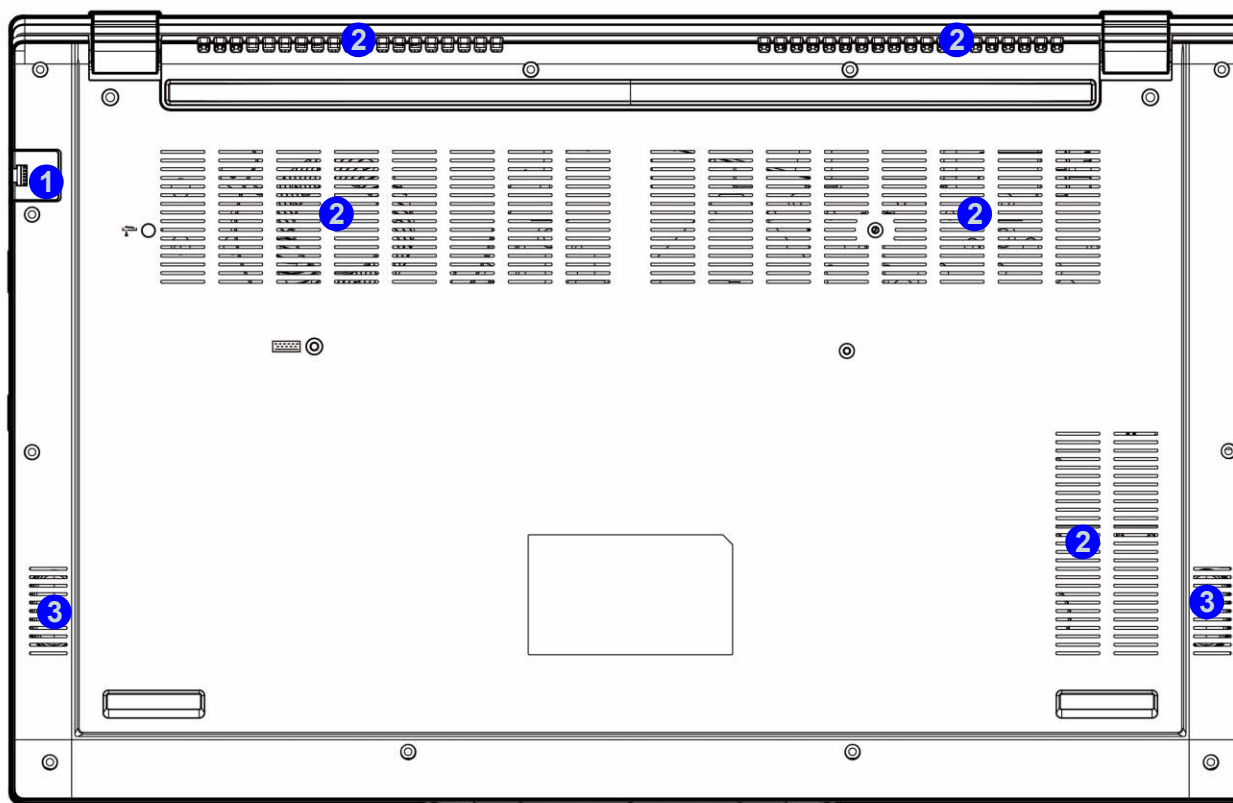


Figure 6
Bottom View

1. RJ-45 LAN Jack
2. Vent
3. Speakers



Overheating


To prevent your computer from overheating, make sure nothing blocks any vent while the computer is in use.

Introduction

Figure 7
**Mainboard Top
Key Parts**

Mainboard Overview - Top (Key Parts)


1. KBC-ITE IT5570

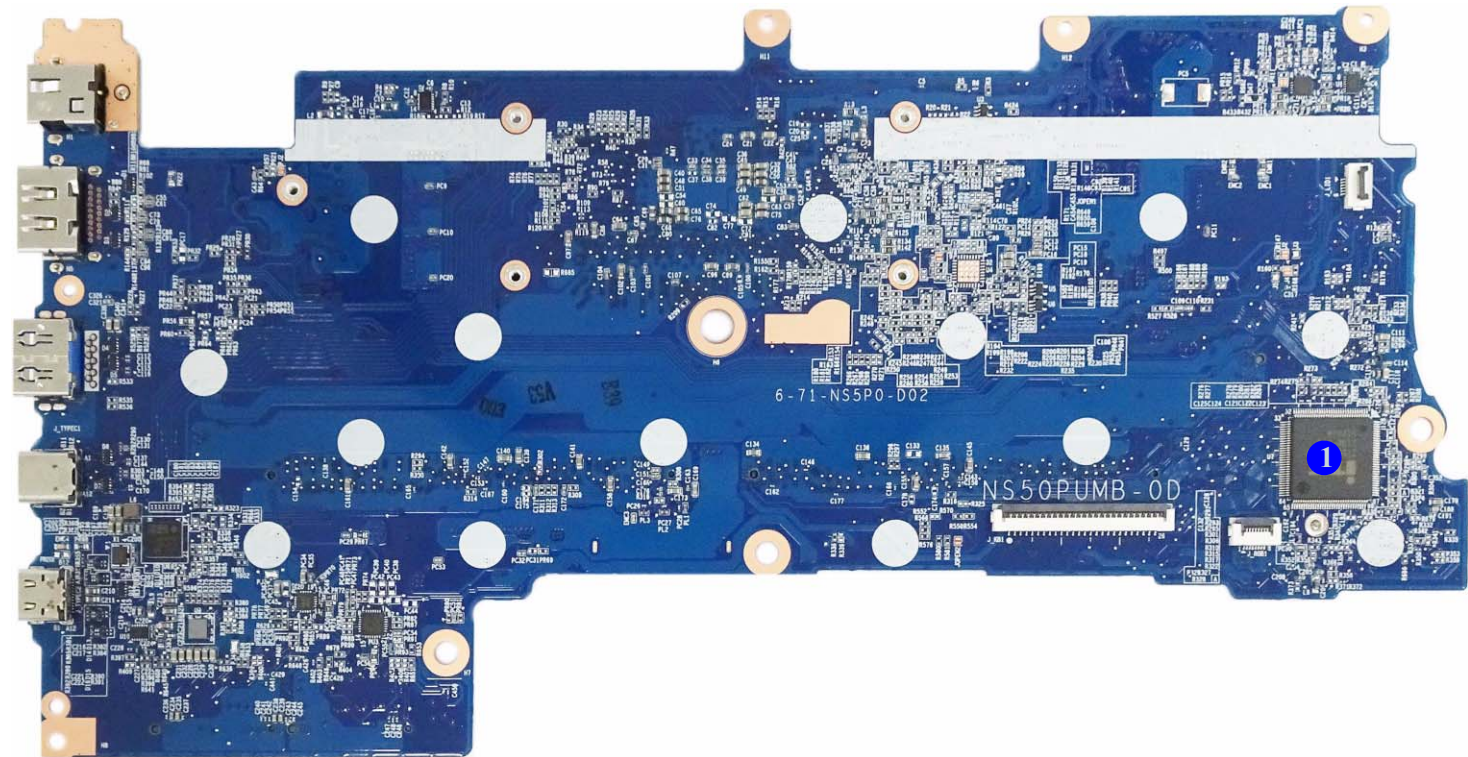

Mainboard Overview - Bottom (Key Parts)

Figure 8
**Mainboard Bottom
Key Parts**

1. CPU
2. Mini-Card
Connector (WLAN/
BT Module)
3. Memory Slots
DDR4 SO-DIMM
4. Mini-Card
Connector (M.2
PCIE/SATA SSD
Module)
5. Mini-Card
Connector (M.2
PCIE SSD
Module)

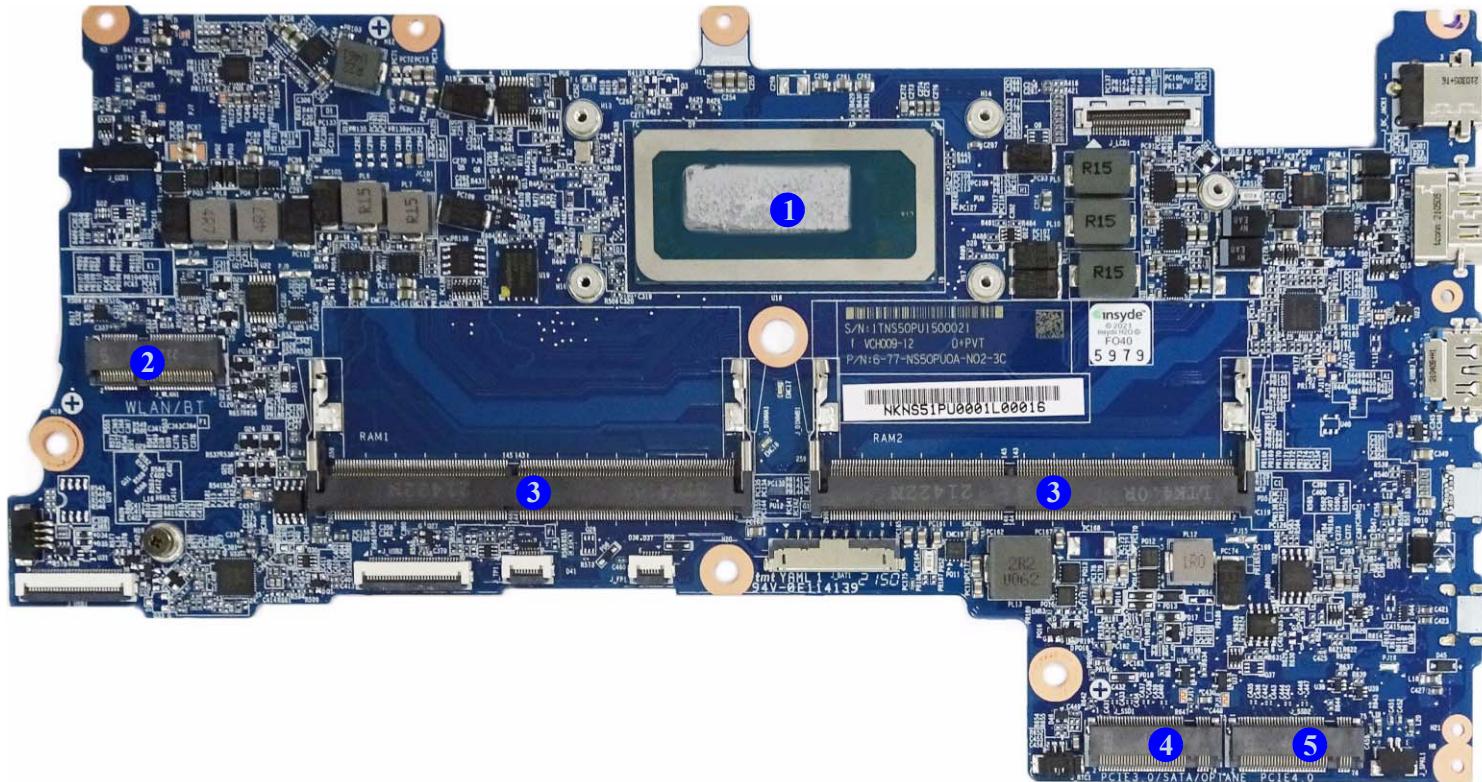


Introduction

Figure 9
**Mainboard Top
Connectors**

1. DC-In Jack
2. HDMI-Out Port
3. USB 3.2 Gen 2 Type-A Port
4. USB 3.2 Gen 2 Type-C Port
5. Thunderbolt 4 Port with Power Delivery (DC-In)
6. Keyboard Cable Connector
7. LED KB Connector
8. LID Connector


Mainboard Overview - Top (Connectors)

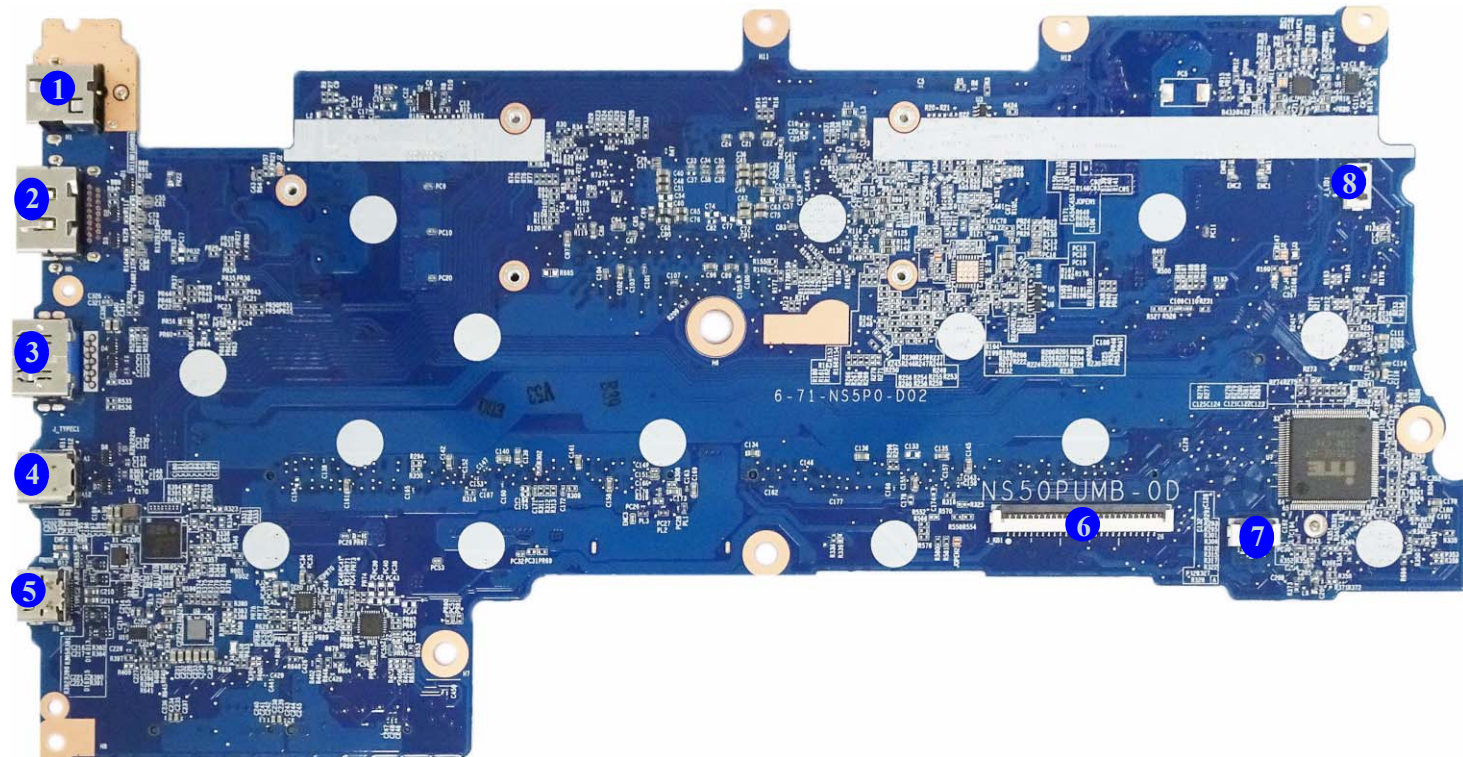

Mainboard Overview - Bottom (Connectors)

Figure 10
**Mainboard Bottom
Connectors**

1. CCD Connector
2. Fan Connector
3. USB Board Connector
4. USB Connector
5. Touchpad Cable Connector
6. Fingerprint Connector
7. Battery Connector
8. RTC Connector
9. Speaker Connector
10. LCD Connector

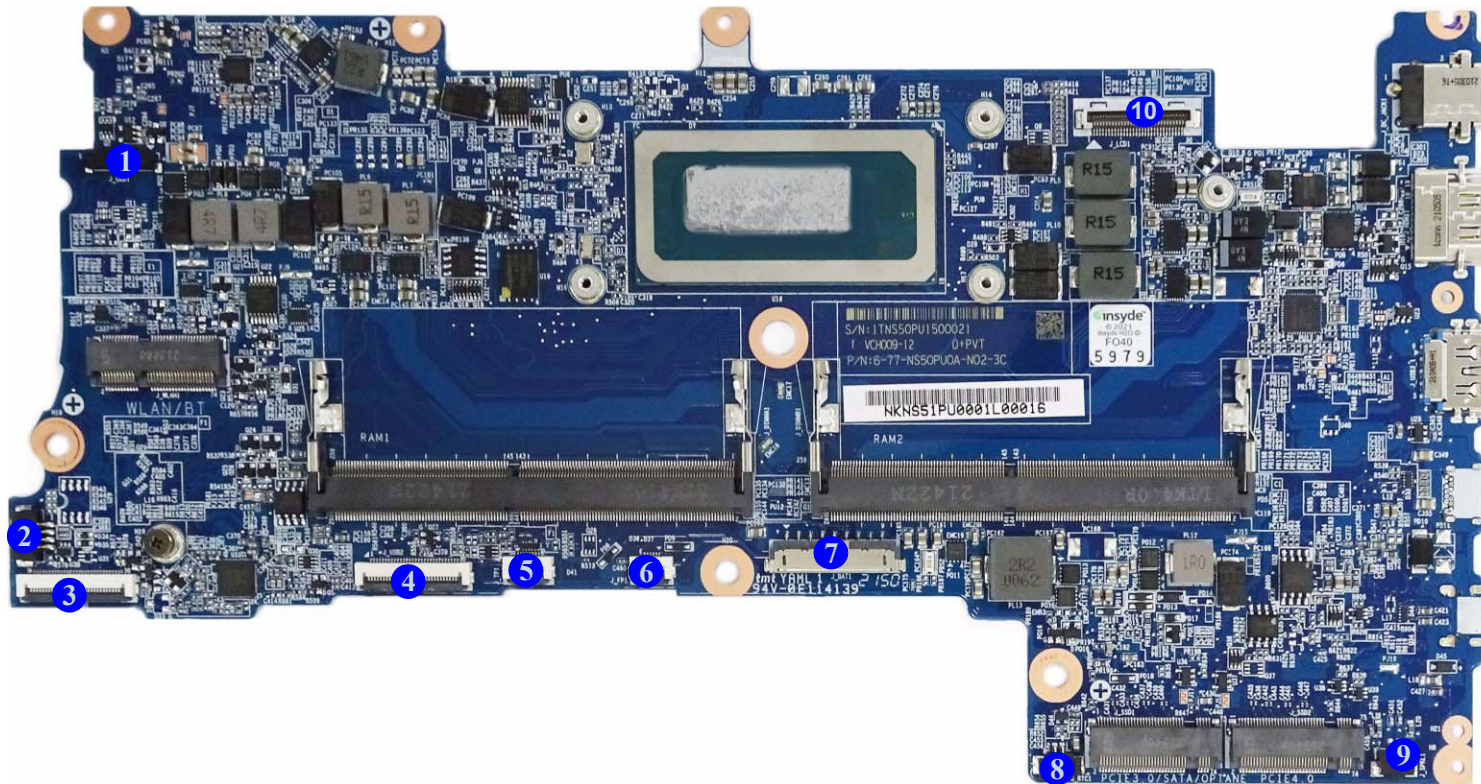

Chapter 2: Disassembly



Disassembly

Note that for the disassembly of any key parts, **the bottom case must be properly closed before opening the upper part of the LCD** to avoid any damage caused by the nature of the structure.

Overview

This chapter provides step-by-step instructions for disassembling the *NS70PU / NS71PU* series notebook's parts and subsystems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).

We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, optical device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will also provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.



Information



Warning


Disassembly

NOTE: All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

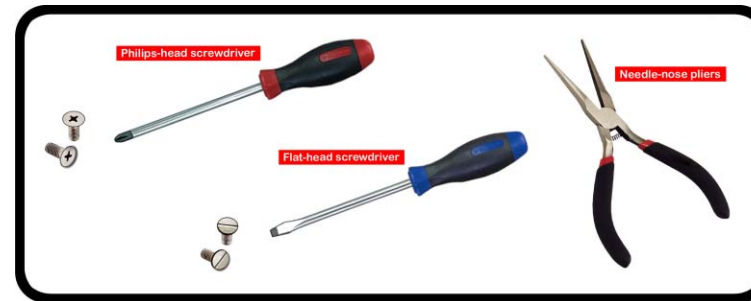

Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors

To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.

Pressure sockets for multi-wire connectors

To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.

Pressure sockets for ribbon connectors

To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.

Board-to-board or multi-pin sockets

To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.

Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
 - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
 - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-born particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.

(For Computer Models Supplied with Light Blue Cleaning Cloth) Some computer models in this series come supplied with a light blue cleaning cloth. To clean the computer case with this cloth follow the instructions below.

- Power off the computer and peripherals.
- Disconnect the AC/DC adapter from the computer.
- Use a little water to dampen the cloth slightly.
- Clean the computer case with the cloth.
- Dry the computer with a dry cloth, or allow it time to dry before turning on.
- Reconnect the AC/DC adapter and turn the computer on.



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

To remove the Battery:

1. Remove the battery-1 *page 2 - 5*
1. Remove the battery-2 *page 2 - 6*

To remove the Keyboard:

1. Remove the battery *page 2 - 5*
2. Remove the keyboard *page 2 - 7*
- 3.

To remove the System Memory:

1. Remove the battery *page 2 - 5*
2. Remove the system memory *page 2 - 8*

To remove the Wireless LAN Module:

1. Remove the battery *page 2 - 5*
2. Remove the WLAN *page 2 - 10*

To remove the M.2 SSD Module:

1. Remove the battery *page 2 - 5*
2. Remove the SSD-1 module *page 2 - 12*
3. Remove the SSD-2 module *page 2 - 13*

To remove the CCD Module:

1. Remove the battery *page 2 - 5*
2. Remove the CCD module *page 2 - 14*


Removing the Battery

Battery-1 Removal Procedure

1. Turn **off** the computer, turn it over.
2. Remove screws **1** - **16** from the bottom case (**Figure 1a**). (**Note:** use 1.5 kg torque when reinserting screws except for M2.5 screws **2**, **5**, **14**).
3. Carefully lift the bottom case **17** up from point **18** - **19** as shown. The battery will be visible at point **20** on the computer (**Figure 1b**).
4. Carefully disconnect the cable **21**, then remove the adhesive mylar **22** as shown (**Figure 1c**).
5. Lift the battery **23** off the computer (**Figure 1d**).
6. Reverse the process to install a new battery (do not forget to replace all the screws and bottom cover).

Figure 1
Battery-1 Removal

- a. Remove the screws.
- b. Remove the bottom case and locate the battery.
- c. Disconnect the cable and remove the adhesive mylar
- d. Lift the battery off the computer.

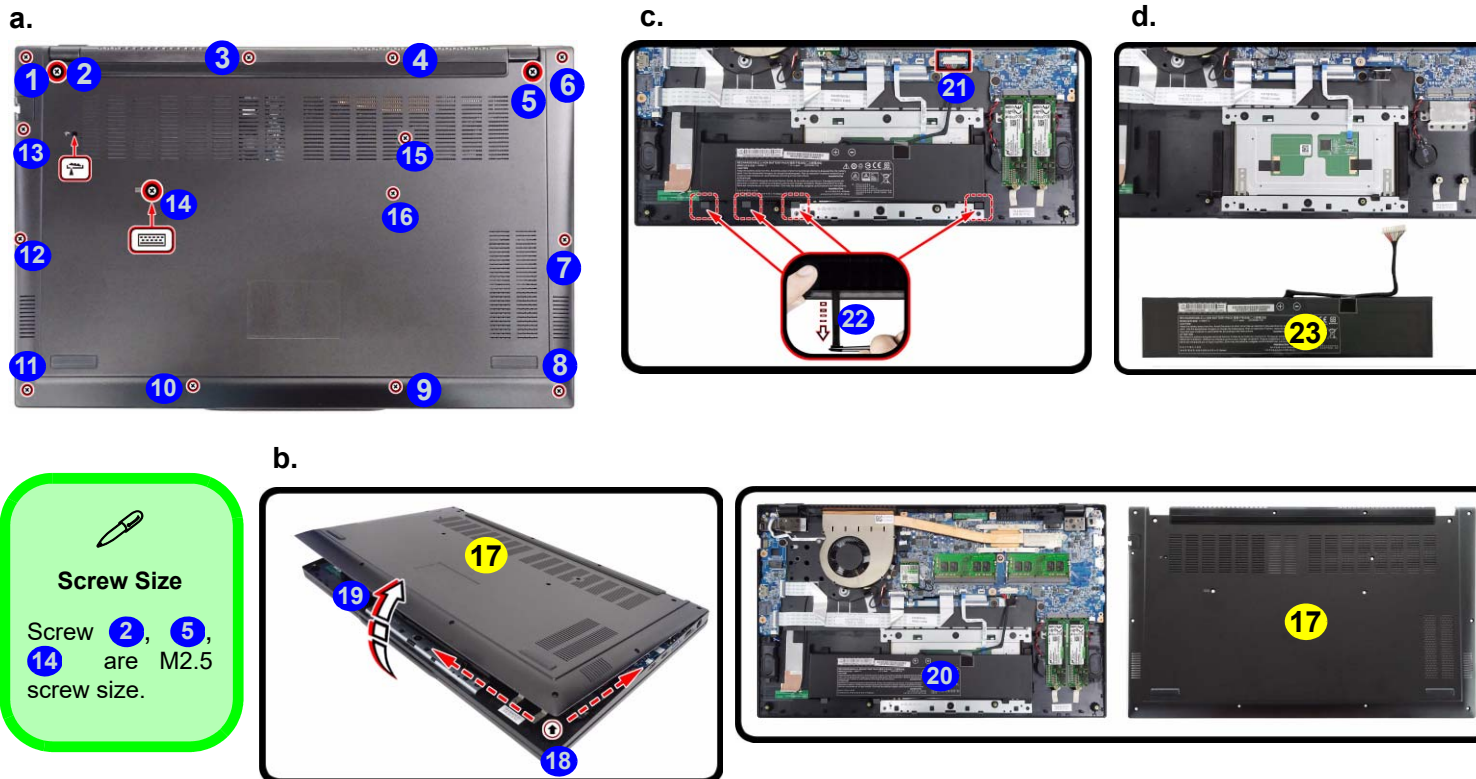

Disassembly


Figure 2

Battery-2 Removal

- Remove the screws.
- Remove the bottom case and locate the battery.
- Disconnect the cable and remove the adhesive mylar
- Lift the battery off the computer.

Battery-2 Removal Procedure

- Turn **off** the computer, turn it over.
- Remove screws **1** - **16** from the bottom case (**Figure 2a**). (**Note:** use 1.5 kg torque when reinserting screws except for M2.5 screws **2**, **5**, **14**).
- Carefully lift the bottom case **17** up from point **18** - **19** as shown. The battery will be visible at point **20** on the computer (**Figure 2b**).
- Carefully disconnect the cable **21**, then remove the adhesive mylar **22** as shown (**Figure 2c**).
- Lift the battery **23** off the computer (**Figure 2d**).
- Reverse the process to install a new battery (do not forget to replace all the screws and bottom cover).

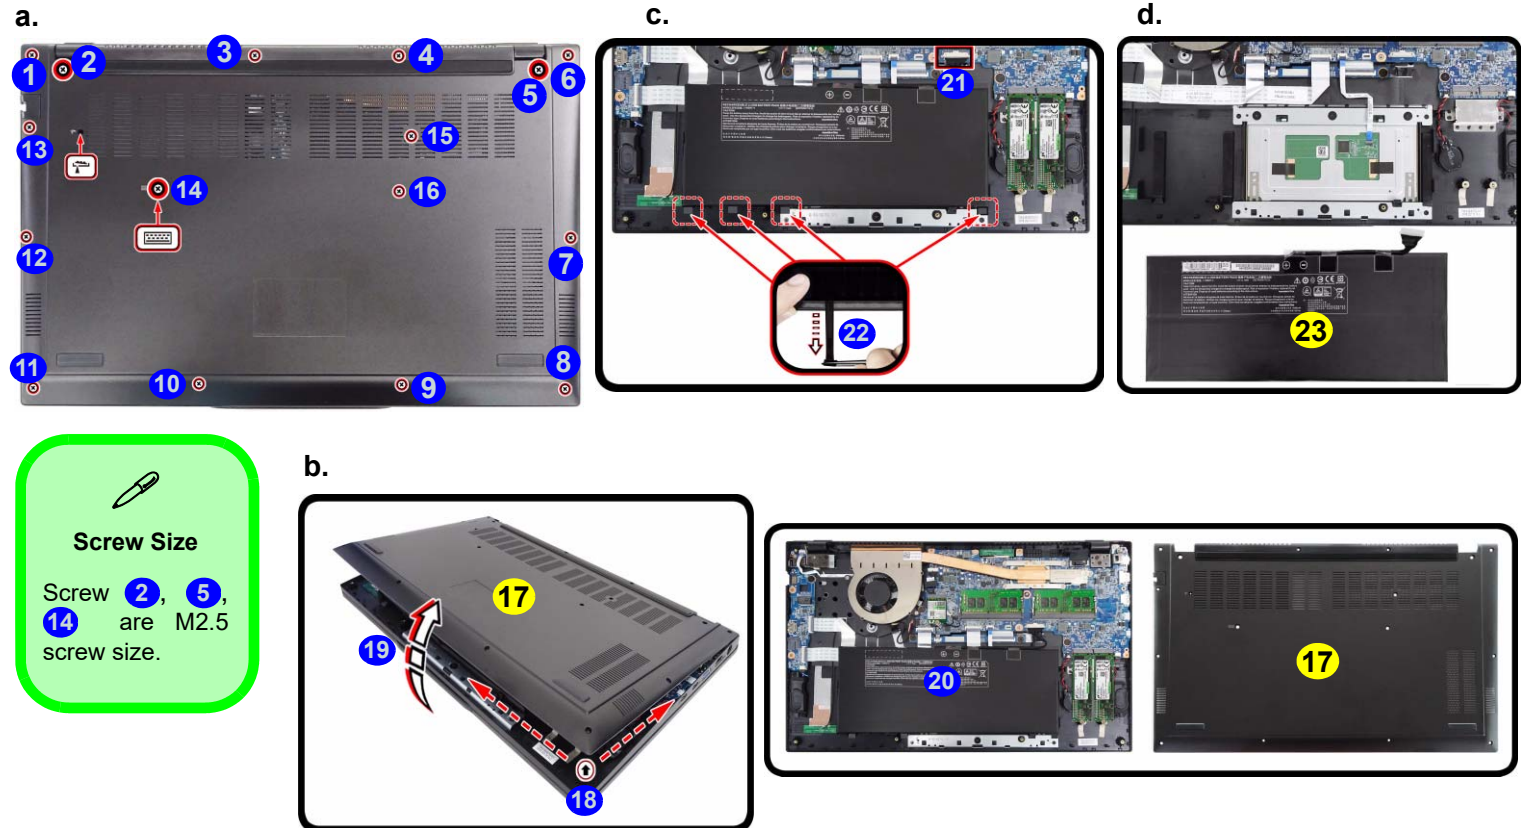

Powering the Computer On

After every disassembly, make sure that the bottom case's screws are all inserted and tightened before turning the computer on.

Screw Size

Screw **2**, **5**, **14** are M2.5 screw size.

17. Bottom Cover
23. Battery

- 16 Screws



Removing the Keyboard

Keyboard Removal Procedure

1. Turn **off** the computer, turn it over to remove the battery ([page 2 - 5](#)).
2. Locate the release points **1** from the open bottom case ([Figure 3a](#)).
3. Open it up with the LCD on a flat surface before pressing at point **2** to release the keyboard module (use the specific eject stick **3** to do this) while releasing the keyboard in the direction of the arrow **4** as shown ([Figure 3b](#)).
4. Carefully lift the keyboard **5** up, being careful not to bend the keyboard ribbon cable **6**. Disconnect the keyboard ribbon cable from the locking collar socket **7** ([Figure 3c](#)).
5. Carefully lift up the keyboard **5** off the computer ([Figure 3d](#)).
6. Reverse the process to install the keyboard (be careful not to bend the keyboard ribbon cable).

Figure 3
Keyboard Removal

- a. Remove the screws.
- b. Release the keyboard by pressing at point **2**.
- c. Disconnect the keyboard ribbon cable from the locking collar socket.
- d. Remove the keyboard.

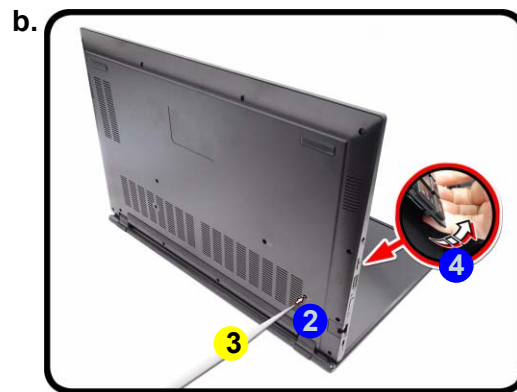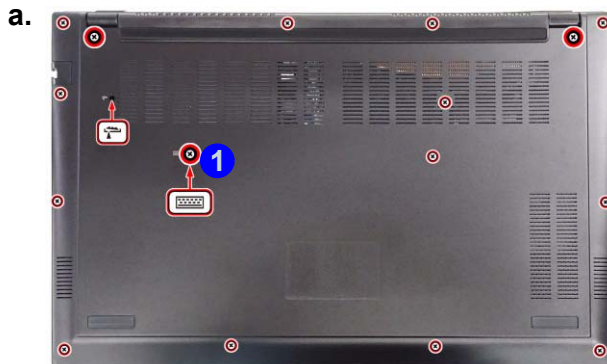

4. Eject Stick
6. Keyboard

Disassembly

Figure 4
RAM Module Removal

- The RAM modules will be visible at point ① on the mainboard.
- Pull the release latches.
- Remove the module.



Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.




4. RAM Module

Removing the System Memory (RAM)

The computer has one memory sockets for 260 pin Small Outline Dual In-line Memory Modules (SO-DIMM) supporting DDR4 3200MHz. The main memory can be expanded up to 32GB. The total memory size is automatically detected by the POST routine once you turn on your computer.

Memory Upgrade Process

- Turn **off** the computer, turn it over to remove the bottom case ([page 2 - 5](#)).
- The RAM modules will be visible at point ① on the mainboard ([Figure 4b](#)).
- Gently pull the two release latches (② & ③) on the sides of the memory socket in the direction indicated by the arrows ([Figure 4b](#)).
- The RAM module ④ will pop-up ([Figure 4c](#)), and you can then remove it.

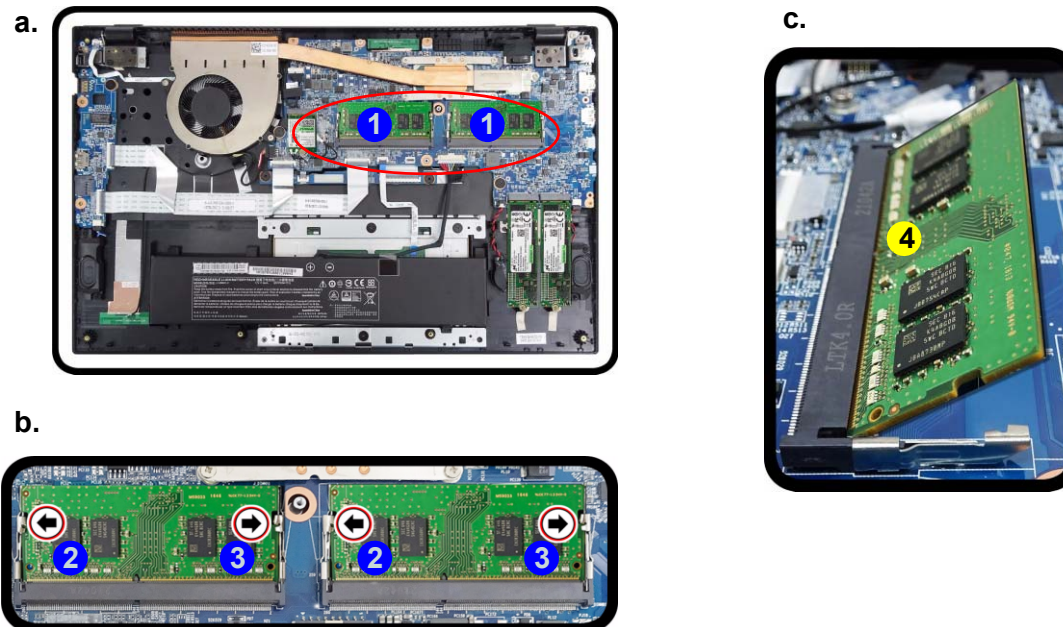

5. Pull the latches to release the second module if necessary.
6. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
7. The module will only fit one way as defined by its pin alignment. Make sure the module is seated as far into the slot as it will go. DO NOT FORCE IT; it should fit without much pressure.
8. Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
9. Replace the bottom case and the screws (see [page 2 - 5](#)).
10. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

Disassembly

Figure 5
**Wireless LAN
Module Removal**

- Locate the WLAN.
- Disconnect the cable and remove the screw.
- The WLAN module will pop up and lift it out of the computer.



Note: Make sure you reconnect the antenna cable to the “1 + 2” socket (*Figure 5b*).

5. Wireless LAN Module

- 1 Screw

Removing the Wireless LAN Module

- Turn **off** the computer, turn it over to remove the bottom case (*page 2 - 5*).
- The Wireless LAN module will be visible at point **1** on the mainboard (*Figure 5a*).
- Carefully disconnect the cables **2** & **3**, and then remove the screw **4** (*Figure 5b*).
- The Wireless LAN module **5** (*Figure 5c*) will pop-up, and you can remove it from the computer.
- Reverse the process to install a new module (do not forget to replace all the screws and bottom cover).

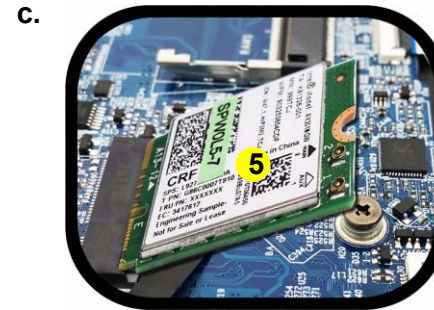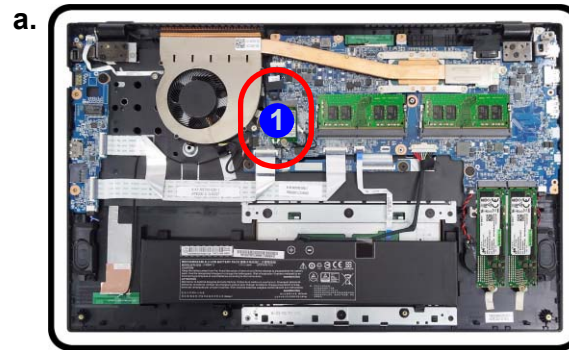

Wireless LAN, and Combo Module Cables

Note that the cables for connecting to the antennae on WLAN, WLAN & Bluetooth Combo, 3G and LTE modules are not labelled. The cables/covers (each cable will have either a black or transparent cable cover) are color coded for identification as outlined in the table below.



Module Type	Antenna Type	Cable Color	Cable Cover Type
WLAN/WLAN & Bluetooth Combo	WL 1	Black	Transparent
	WL 2	Black	White

Cable 1 is usually connected to antenna 1 (Main) on the module, and cable 2 to antenna 2 (Aux).

Disassembly

Figure 6
M.2 SSD-1 Module Removal

- Locate the M.2 SSD.
 - Remove the screw.
 - The M.2 SSD module will pop up.
- Turn **off** the computer, turn it over to remove the bottom case ([page 2 - 5](#)).
 - The M.2 SSD module will be visible at point **1** on the mainboard ([Figure 6a](#)).
 - Remove the screw **2** ([Figure 6b](#)).
 - The M.2 SSD module **3** ([Figure 6c](#)) will pop-up, and you can remove it from the computer.

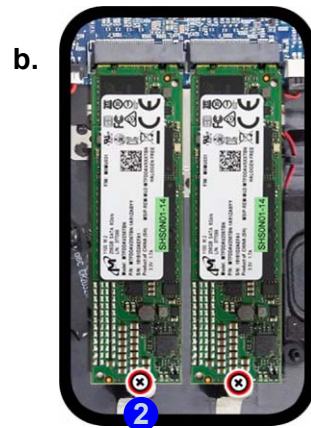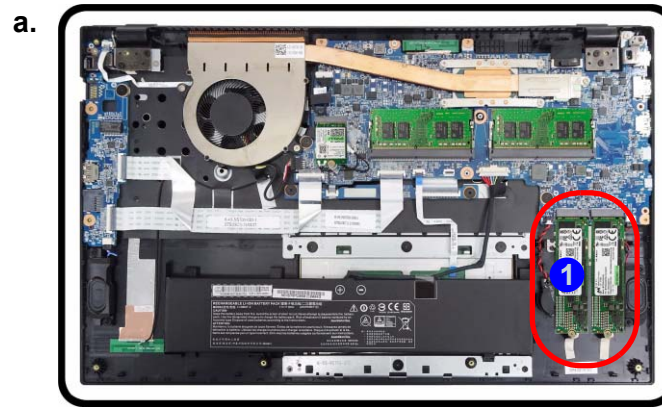



3.M.2 SATA/PCIE
Module

- 1 Screw


Thermal Pad

Make sure to place the thermal pad's adhesive side down on the mainboard's surface as illustrated.

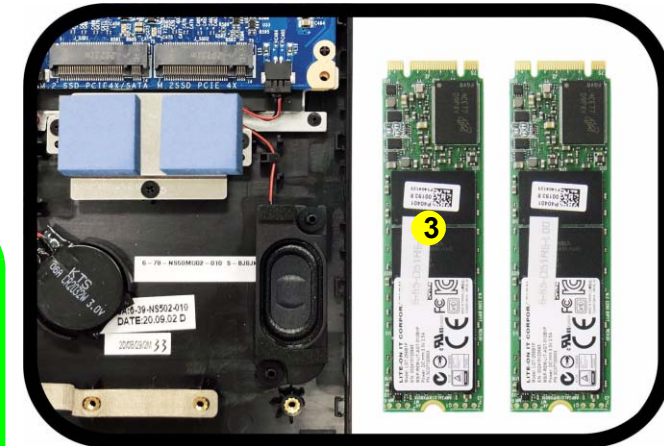

M.2 SSD-2 Removal Procedure

1. Turn **off** the computer, turn it over to remove the bottom case ([page 2 - 5](#)).
2. The M.2 SSD module will be visible at point **1** on the mainboard ([Figure 7a](#)).
3. Remove the screw **2** ([Figure 7b](#))
4. The M.2 SSD module **3** ([Figure 7c](#)) will pop-up, and you can remove it from the computer.
5. Reverse the process to install a new module (do not forget to replace the thermal pad, screws and bottom cover).

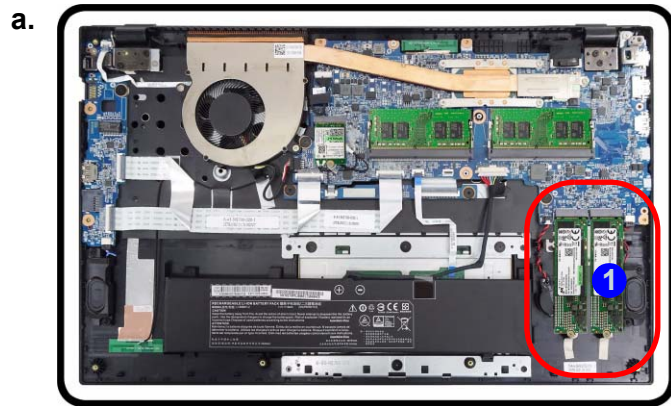

Thermal Pad

Make sure to place the thermal pad's adhesive side down on the mainboard's surface as illustrated.

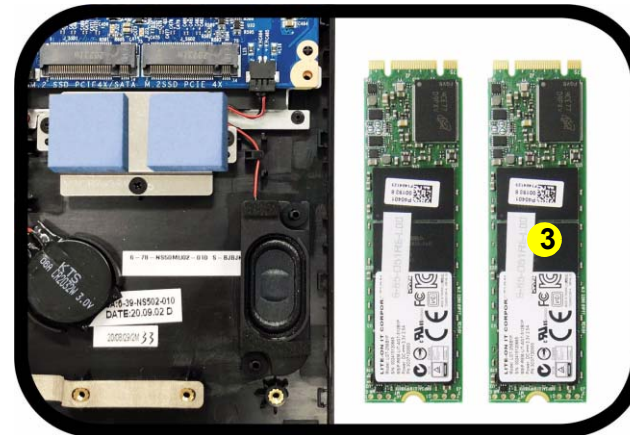


Figure 7
M.2 SSD-2 Module Removal

- a. Locate the M.2 SSD.
- b. Remove the screw.
- c. The M.2 SSD module will pop up.


3.M2 PCIE Module only

- 1 Screw

Disassembly

Figure 8
CCD Removal

- a. Carefully release the inner frame of the LCD panel at the points indicated by the arrows.
 - b. Remove the LCD front cover.
1. Turn **off** the computer, turn it over to remove the battery ([page 2 - 5](#)).
 2. Lay the computer down on a flat surface with the top case up forming a 90 degree angle.
 3. Carefully run your fingers around the inner frame of the LCD panel to lift at points **1** - **4** as indicated by the arrows ([Figure 8a](#)).
 4. Remove the LCD front cover **5** ([Figure 8b](#)).

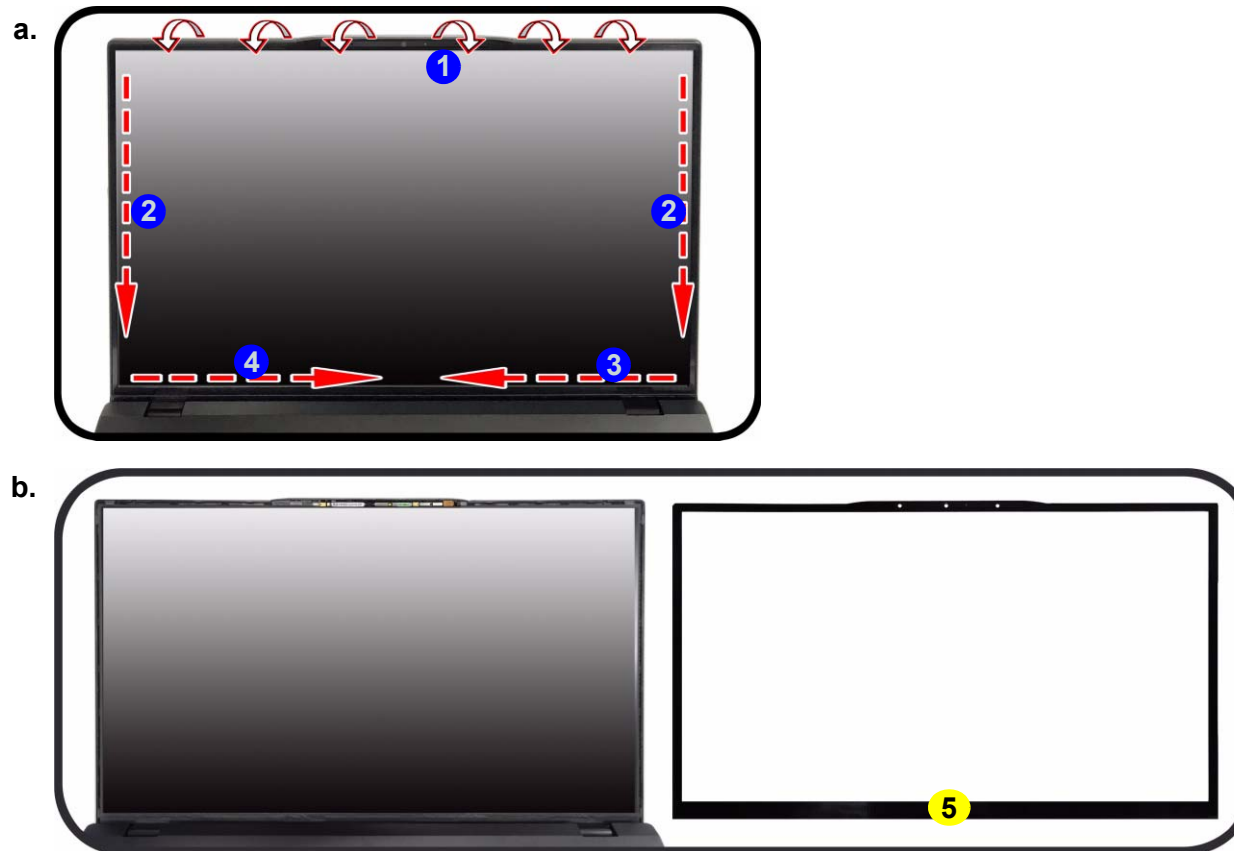

5. LCD Front Cover

5. Disconnect the cable **6** from the locking collar socket by using a flat-head screwdriver to pry the locking collar pins **7** away from the base (**Figure 9c**).
6. Remove the CCD module **8** (**Figure 9d**).
7. Reverse the process to install a new CCD module.



Figure 9
CCD Removal
(cont'd)

- c. Disconnect the cable from the locking collar socket.
- d. Remove the CCD module.



8. CCD Module

Appendix A: Part Lists

This appendix breaks down the *NS70PU/NS71PU* series notebook's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

Note: This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

Note: Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

Note: Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.


Part List Illustration Location

The following table indicates where to find the appropriate part list illustration.

Table A - 1
**Part List Illustration
Location**

Part	
Top	<i>page A - 3</i>
Bottom	<i>page A - 4</i>
LCD	<i>page A - 5</i>
MB	<i>page A - 6</i>

Top

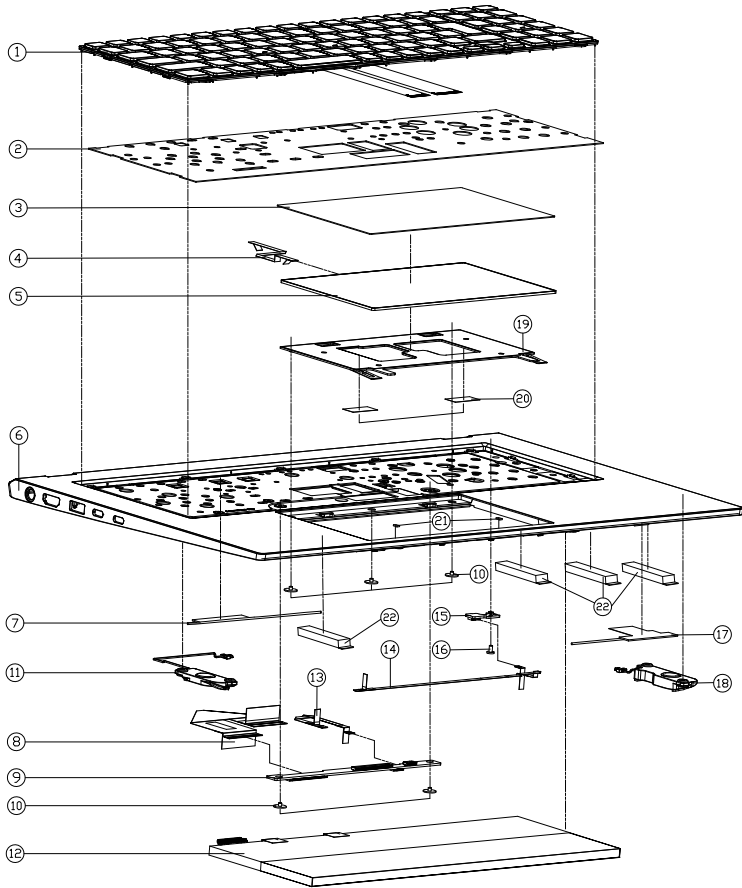


ITEM	PART NAME	PART NO	REMARK
1	KB FOR NON BL KB US SERIES NS70MU (WIN11)	6-NS70MU-KB1-NBL-US	
1	KB FOR MULTI ISC BL KB US SERIES NL50CU (WIN11)	6-NL50CU-KB1-MCL-US	
1	KB FOR NON BL KB US SERIES NS71MU (WIN11)	6-NS71MU-KB1-NBL-US	
1	KB FOR MULTI ISC BL KB US SERIES NS51MU (WIN11)	6-NS51MU-KB1-MCL-US	
1	KB JAPANESE WIN KEY COMPATIBLE NS50 BLACK WHITE SILVER LINK PINKING ISOLATION CO255MM FOR MCL	6-80-N1510-21A-1M	
1	KB JAPANESE WIN KEY COMPATIBLE NS50 BLACK WHITE SILVER LINK PINKING ISOLATION CO255MM FOR MCL	6-80-N1510-210-1M	
2	KB MYLAR W/O-BL (331.05*104.8*0.4) NS70MU	6-40-NS702-021	FOR NON BL KB SERIES
3	CLICK PAD MYLAR (AG32+SDTT-130X150.8*90.8*0.517) NS70MU	6-40-NS702-030	
3	CLICK PAD MYLAR (AG32+SDTT-130X150.8*90.8*0.517) NS71MU	6-40-NS712-010	
4	FFC CABLE W/O PP CLICK TO MB L=100MM 3V 8PIN (GX) NS50MU	6-43-NS500-010	
5	CLICK PAD FIDALTECH QIC PTP + PSE TPO FPC044PC (6717X50.9) MM NS70MU	6-49-NS703-013	
6	TOP CASE MODULE NS70MU	6-39-NS702-012	
6	TOP CASE MODULE NS71MU	6-39-NS712-010	
7	ANTENNA IPX4 WLAN VGT W/2 PCB TL 400MM 24G/5G/60GZ W/2-200MM NS70MU	6-23-7NS70-020	
8	FFC CABLE KB TO MB TRANSFORM L=122MM 26PIN NS70MU	6-43-NS700-041	
9	KB TRANSFORM BOARD V1.0 NS70MU	6-77-NS707-D01	
10	SCREW M2*2L KI BK/Z ICT NY(Ø8,T=0.6)	6-35-B6120-2RE	
11	SPK+CABLE L 42.5X55.65 45MM 2W 4T SPONGE NS50PU (Ø42.5-Ø4-Ø3H-L3)	6-23-5NSSP-0L0	
12	BMP S/LI 7.7V/95AH/73WH PSE 2X2P (ETAC/VEREN (POLYMER/CHARGES/500K/935MMH))	6-87-L140S-32B02	FOR BAT 36WH
12	BMP S/LI 7.7V/95AH/73WH PSE 2X2P (ETAC/VEREN (POLYMER/CHARGES/500K/935MMH))	6-87-NS70S-72B00	FOR BAT 73WH
13	FFC CABLE KB TO MB TRANSFORM L=85MM 8PIN NS70MU	6-43-NS700-051	
14	FFC CABLE LID TO MB L=190MM 3V 6PIN NS70MU	6-43-NS700-011	
15	HALL SENSOR BOARD V3.0 NS50MU	6-77-NS501-D03	
16	SCREW M2*4L KI NI ICT NY (ØD=Ø4.5,DT=0.8)	6-35-B1120-4RC	
17	ANTENNA IPX4 WLAN VGT W/2 PCB TL 400MM 24G/5G/60GZ W/1-200MM NS70MU	6-23-7NS70-010	
18	SPK+CABLE R 52.5X46.9 155MM 2W 4T SPONGE NS50PU (Ø42.5-Ø4-Ø3H-L3)	6-23-5NSSP-0R0	
19	CLICK PAD BKT SGCC NS70MU	6-33-NS702-080	
20	TOP CASE GASKET 1 (20*10*0.15) P650SE	6-47-00190-209	
21	SPONGE SM55(8.5*4.5*1.65) NS70MU	6-47-NS702-030	
22	LALATAPE+SPONGE+(SDK W-5) (57*8*4.8T)	6-47-0019L-019	

Figure A - 1
Top


Bottom

Figure A - 2
Bottom

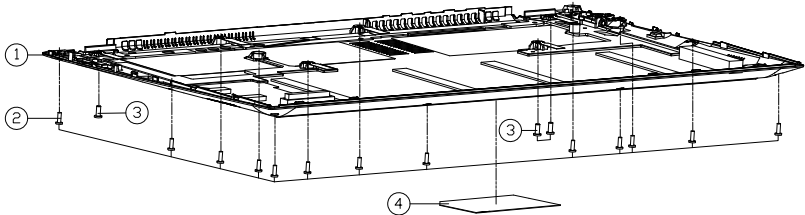

ITEM	PART NAME	PART NO	REMARK
1	BOTTOM CASE MODULE NS70MU	6-39-NS703-012	
2	SCREW M2*6L K1T-0.8 D=4.0 BK/Z ICT NY	6-35-B6120-6R0	
3	SCREW M2.5*6L K BZ ICT NY	6-35-82125-6RA	
4	PRODUCT LABEL FOR NS70MU	6-45-NS70MU03-010	
4	PRODUCT LABEL FOR NS71MU	6-45-NS71MU03-010	
4	PRODUCT LABEL FOR NS70PU	6-45-NS70PU03-010	
4	PRODUCT LABEL FOR NS71PU	6-45-NS71PU03-010	


LCD

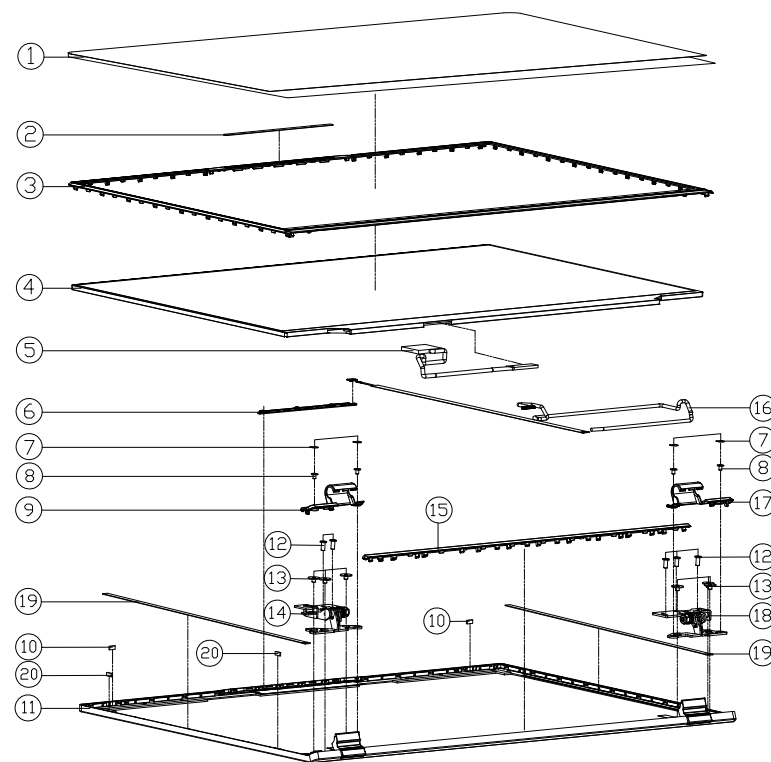

ITEM	PART NAME	PART NO	REMARK
1	LCD PROTECT MYLAR BOPP (410x255) NS70MU	6-40-NS701-020	
2	CCD LENS W/ IR NS50MU	6-42-NS501-050	
2	CCD LENS W/O IR NS50MU	6-42-NS501-060	
3	FRONT COVER MODULE NS70MU	6-39-NS701-013	
4	LCD N17.3" FHD/VVA/W4/NON G1/EDP AU B173HAN04.8 LED 35MM	6-50-NBB35-G010	
4	LCD N17.3" FHD/VVA/W4/NON G1/EDP BDE NV173FHM-N49 LED 35MM	6-50-NBB35-Z010	
4	LCD N17.3" FHD/VVA/W4/NON G1/EDP AU B173HAN04.2 (H/V4W4/30) LED 35MM	6-50-NBB35-G020	
5	WIRE CABLE FOR EDP 55MM ID 2W 3P TO 3P CM (03-H0350 IL CONDUIT-010 055000) NS70MU	6-43-NS701-011-C	
6	INC CAMERA CORD (TWO) COAXIAL (200000000) IN 10 VHS-PC 20465 DUNN NS70MU WHITE-LED	6-88-NS50C-5110	OPTION
6	INC CAMERA CORD (TWO) COAXIAL (200000000) IN 10 VHS-PC 20465 DUNN NS70MU WHITE-LED	6-88-NS50C-5102	OPTION
7	MYLAR SCREW COVER FOR NS50MU	6-40-NS501-051	
8	SCREW M2*3L KI BZ ICT NY (DD=0.45,DT=0.4)	6-35-B6120-3RD	
9	HINGE CAP-L PC+ABS (COVESTRO FR3040) NS70MU	6-42-NS701-053	
10	RUBBER (5*2.4*0.5T) GRAY NS50MU	6-47-NS501-031	
11	BACK COVER MODULE NS70MU	6-39-NS701-023	
11	BACK COVER MODULE NS71MU	6-39-NS711-021	
12	SCREW M2.5*6L K BZ ICT NY	6-35-82125-6RA	
13	SCREW M2.5*2.5L KI BK/Z ICT NY(0.8,T=0.6)	6-35-B6125-2R5	
14	HINGE L SK7 NS70MU	6-33-NS701-0L0	
15	HINGE COVER MODULE NS70MU	6-42-NS701-102	
16	WIRE+PC CABLE FOR CCD 55MM 12P TO 16P 3.3V CM (03-H0360 NS70PU	6-43-NS7PT-010	FOR W/ IR
16	WIRE+PC CABLE FOR CCD 55MM 12P TO 16P 3.3V CM (03-H0350 NS70MU	6-43-NS70T-011	FOR W/O IR
17	HINGE CAP-R PC+ABS (COVESTRO FR3040) NS70MU	6-42-NS701-063	
18	HINGE R SK7 NS70MU	6-33-NS701-0R0	
19	LALATAPE+MYLAR (220*4.5*0.35T)	6-47-0019L-014	
20	RUBBER (5*2.4*0.5T) WHITE NS70MU	6-47-NS701-010	

Figure A - 3
LCD

Figure A - 4
MB

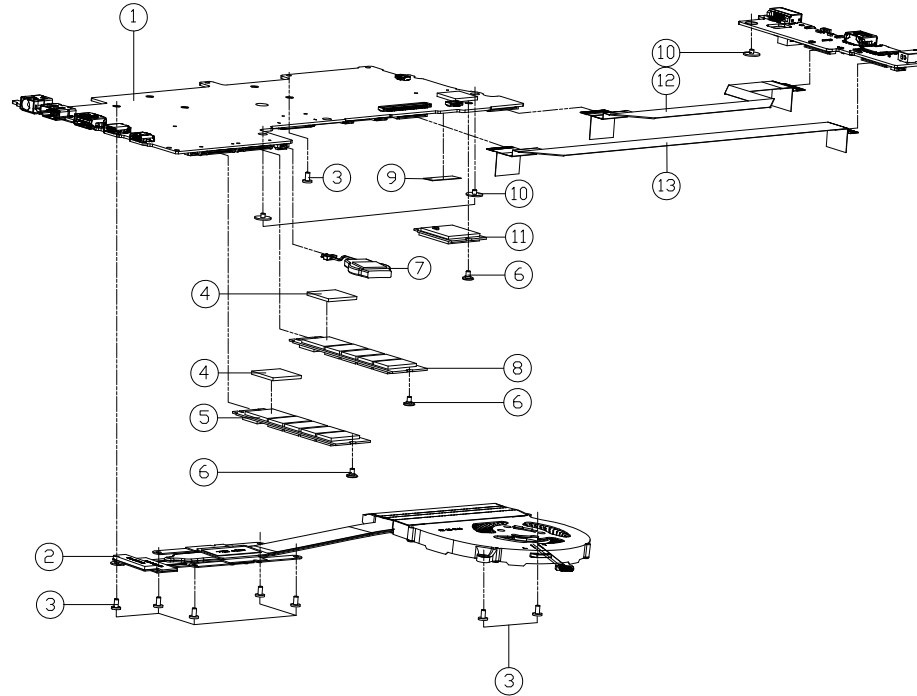[illegible]

Appendix B: Schematic Diagrams

This appendix has circuit diagrams of the *NS70PU / NS71PU* notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

Diagram - Page	Diagram - Page	Diagram - Page
<i>System Block Diagram - Page B - 2</i>	<i>Audio Codec - Page B - 19</i>	<i>2.5V, VCCST, VCCSTG - Page B - 36</i>
<i>Processor 1/13 - Page B - 3</i>	<i>M.2 PCIE Gen4 SSD - Page B - 20</i>	<i>MP2964 Controller - Page B - 37</i>
<i>Processor 2/13 - Page B - 4</i>	<i>M.2 SSD - Page B - 21</i>	<i>VCore - Page B - 38</i>
<i>Processor 3/13 - Page B - 5</i>	<i>USB Port - Page B - 22</i>	<i>VCCGT - Page B - 39</i>
<i>Processor 4/13 - Page B - 6</i>	<i>Panel - Page B - 23</i>	<i>VCCIN AUX - Page B - 40</i>
<i>Processor 5/13 - Page B - 7</i>	<i>IT5570 - Page B - 24</i>	<i>3.3V, 5V, 3VS, 5VS, CTL - Page B - 41</i>
<i>Processor 6/13 - Page B - 8</i>	<i>RGB KB, LID Conn - Page B - 25</i>	<i>Charger - Page B - 42</i>
<i>Processor 7/13 - Page B - 9</i>	<i>WLAN/BT - Page B - 26</i>	<i>Option BOM - Page B - 43</i>
<i>Processor 8/13 - Page B - 10</i>	<i>CCD - Page B - 27</i>	<i>AC_In - Page B - 44</i>
<i>Processor 9/13 - Page B - 11</i>	<i>Type-C USB - Page B - 28</i>	<i>Multi Board - USB, LED - Page B - 45</i>
<i>Processor 10/13 - Page B - 12</i>	<i>Retimer 1/2 - Page B - 29</i>	<i>Multi Board - RTL8111H RTD3 - Page B - 46</i>
<i>Processor 11/13 - Page B - 13</i>	<i>Retimer 2/2 - Page B - 30</i>	<i>Audio Board - Page B - 47</i>
<i>Processor 12/13 - Page B - 14</i>	<i>Type-C - Page B - 31</i>	<i>OZ711LV2 - Page B - 48</i>
<i>Processor 13/13 - Page B - 15</i>	<i>Fan, TP - Page B - 32</i>	<i>Hall Sensor Board - Page B - 49</i>
<i>DDR4 SO-DIMM A - Page B - 16</i>	<i>VDD3, VDD5 - Page B - 33</i>	<i>Power Sequence - Page B - 50</i>
<i>DDR4 SO-DIMM B - Page B - 17</i>	<i>VDDQ, VDDQ_VTT, 1.8VA - Page B - 34</i>	
<i>HDMI - Page B - 18</i>	<i>3.3VA, 1.8VS - Page B - 35</i>	


Table B - 1
**SCHEMATIC
DIAGRAMS**




Version Note

The schematic diagrams in this chapter are based upon version 6-7P-NS5P3-003. If your mainboard (or other boards) are a later version, please check with the Service Center for updated diagrams (if required).

Sheet 1 of 49
System Block
Diagram

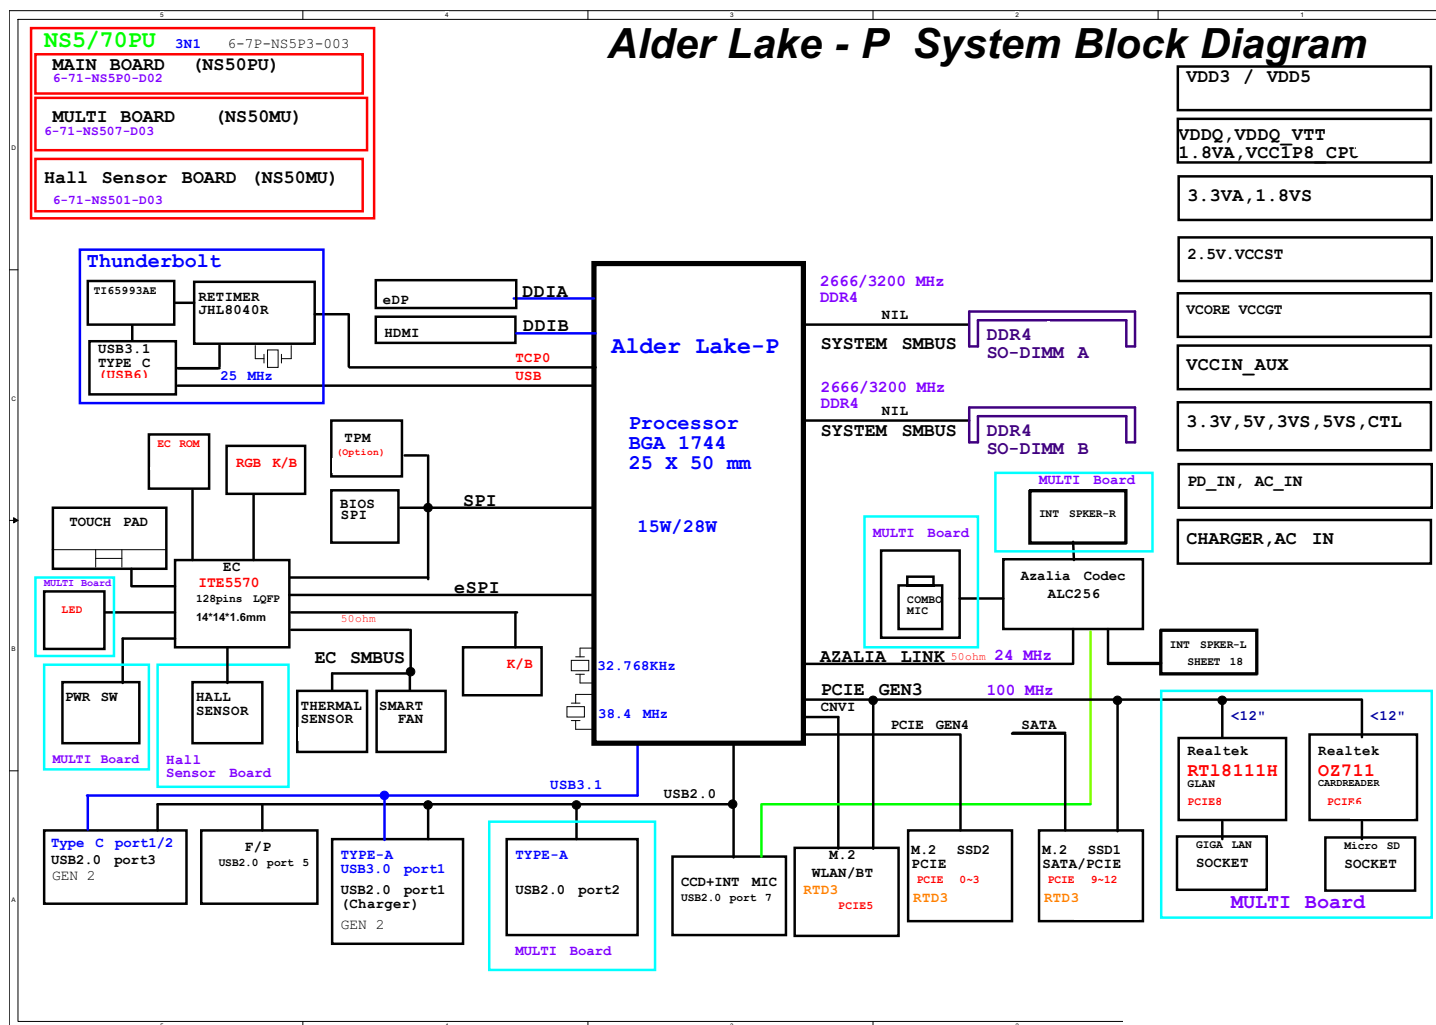


Processor 1/13

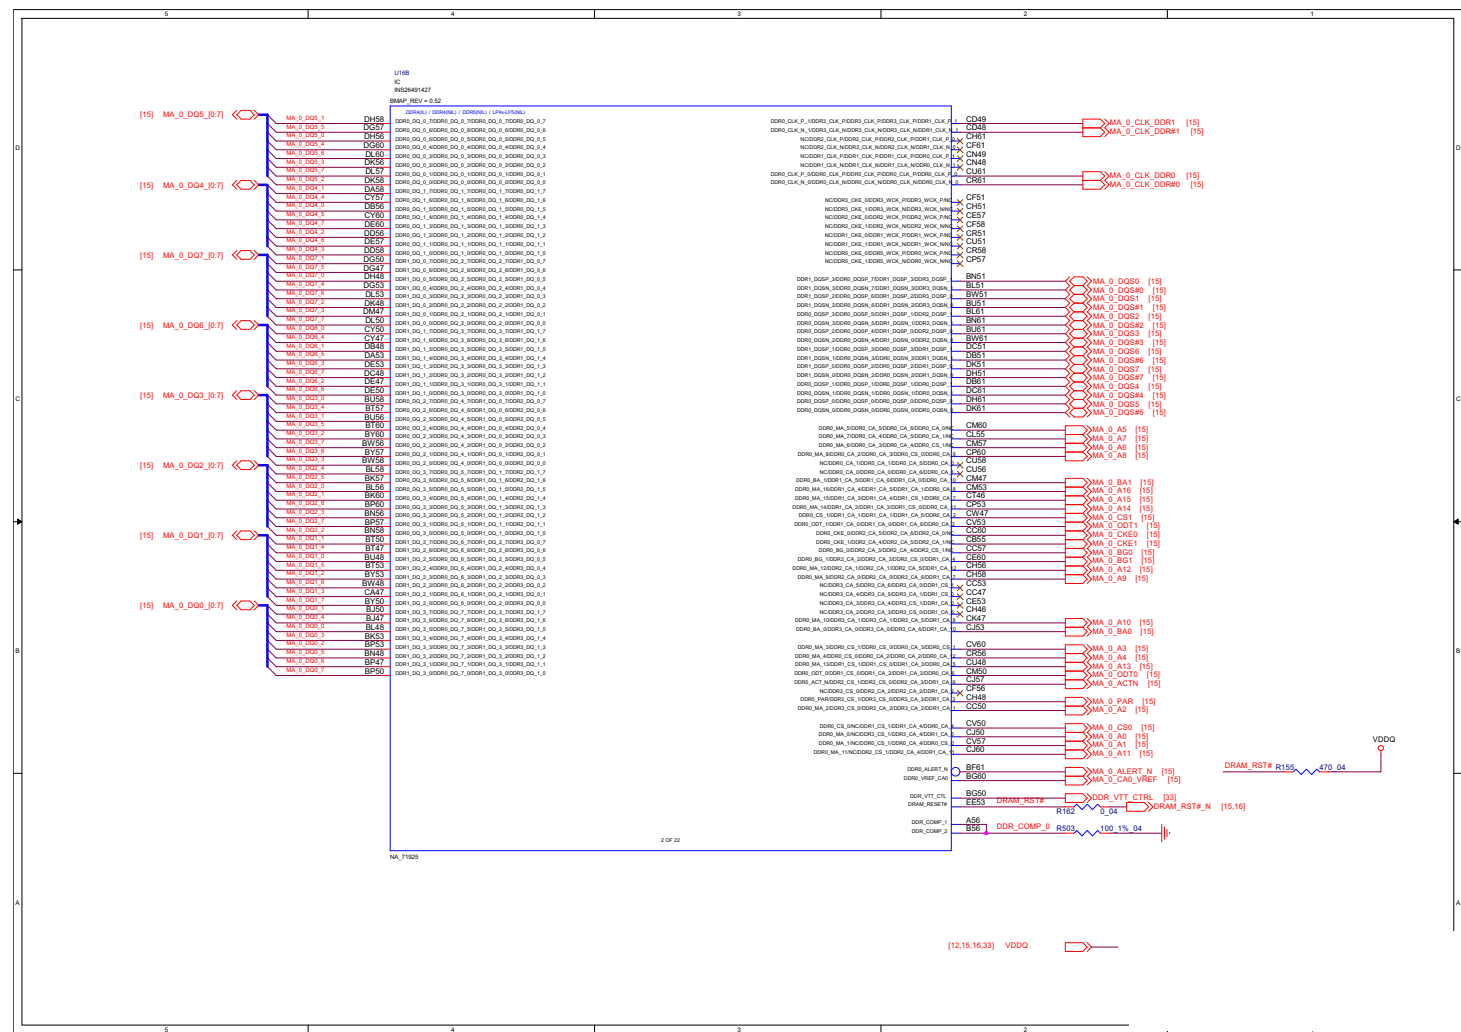


Sheet 2 of 49
Processor 1/13

B.Schematic Diagrams

Processor 2/13

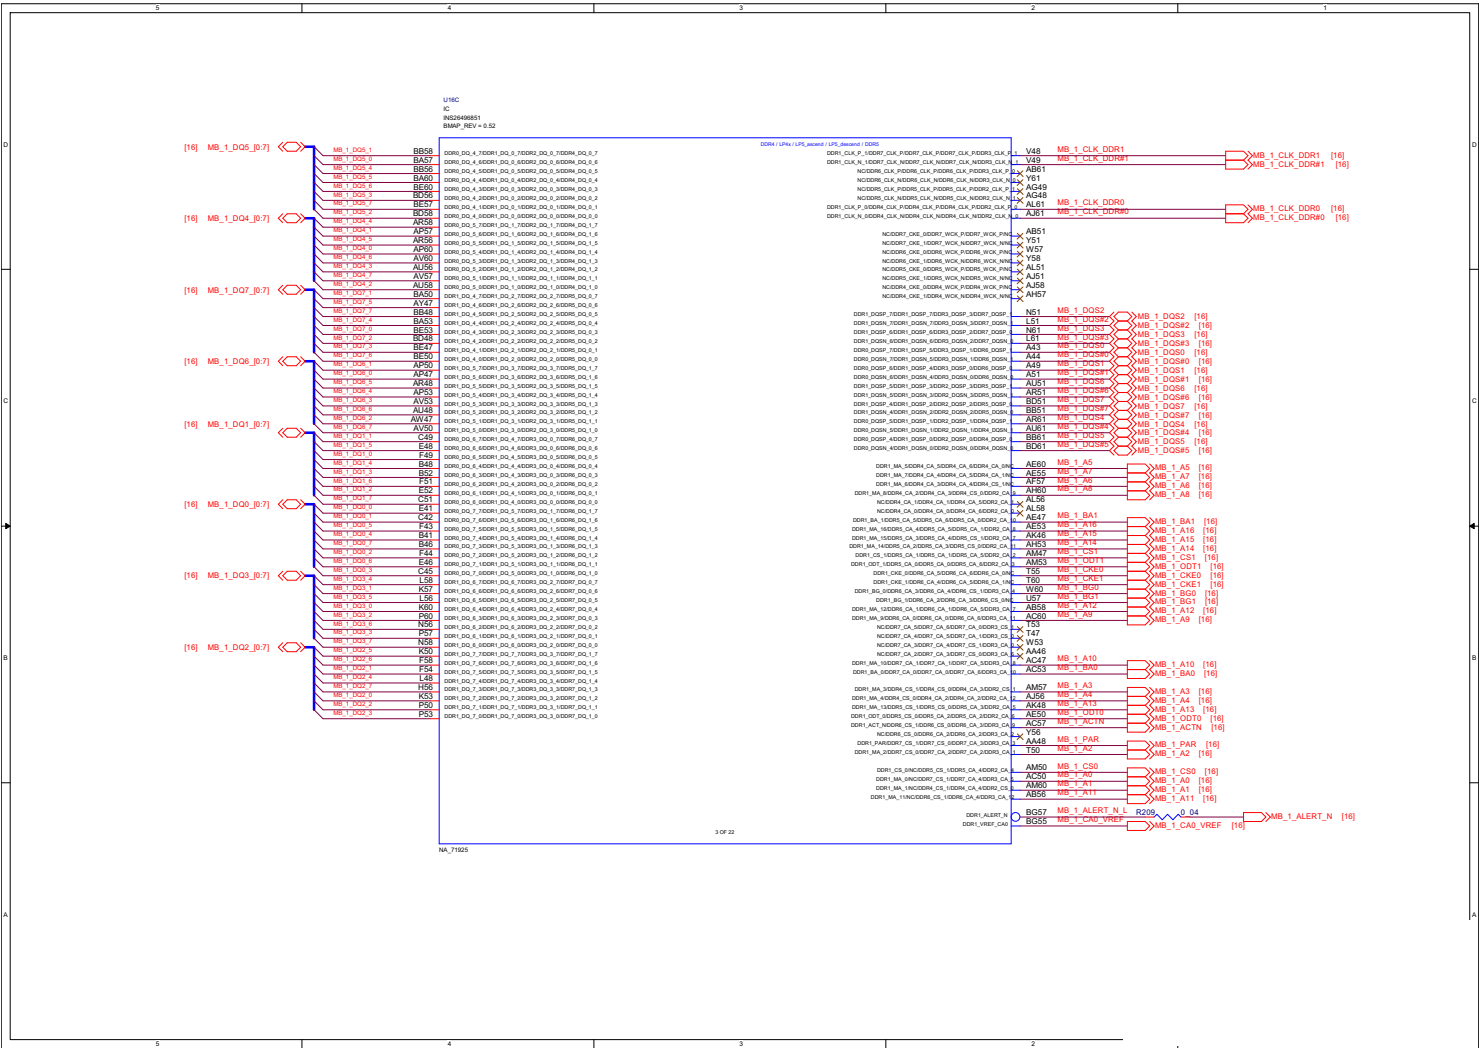

Processor 3/13

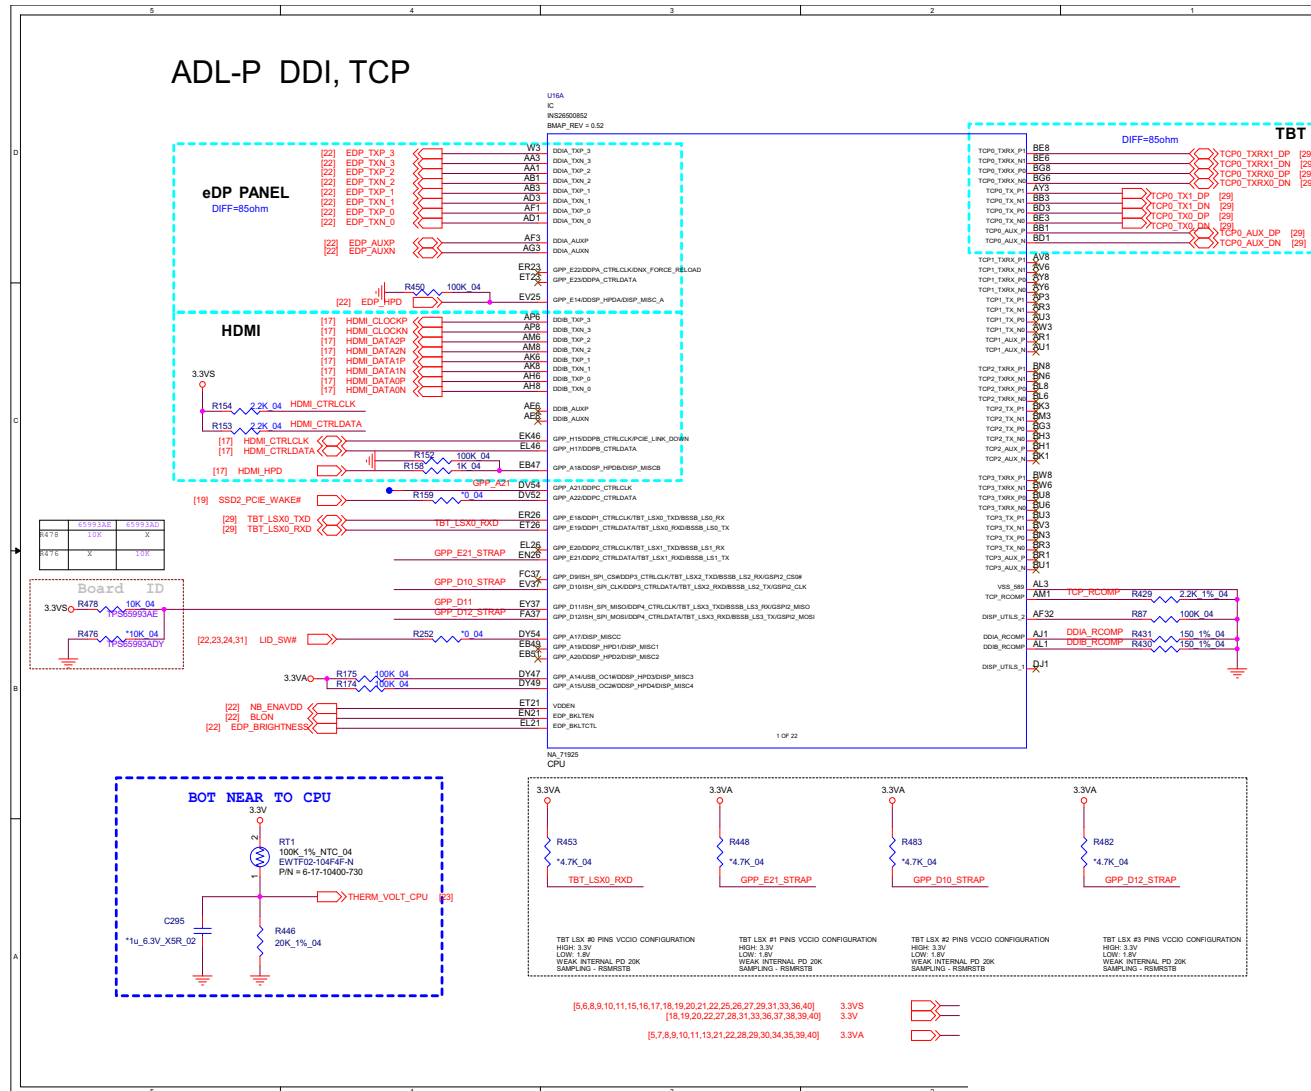


Sheet 4 of 49
Processor 3/13

B.Schematic Diagrams


Processor 4/13

B. Schematic Diagrams


Sheet 5 of 49
Processor 4/13

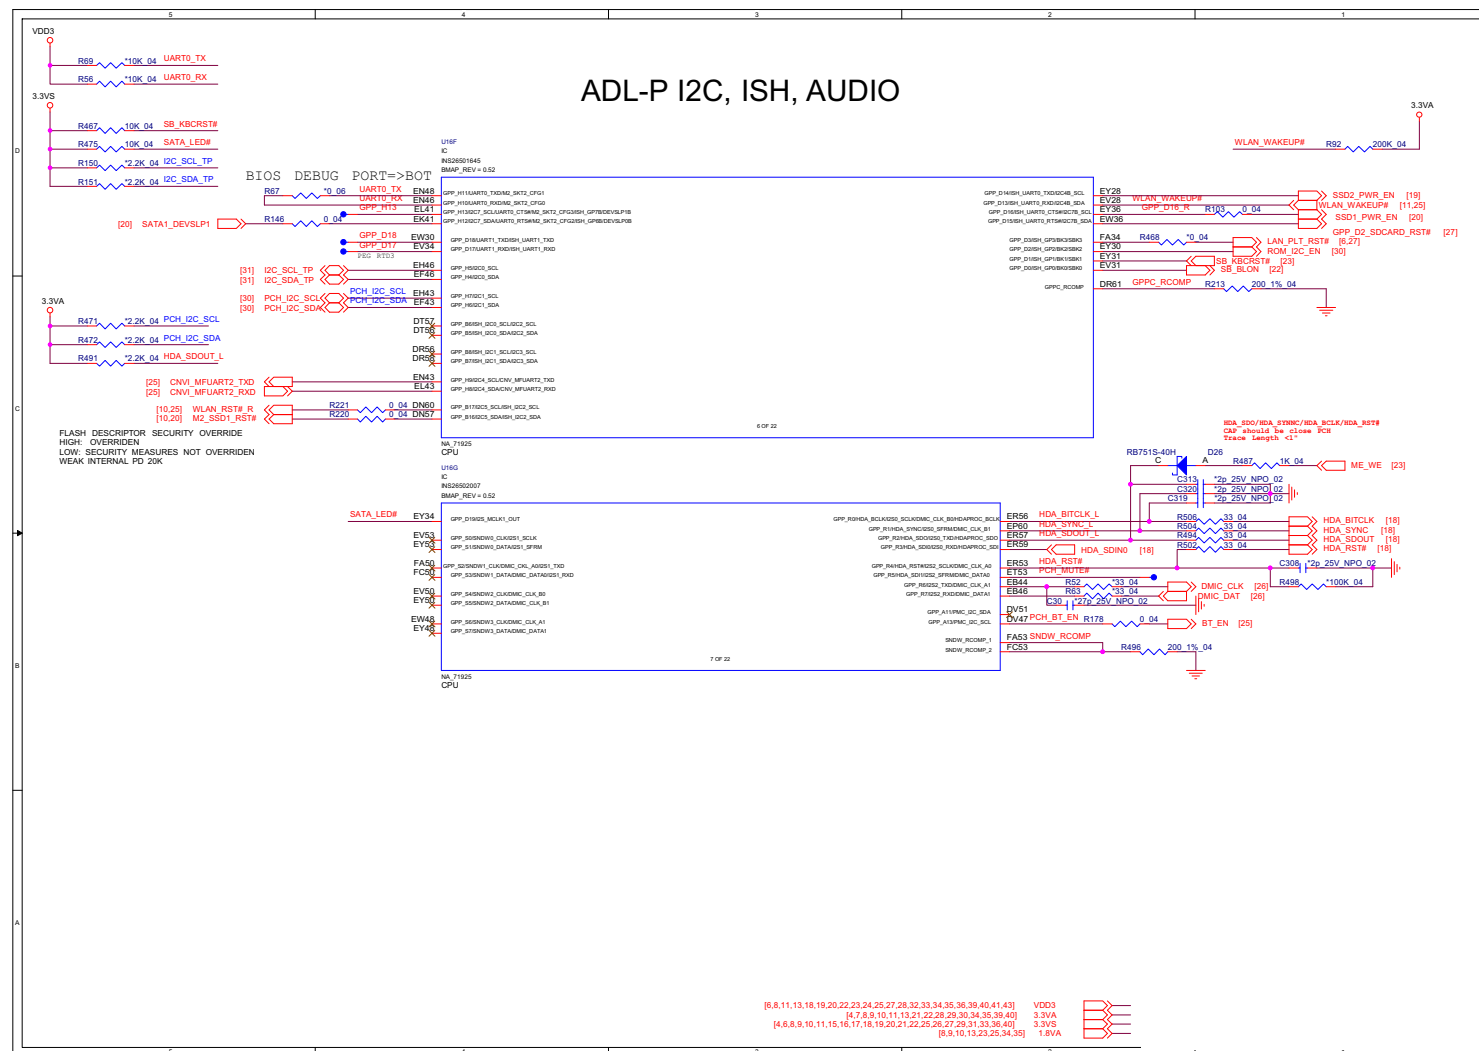


B.Schematic Diagrams



Processor 6/13

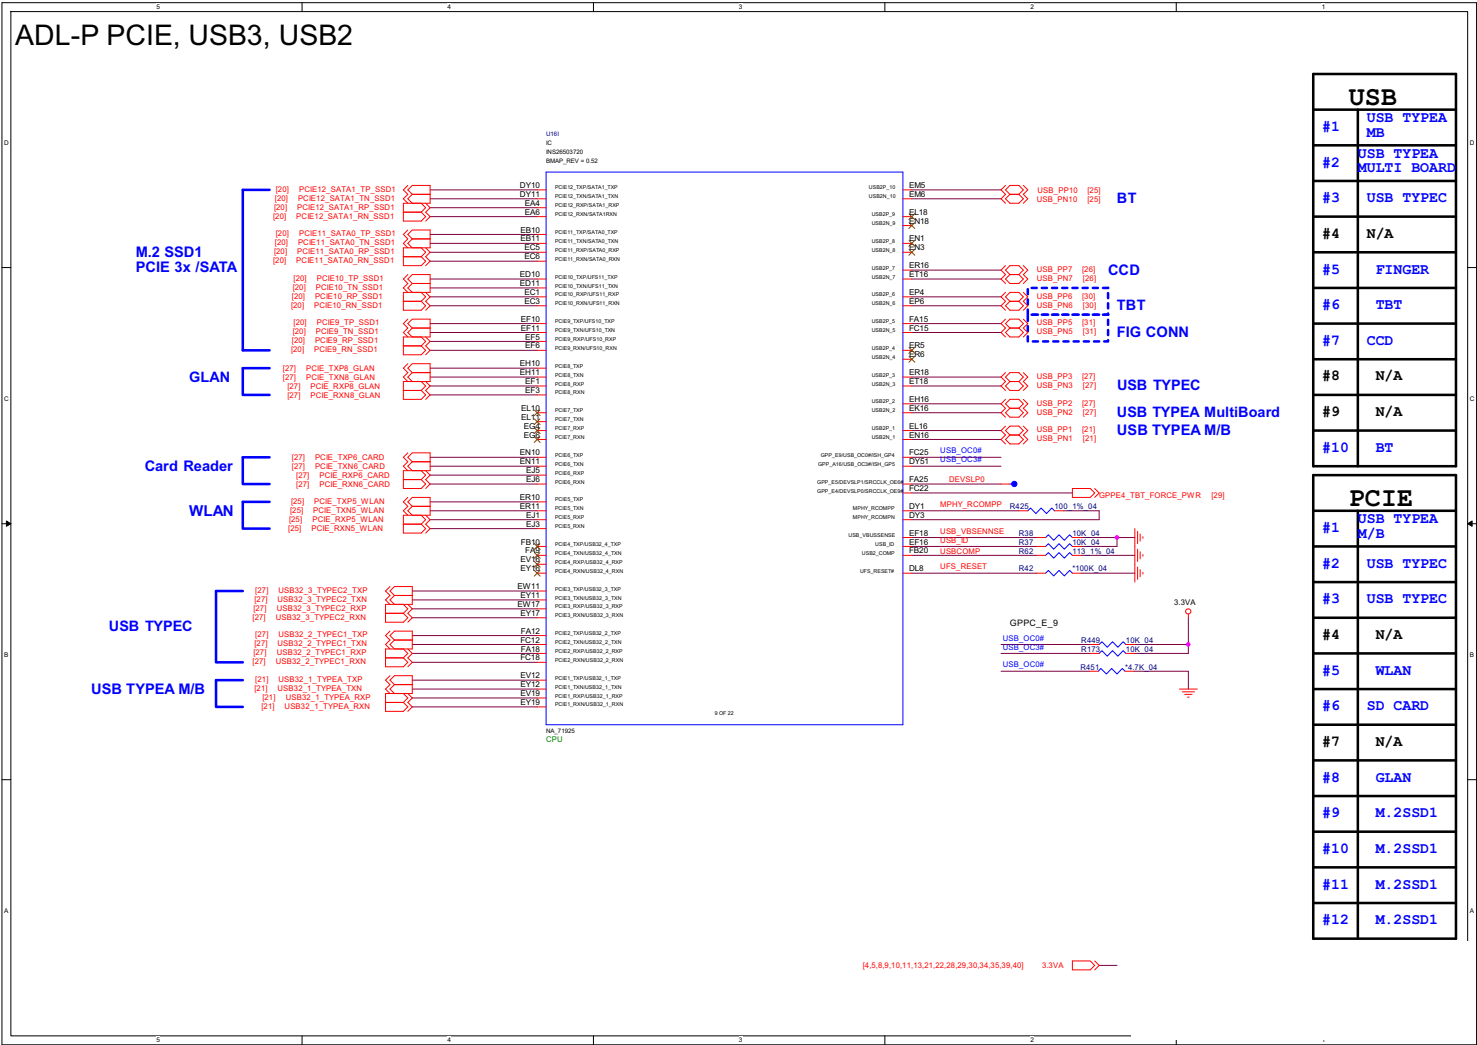


Processor 7/13 B - 9

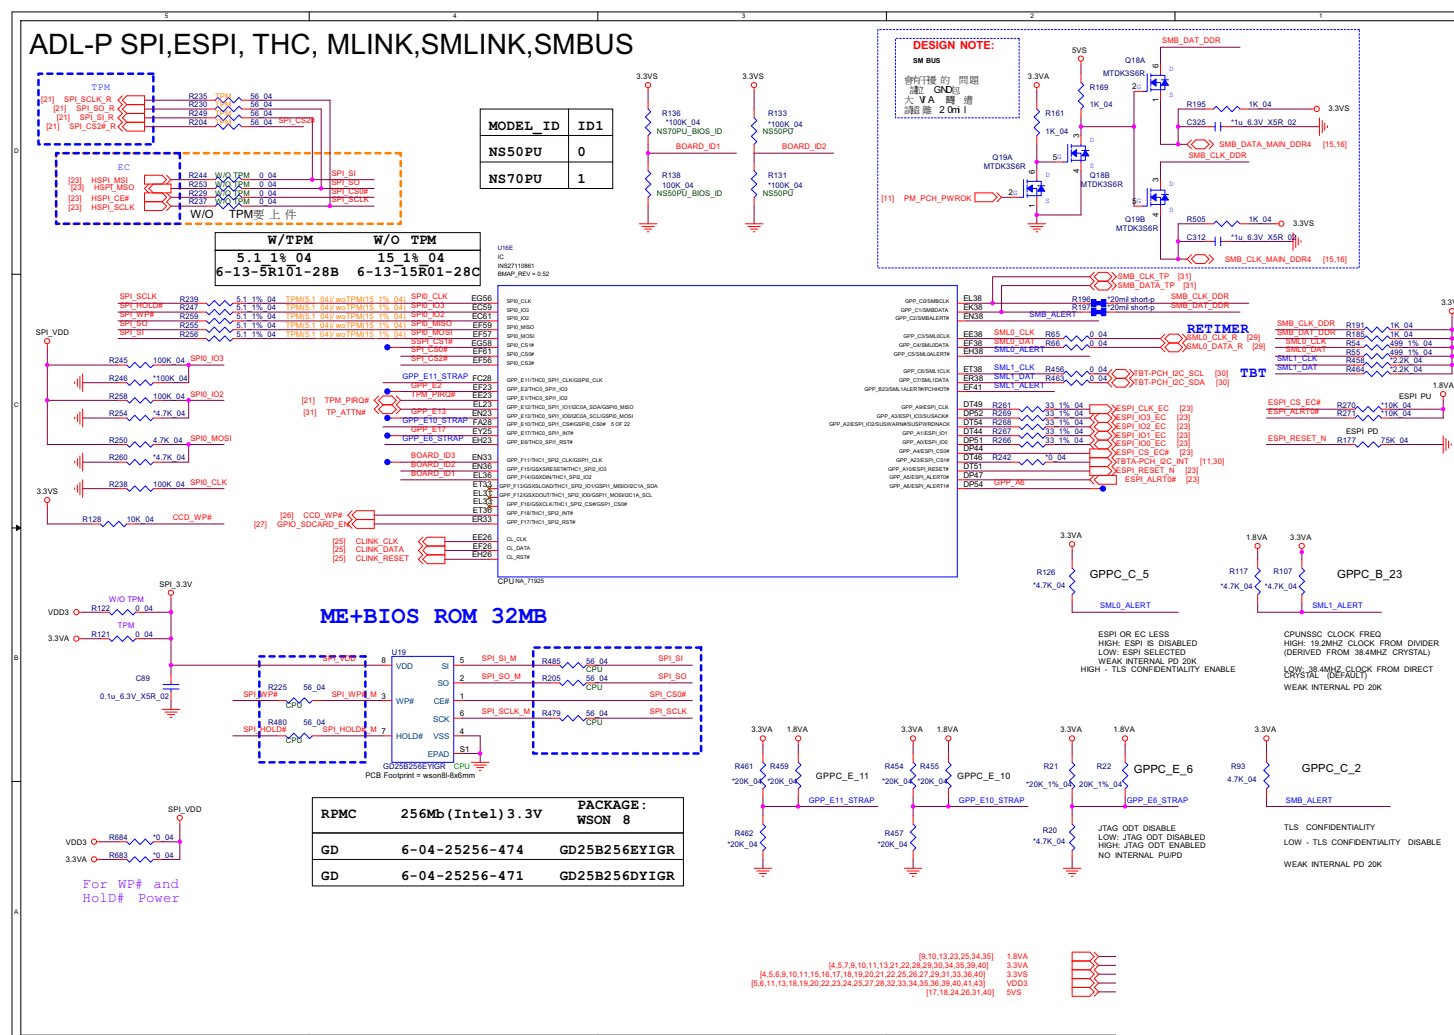


Schematic Diagrams

Processor 8/13

Sheet 9 of 49
Processor 8/13

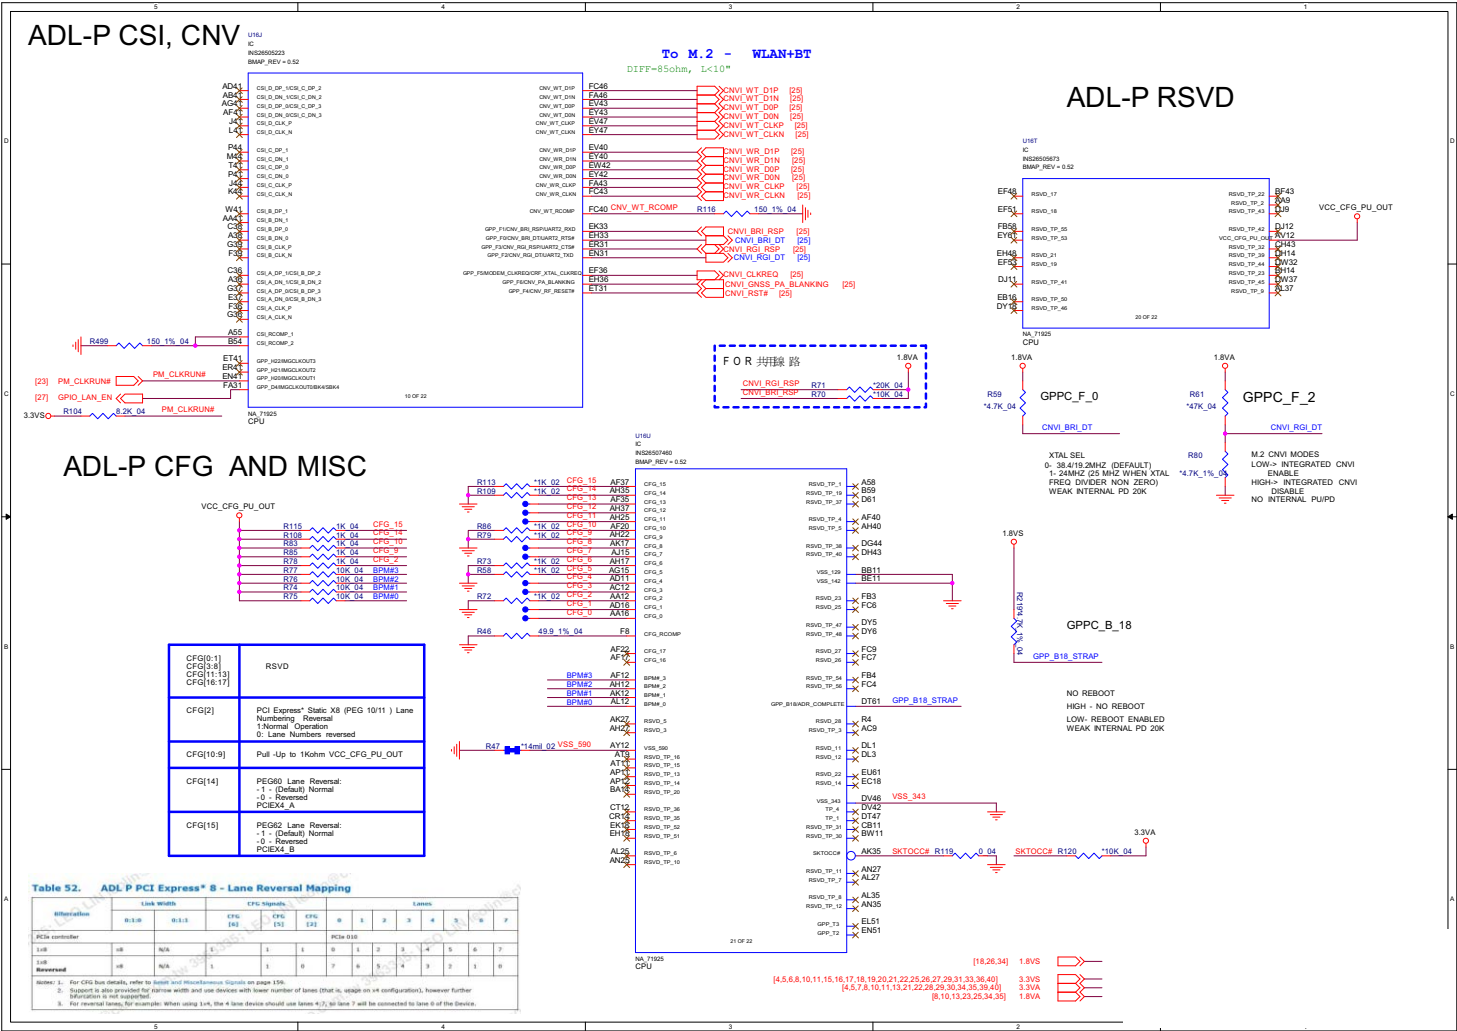


Processor 9/13

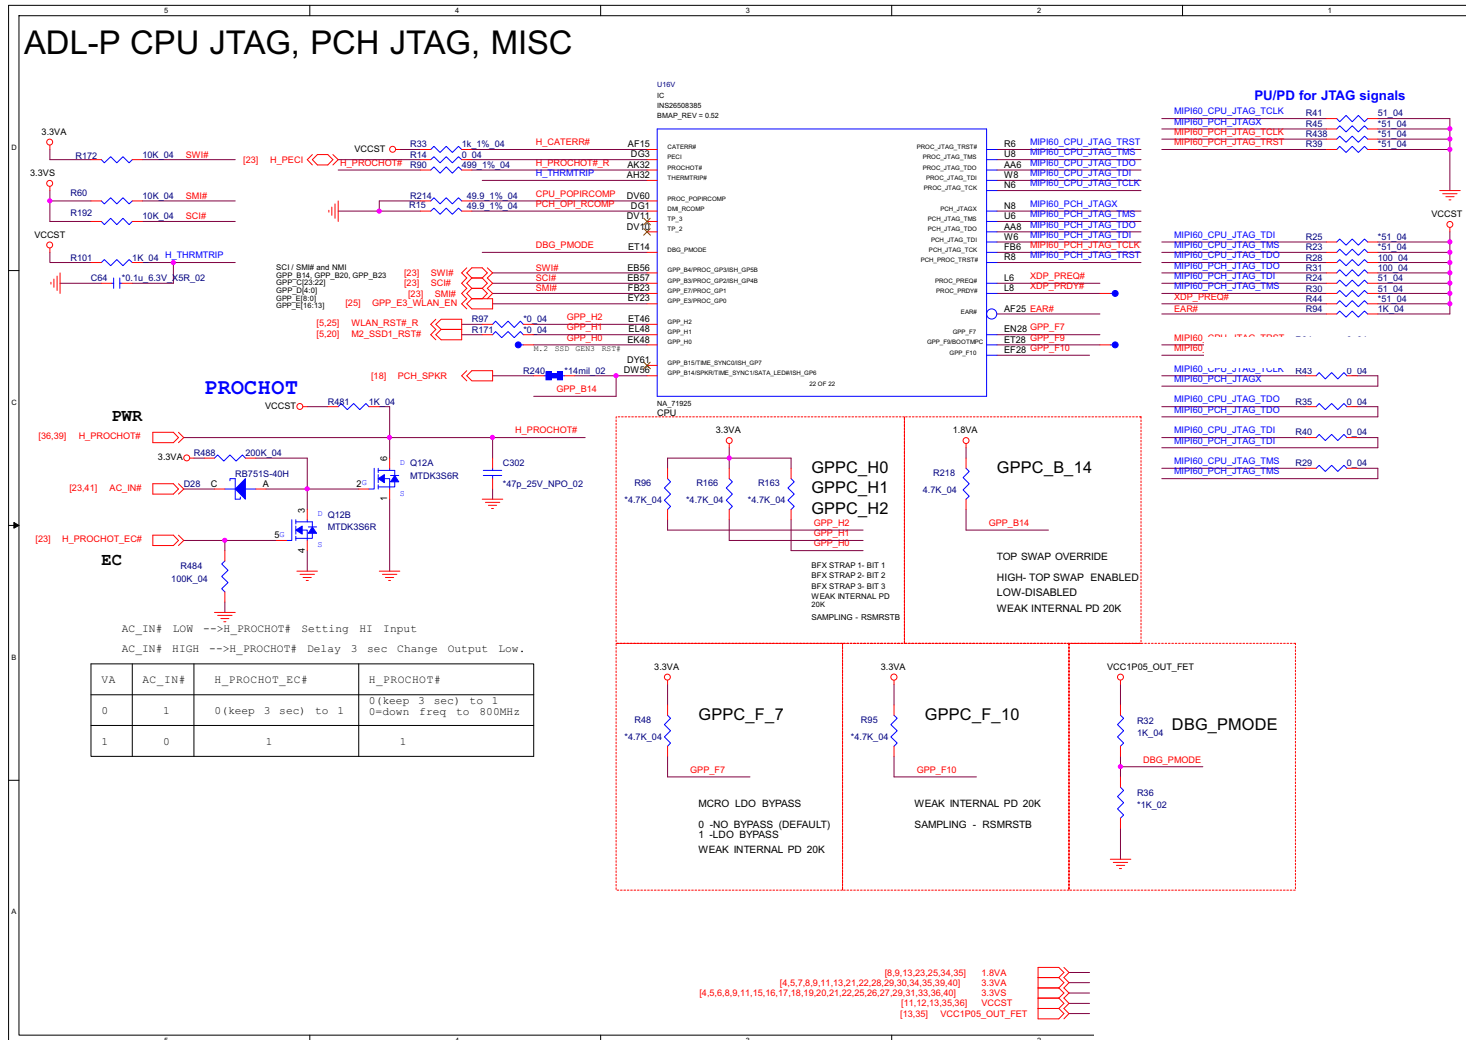
Sheet 10 of 49
Processor 9/13

Processor 10/13


Sheet 11 of 49
Processor 10/13

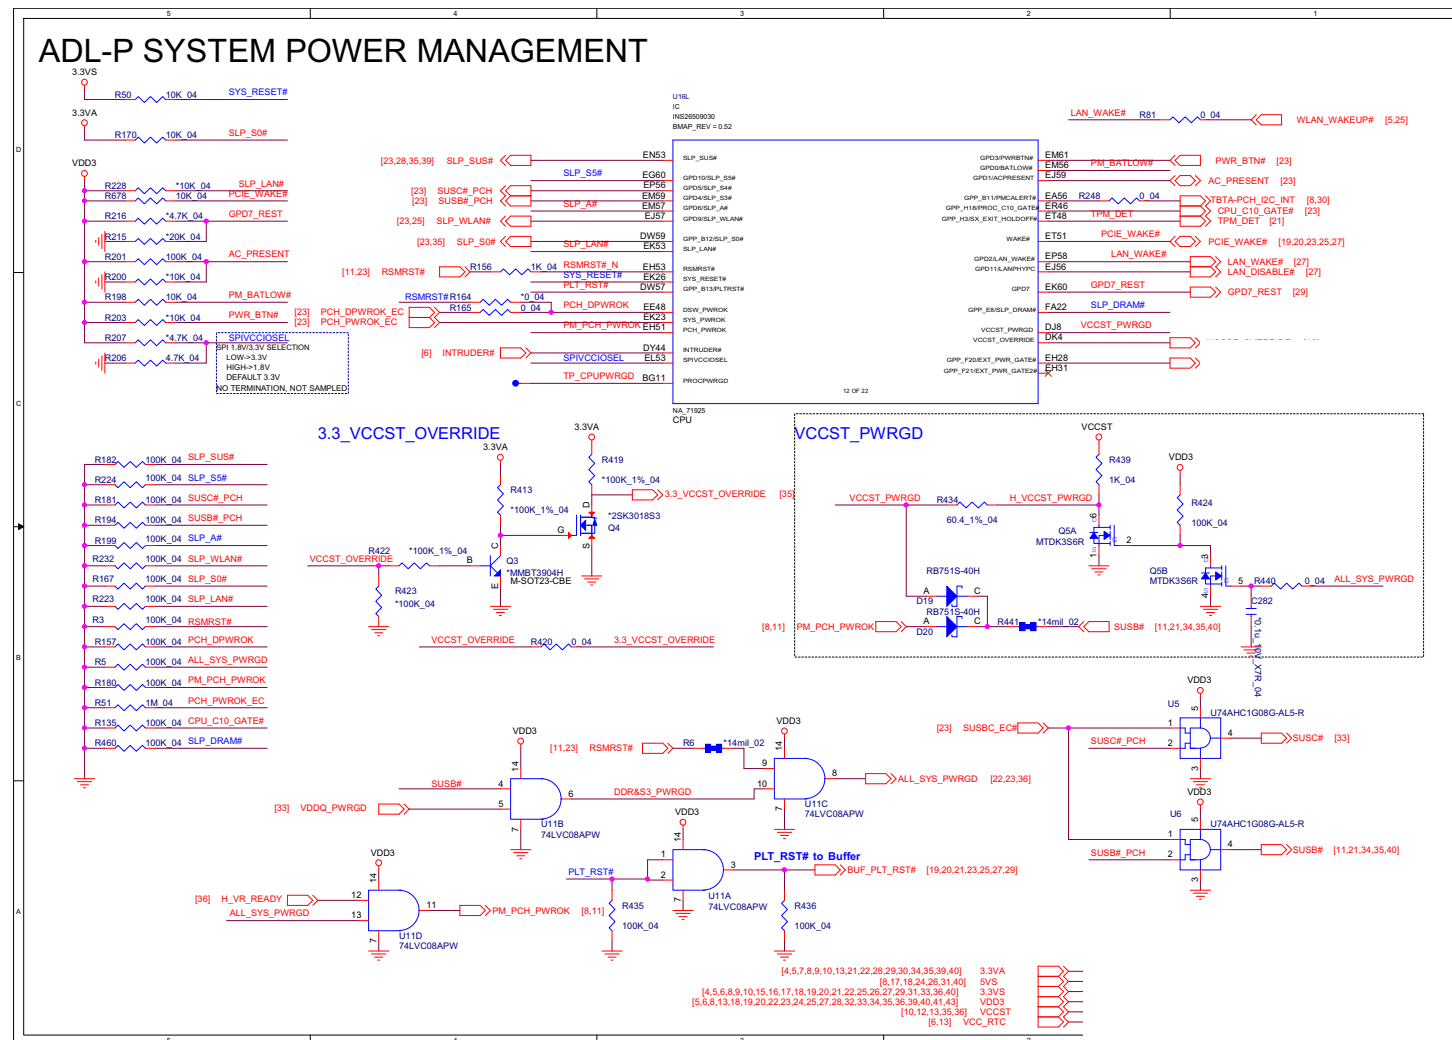

Processor 11/13

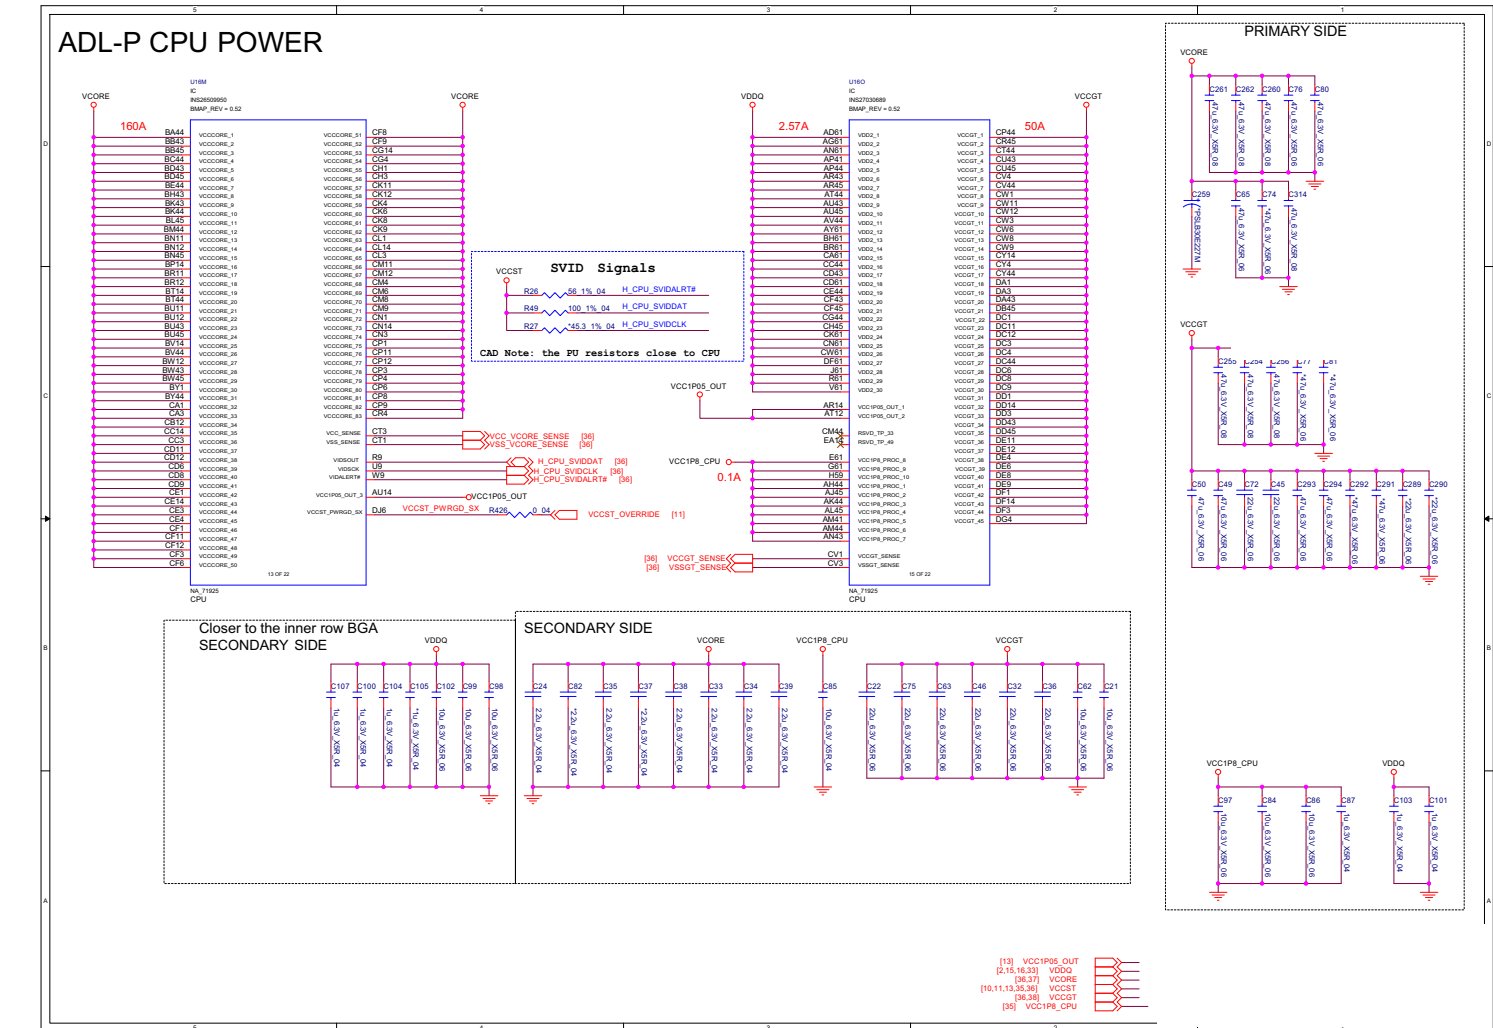

Processor 12/13

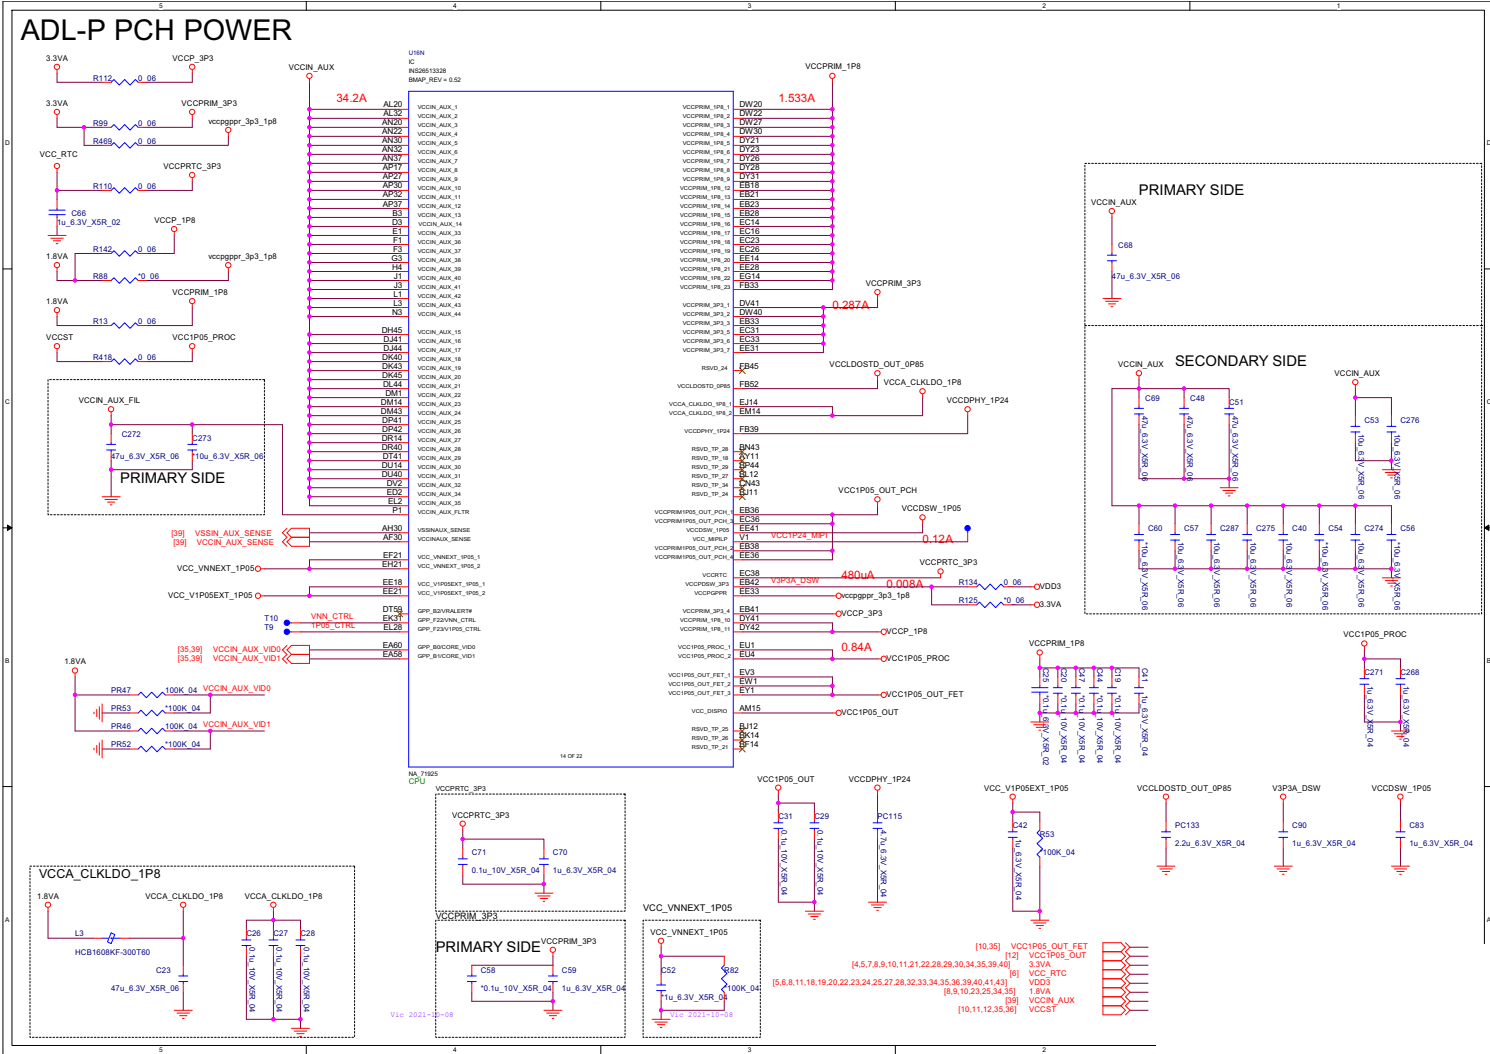

Processor 13/13 B - 15




DDR4 SO-DIMM A

B.Schematic Diagrams

SO-DIMM RAM1


PLACEMENT AND CONNECTION NOTES:

- PLACE CLOSE TO PIN:** Indicated for pins 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300, 301, 302, 303, 304, 305, 306, 307, 308, 309, 310, 311, 312, 313, 314, 315, 316, 317, 318, 319, 320, 321, 322, 323, 324, 325, 326, 327, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 338, 339, 340, 341, 342, 343, 344, 345, 346, 347, 348, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360, 361, 362, 363, 364, 365, 366, 367, 368, 369, 370, 371, 372, 373, 374, 375, 376, 377, 378, 379, 380, 381, 382, 383, 384, 385, 386, 387, 388, 389, 390, 391, 392, 393, 394, 395, 396, 397, 398, 399, 400, 401, 402, 403, 404, 405, 406, 407, 408, 409, 410, 411, 412, 413, 414, 415, 416, 417, 418, 419, 420, 421, 422, 423, 424, 425, 426, 427, 428, 429, 430, 431, 432, 433, 434, 435, 436, 437, 438, 439, 440, 441, 442, 443, 444, 445, 446, 447, 448, 449, 450, 451, 452, 453, 454, 455, 456, 457, 458, 459, 460, 461, 462, 463, 464, 465, 466, 467, 468, 469, 470, 471, 472, 473, 474, 475, 476, 477, 478, 479, 480, 481, 482, 483, 484, 485, 486, 487, 488, 489, 490, 491, 492, 493, 494, 495, 496, 497, 498, 499, 500, 501, 502, 503, 504, 505, 506, 507, 508, 509, 510, 511, 512, 513, 514, 515, 516, 517, 518, 519, 520, 521, 522, 523, 524, 525, 526, 527, 528, 529, 530, 531, 532, 533, 534, 535, 536, 537, 538, 539, 540, 541, 542, 543, 544, 545, 546, 547, 548, 549, 550, 551, 552, 553, 554, 555, 556, 557, 558, 559, 560, 561, 562, 563, 564, 565, 566, 567, 568, 569, 570, 571, 572, 573, 574, 575, 576, 577, 578, 579, 580, 581, 582, 583, 584, 585, 586, 587, 588, 589, 590, 591, 592, 593, 594, 595, 596, 597, 598, 599, 600, 601, 602, 603, 604, 605, 606, 607, 608, 609, 610, 611, 612, 613, 614, 615, 616, 617, 618, 619, 620, 621, 622, 623, 624, 625, 626, 627, 628, 629, 630, 631, 632, 633, 634, 635, 636, 637, 638, 639, 640, 641, 642, 643, 644, 645, 646, 647, 648, 649, 650, 651, 652, 653, 654, 655, 656, 657, 658, 659, 660, 661, 662, 663, 664, 665, 666, 667, 668, 669, 670, 671, 672, 673, 674, 675, 676, 677, 678, 679, 680, 681, 682, 683, 684, 685, 686, 687, 688, 689, 690, 691, 692, 693, 694, 695, 696, 697, 698, 699, 700, 701, 702, 703, 704, 705, 706, 707, 708, 709, 710, 711, 712, 713, 714, 715, 716, 717, 718, 719, 720, 721, 722, 723, 724, 725, 726, 727, 728, 729, 730, 731, 732, 733, 734, 735, 736, 737, 738, 739, 740, 741, 742, 743, 744, 745, 746, 747, 748, 749, 750, 751, 752, 753, 754, 755, 756, 757, 758, 759, 760, 761, 762, 763, 764, 765, 766, 767, 768, 769, 770, 771, 772, 773, 774, 775, 776, 777, 778, 779, 780, 781, 782, 783, 784, 785, 786, 787, 788, 789, 790, 791, 792, 793, 794, 795, 796, 797, 798, 799, 800, 801, 802, 803, 804, 805, 806, 807, 808, 809, 810, 811, 812, 813, 814, 815, 816, 817, 818, 819, 820, 821, 822, 823, 824, 825, 826, 827, 828, 829, 830, 831, 832, 833, 834, 835, 836, 837, 838, 839, 840, 841, 842, 843, 844, 845, 846, 847, 848, 849, 850, 851, 852, 853, 854, 855, 856, 857, 858, 859, 860, 861, 862, 863, 864, 865, 866, 867, 868, 869, 870, 871, 872, 873, 874, 875, 876, 877, 878, 879, 880, 881, 882, 883, 884, 885, 886, 887, 888, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 905, 906, 907, 908, 909, 910, 911, 912, 913, 914, 915, 916, 917, 918, 919, 920, 921, 922, 923, 924, 925, 926, 927, 928, 929, 930, 931, 932, 933, 934, 935, 936, 937,

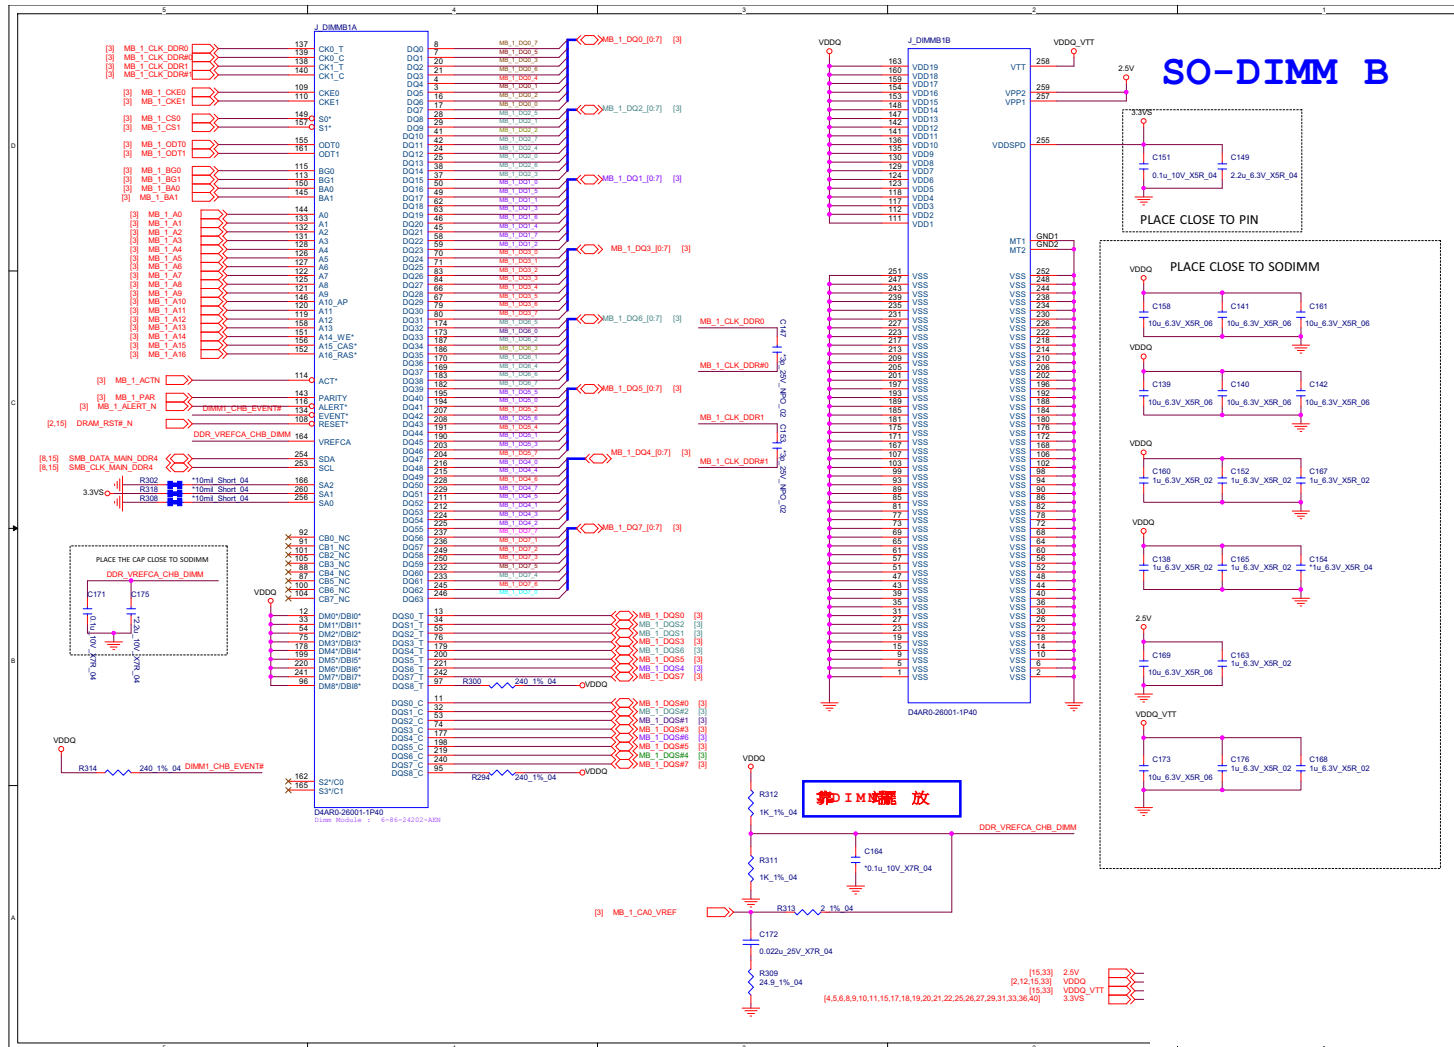


HDMI

Sheet 17 of 49
HDMI

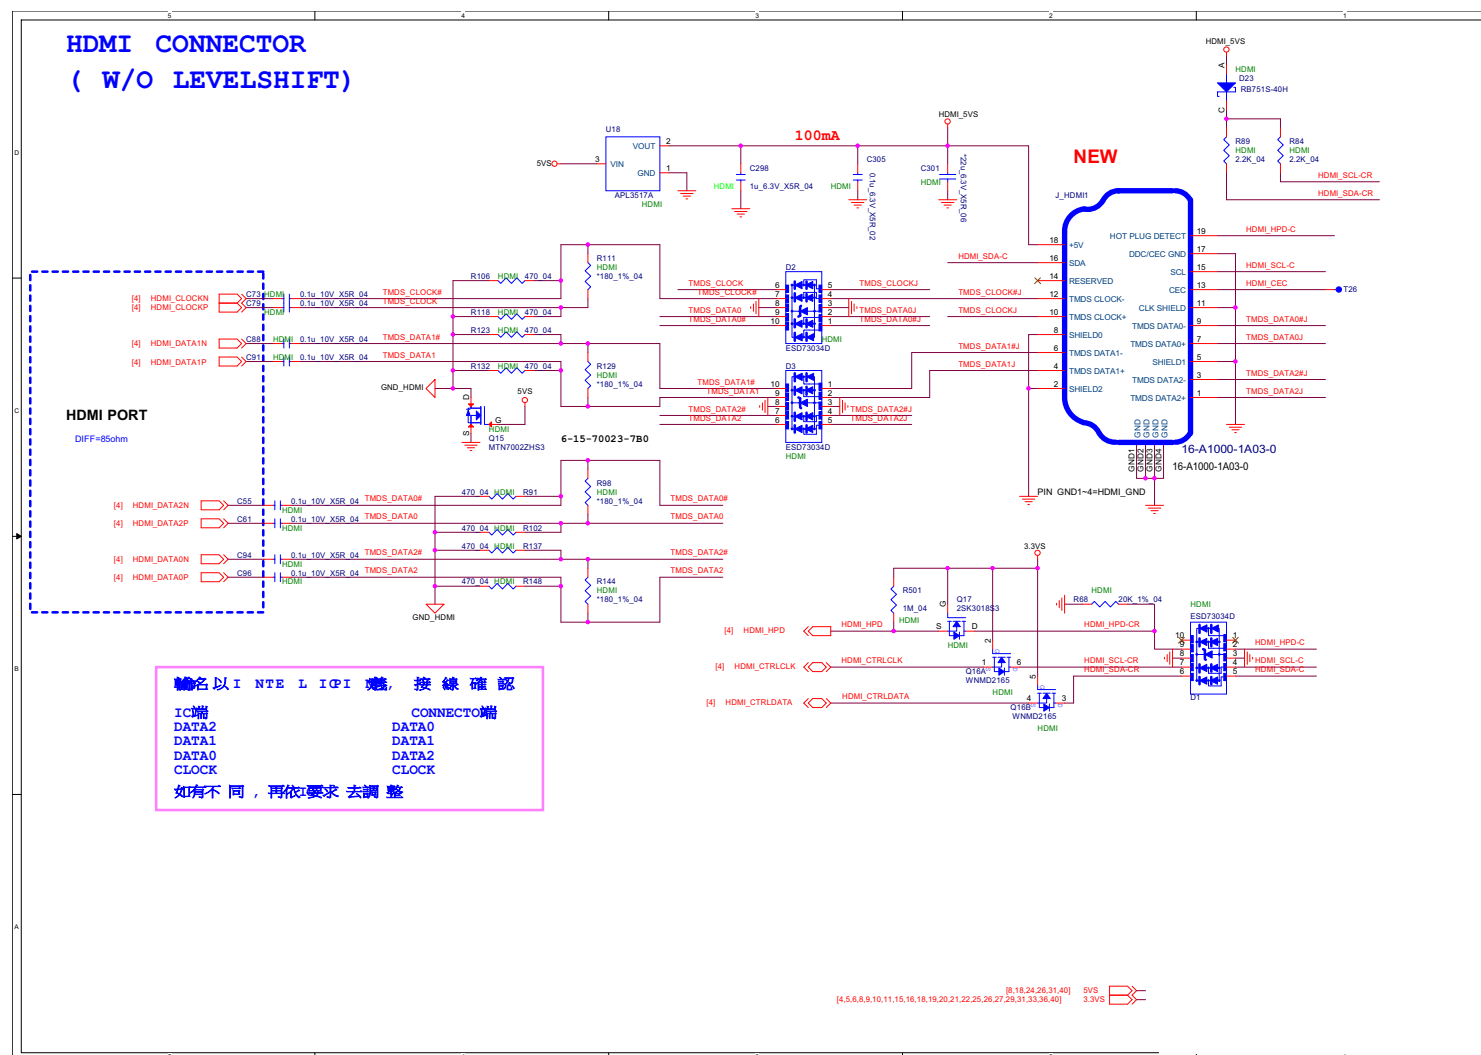


Audio Codec B - 19

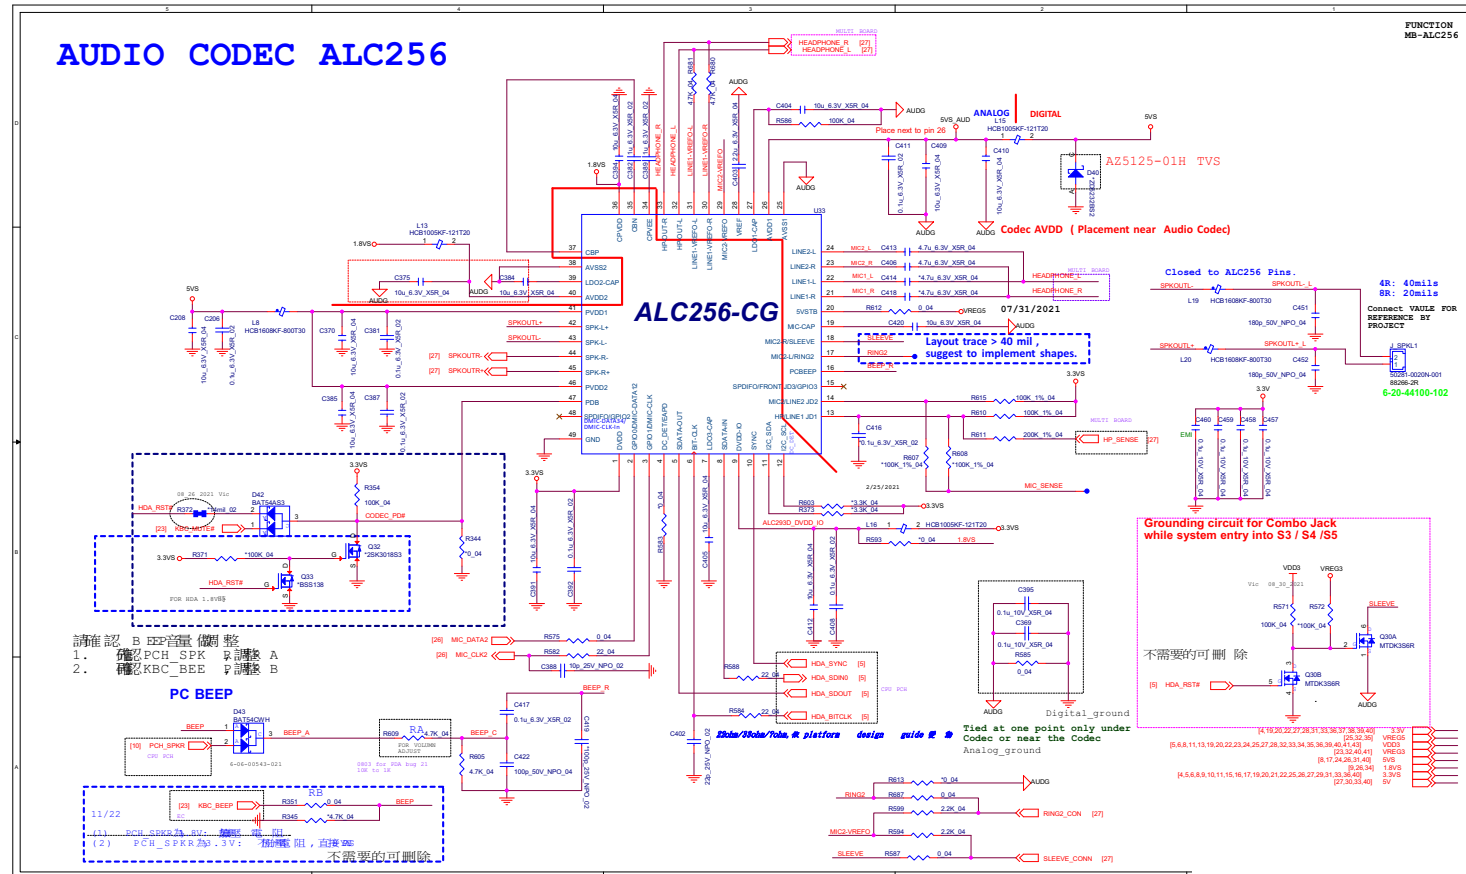


M.2 PCIE Gen4 SSD

B. Schematic Diagrams

Sheet 19 of 49
M.2 PCIE Gen4 SSD

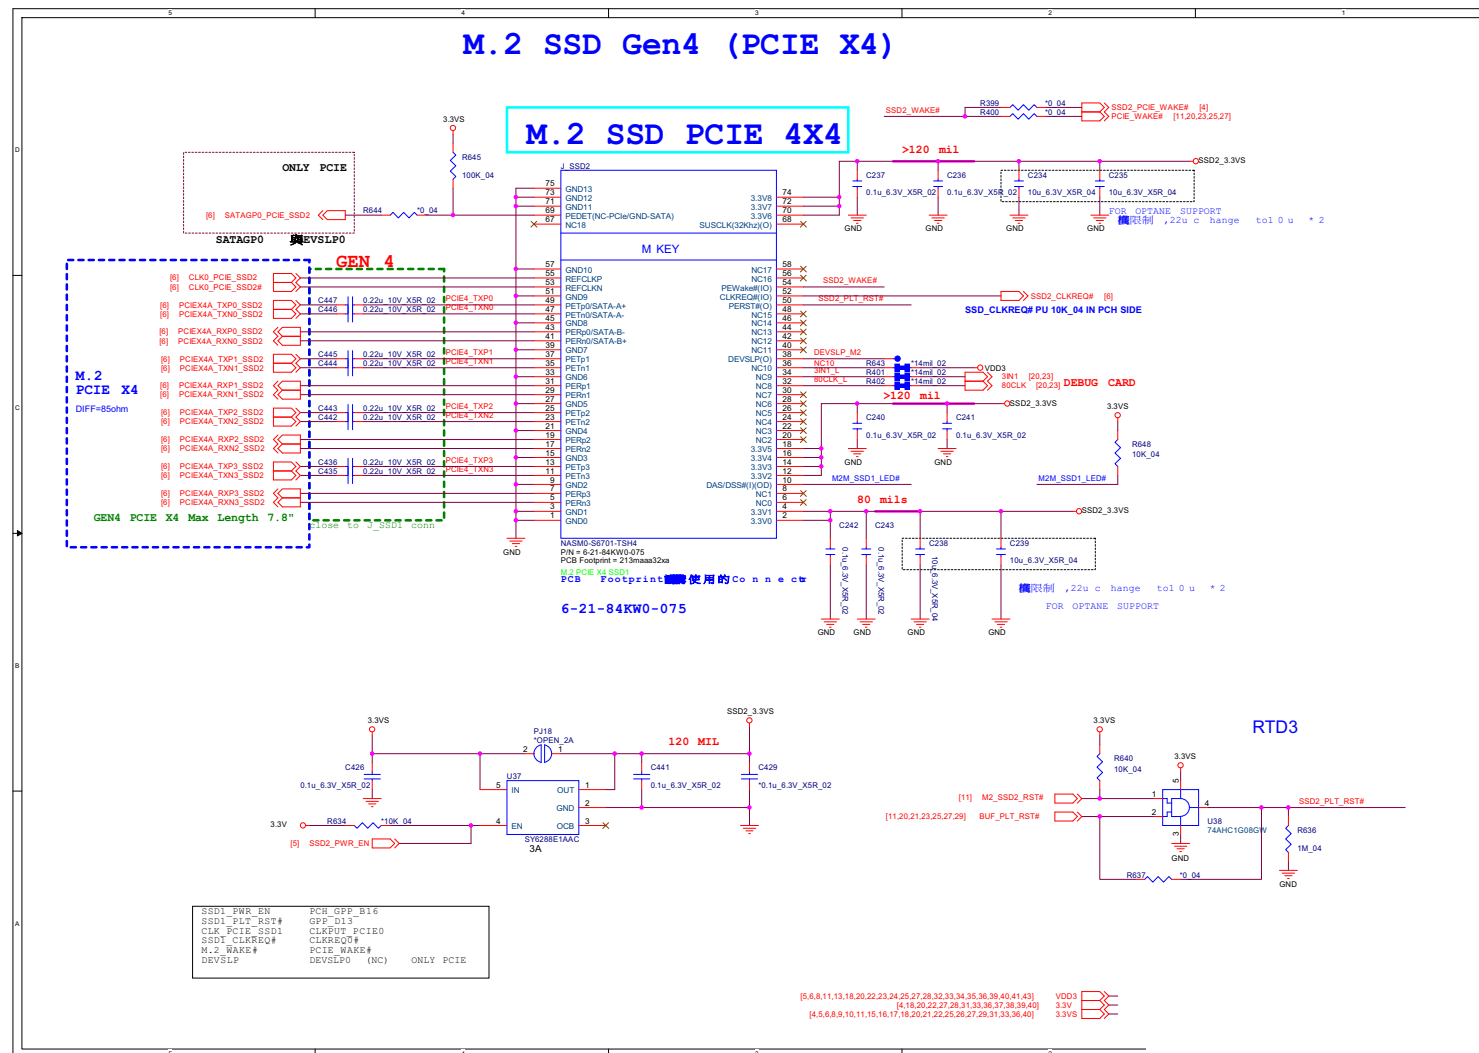


M.2 SSD B - 21




USB Port

Sheet 21 of 49
USB Port

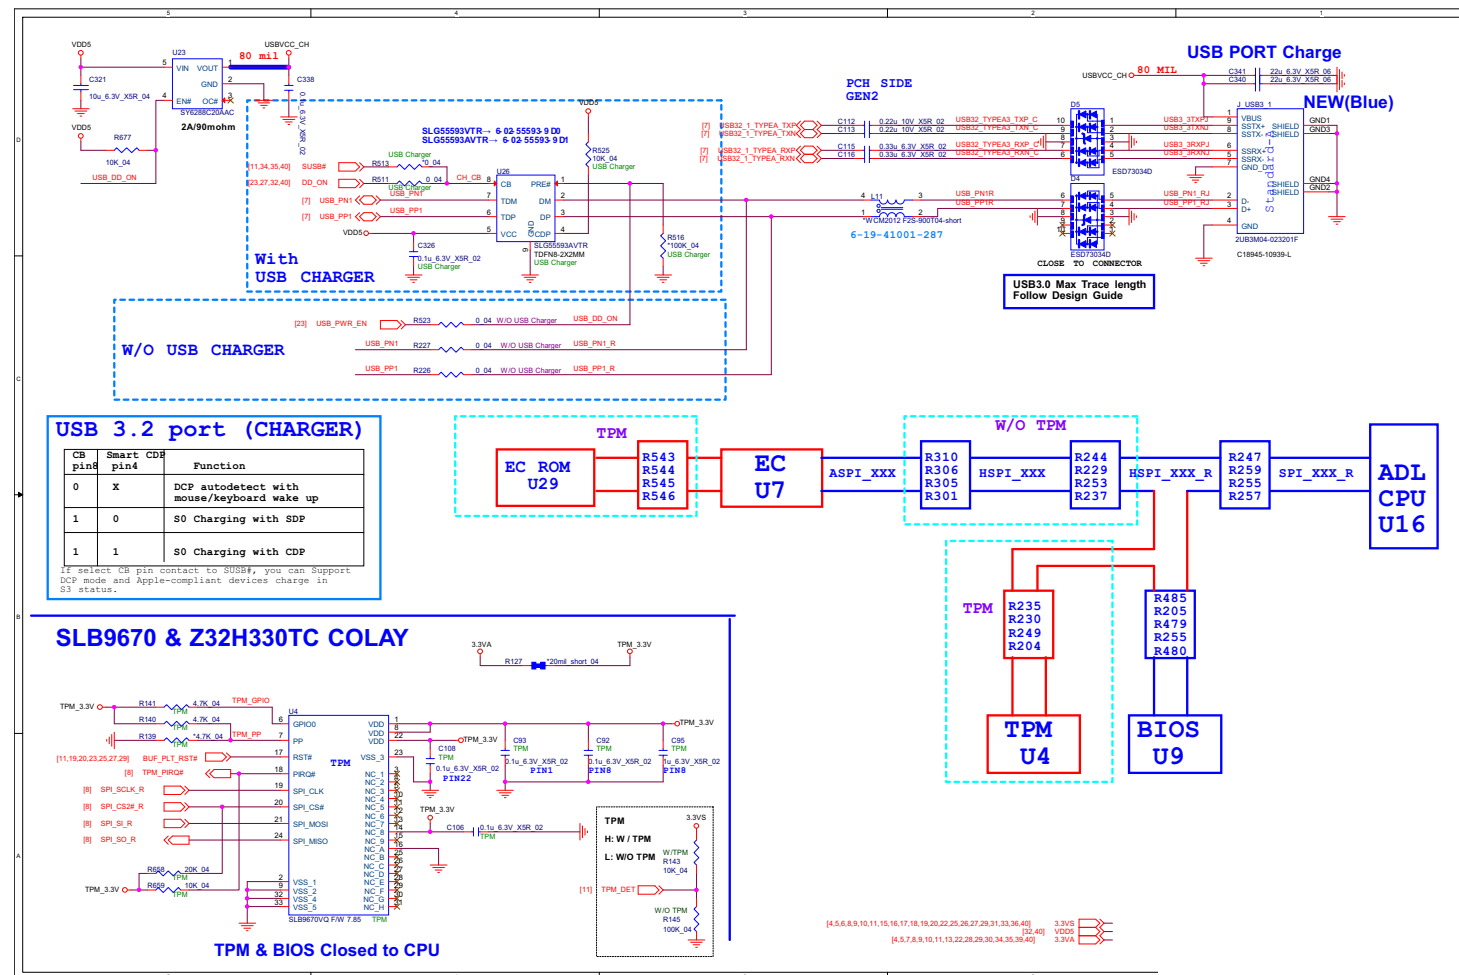


Panel B - 23

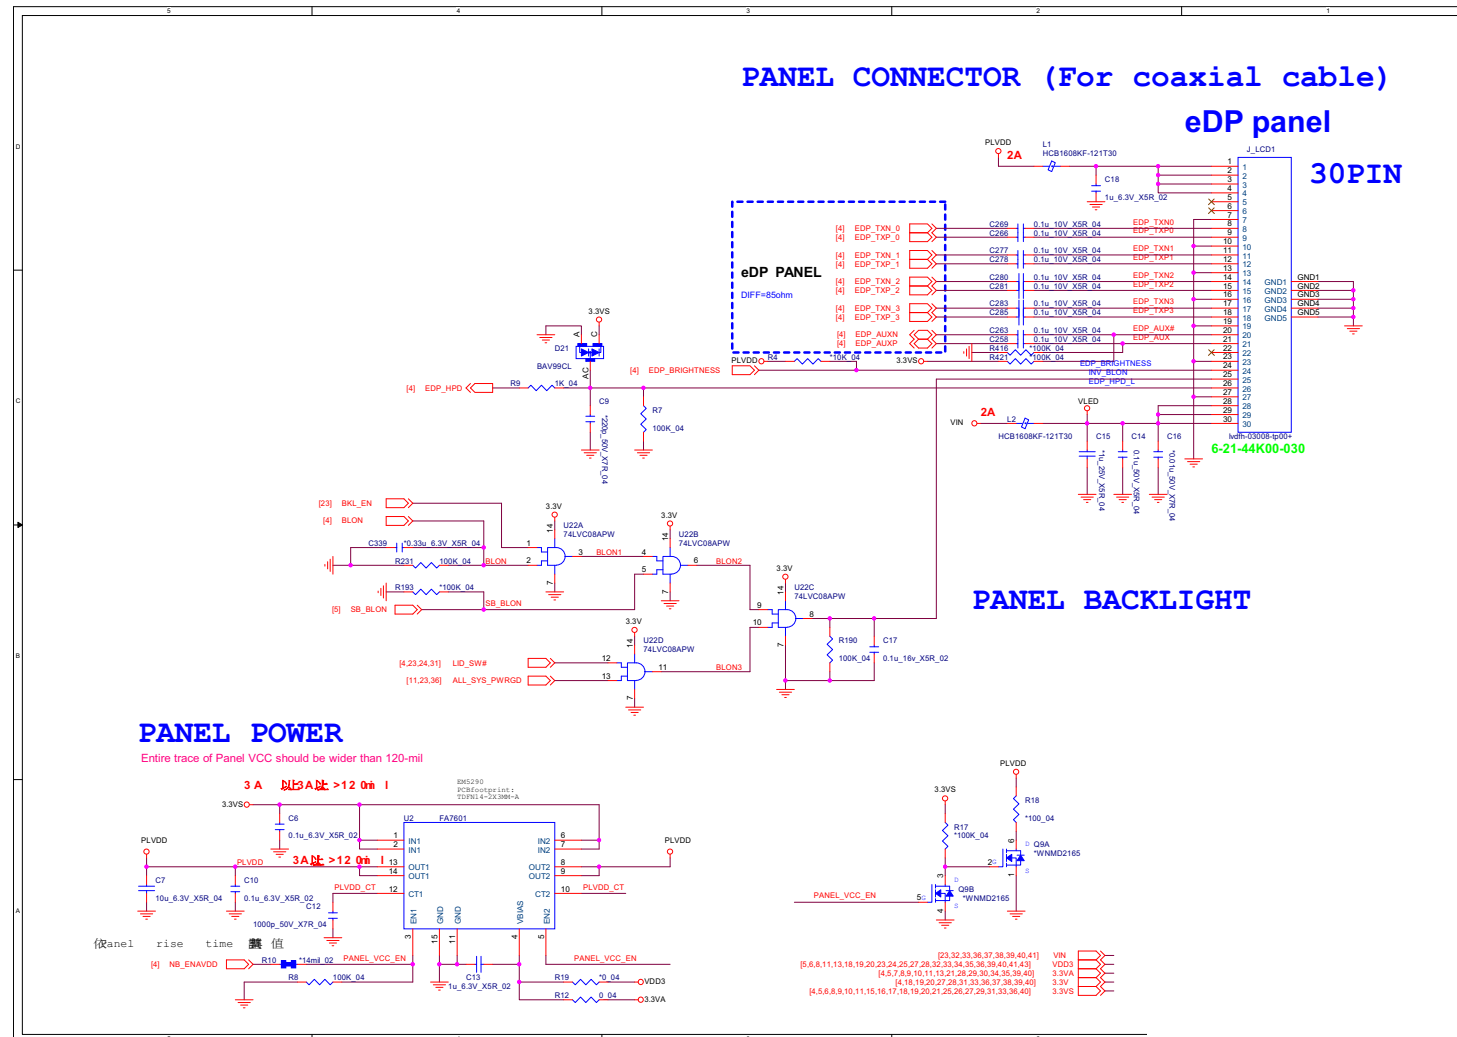

IT5570

Sheet 23 of 49
IT5570

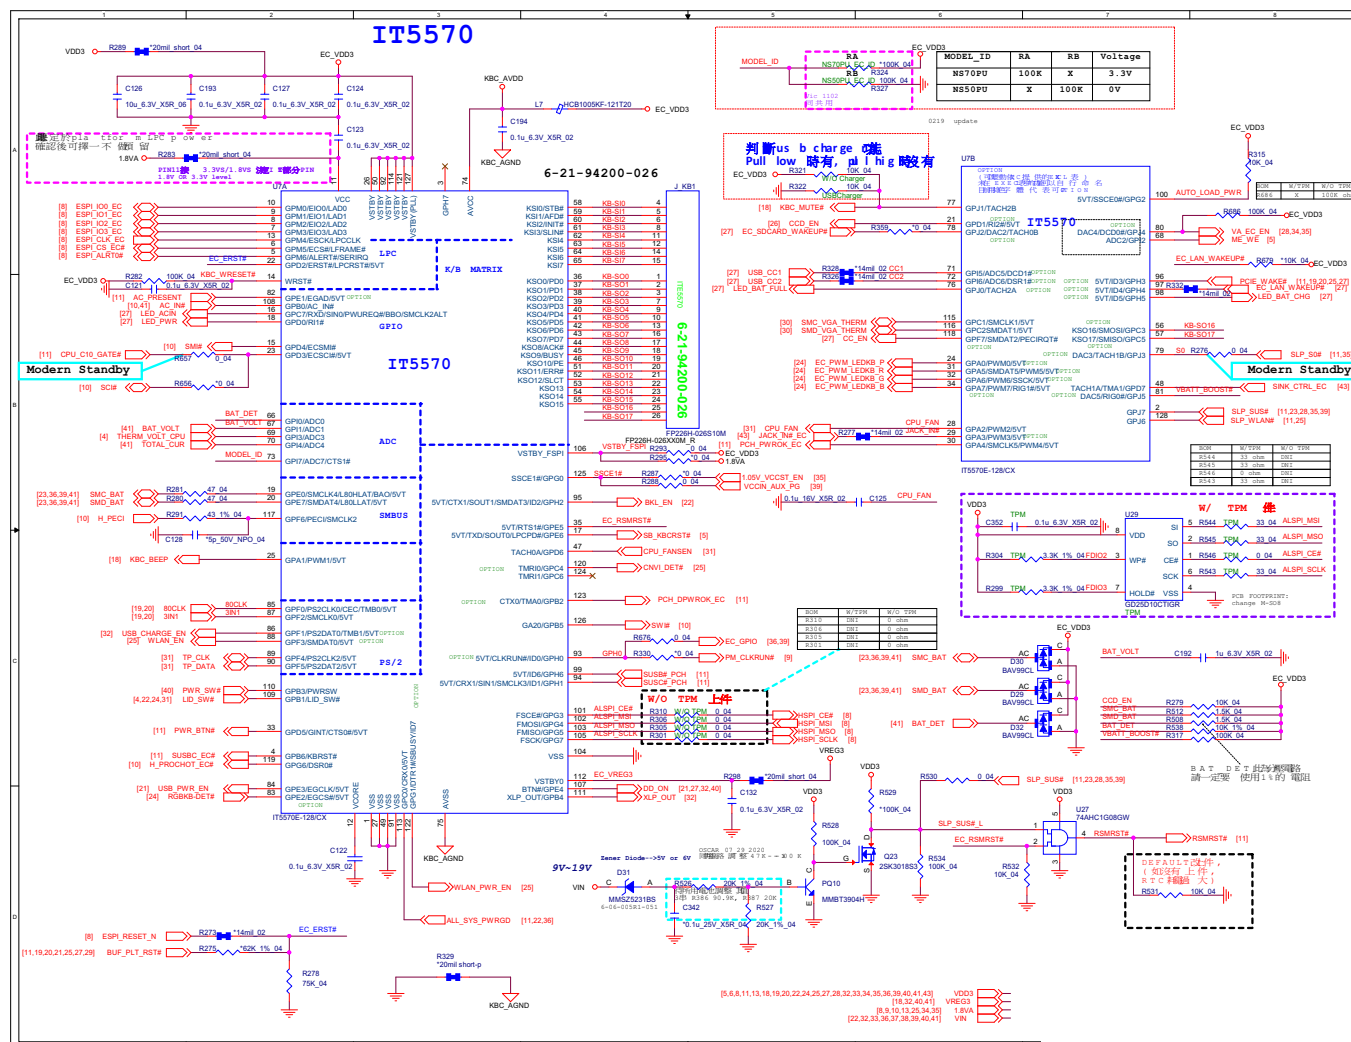


RGB KB, LID Conn B - 25

WLAN/BT


B. Schematic Diagrams

B - 26 WLAN/BT

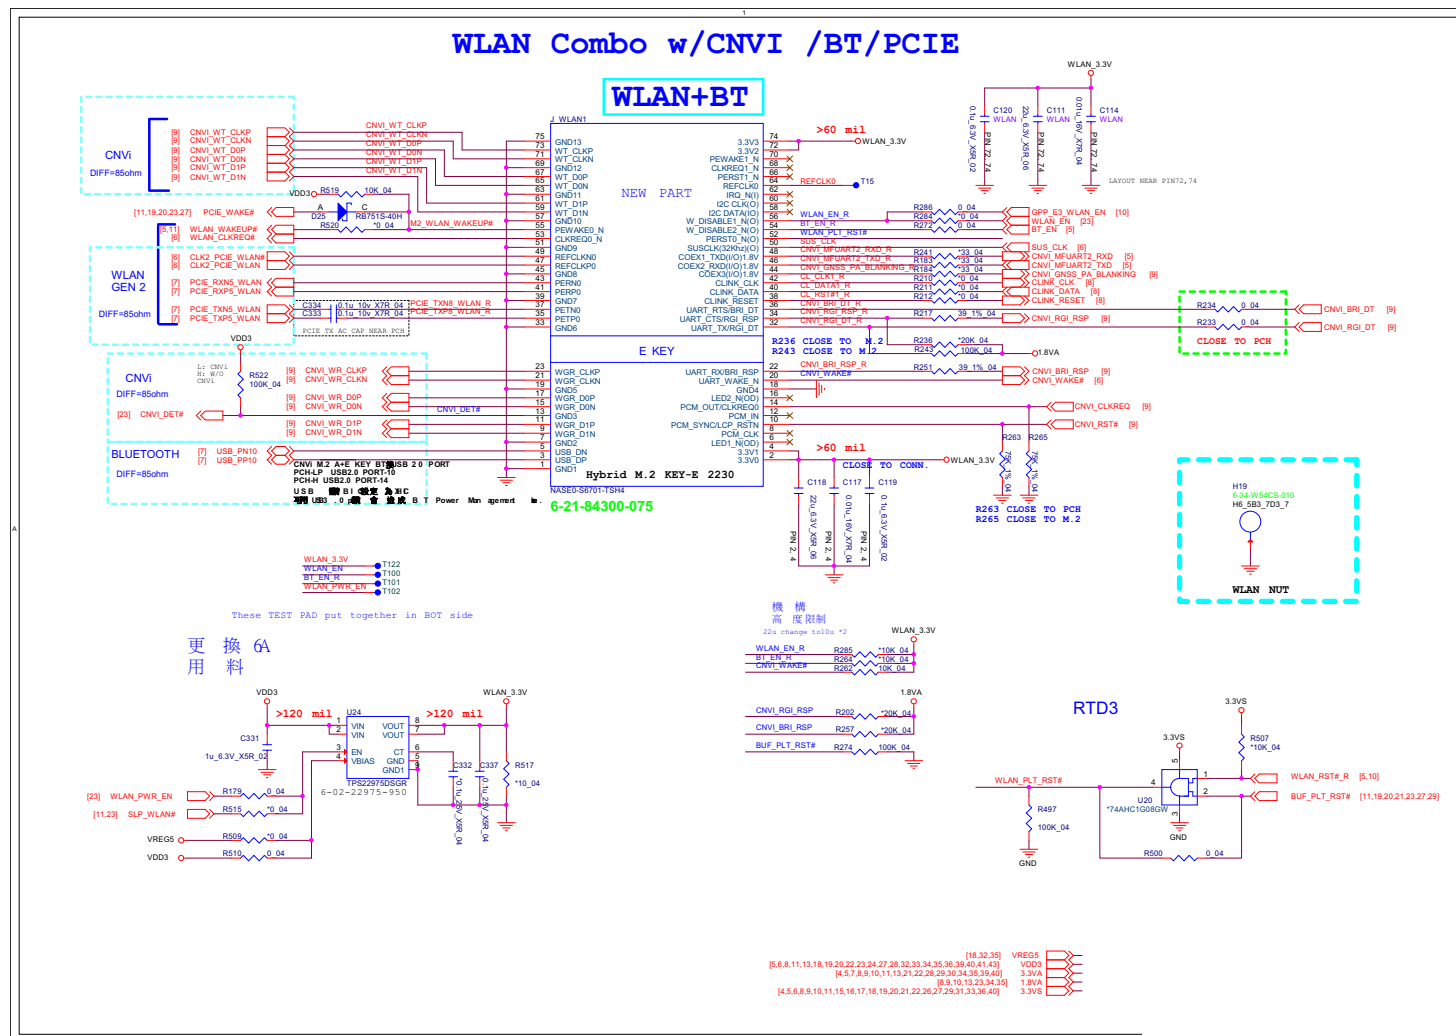

Schematic Diagrams

CCD

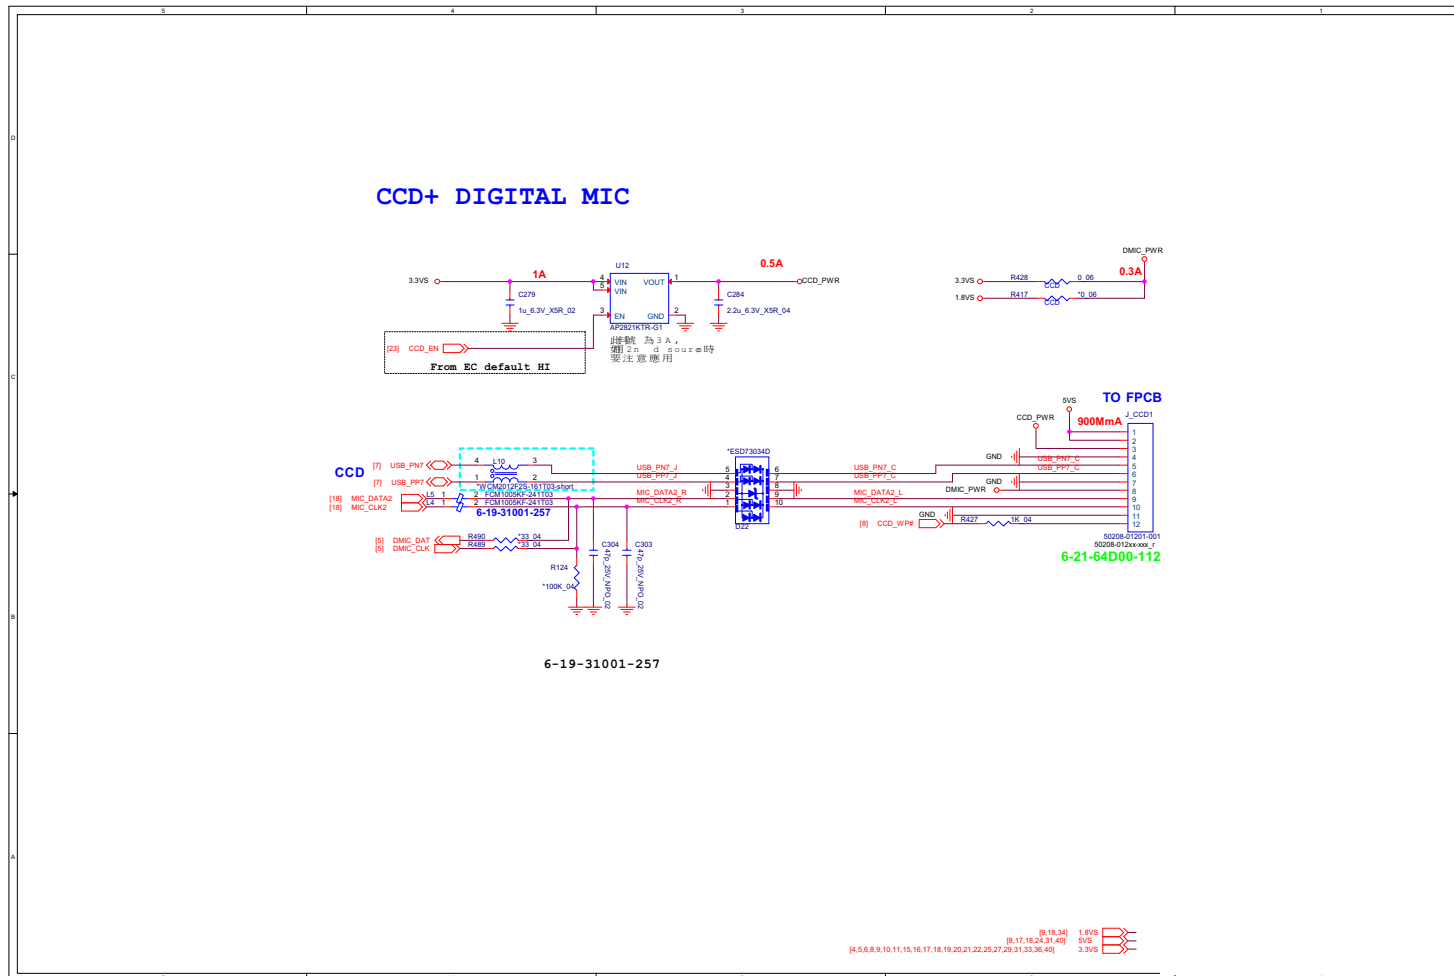


Sheet 26 of 49
CCD


B.Schematic Diagrams

Type-C USB

Sheet 27 of 49
Type-C USB

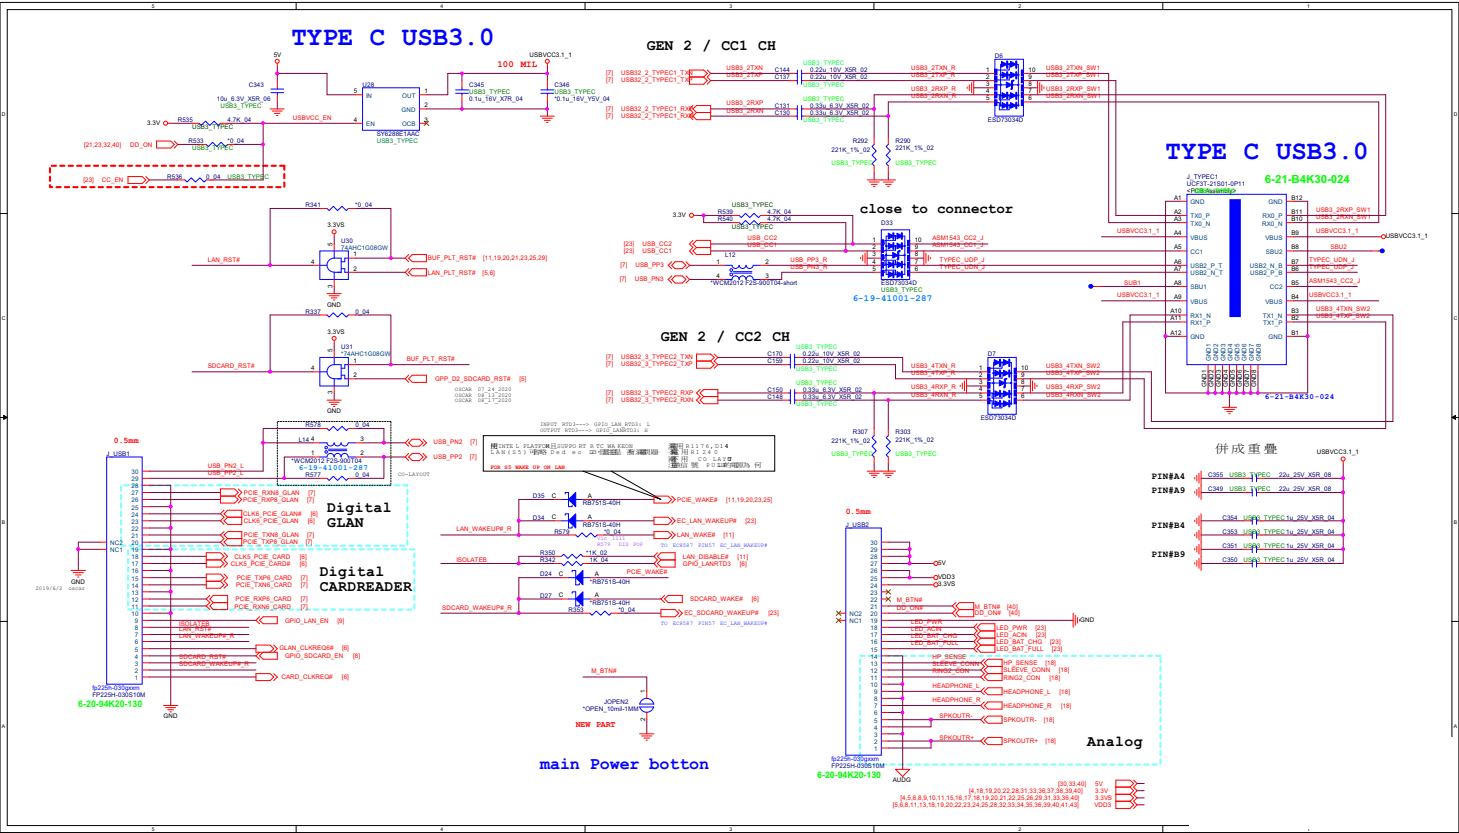


Retimer 1/2

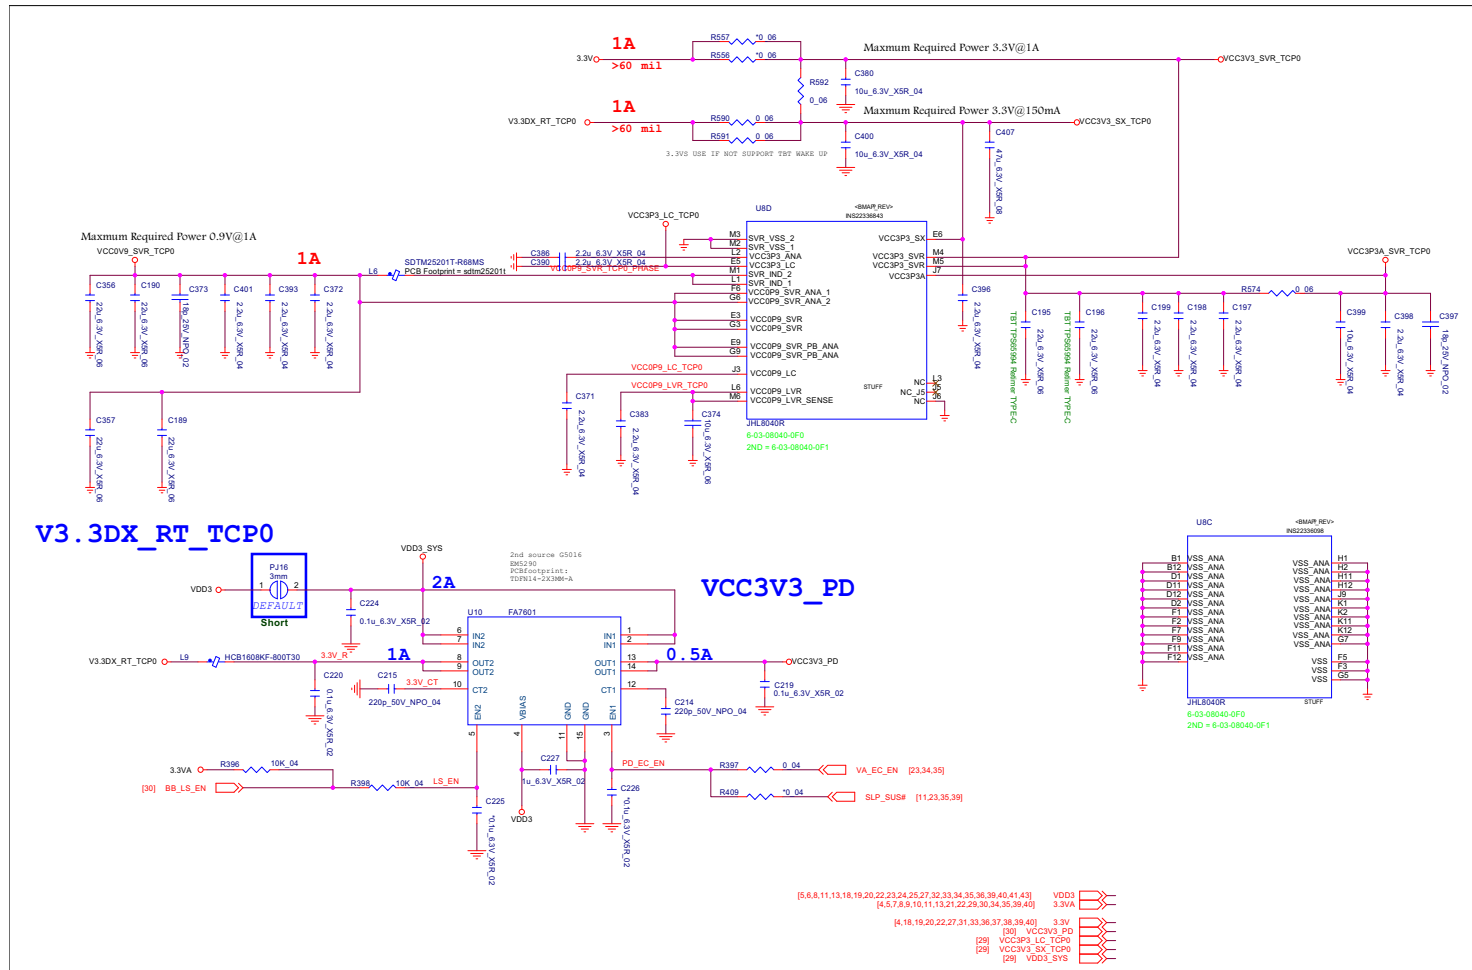


Sheet 28 of 49
Retimer 1/2

Retimer 2/2

Sheet 29 of 49
Retimer 2/2

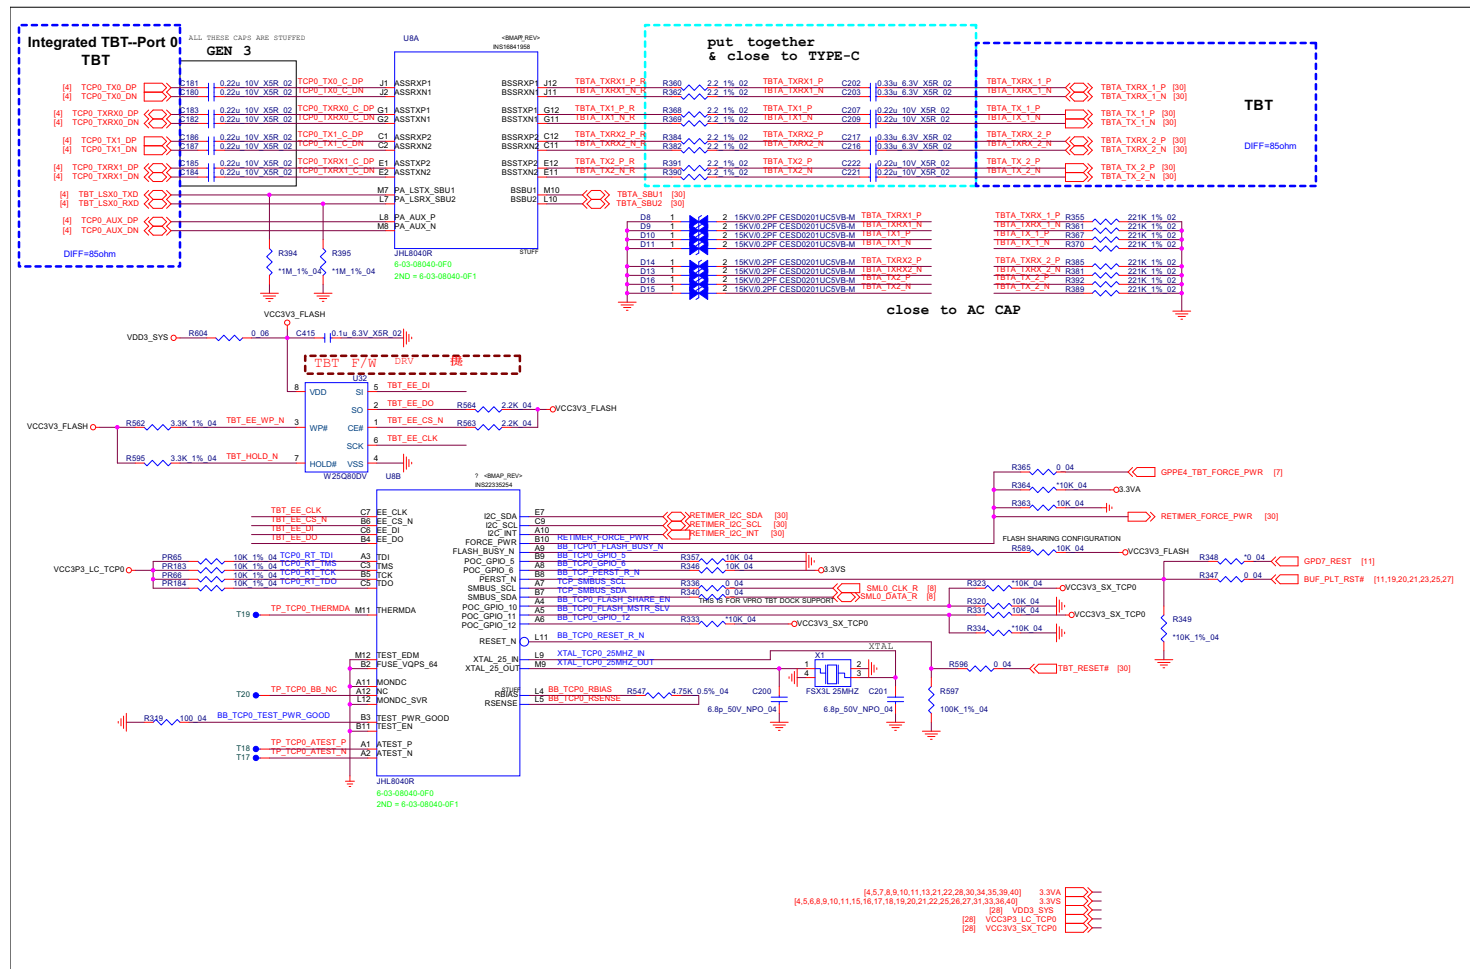


Type-C

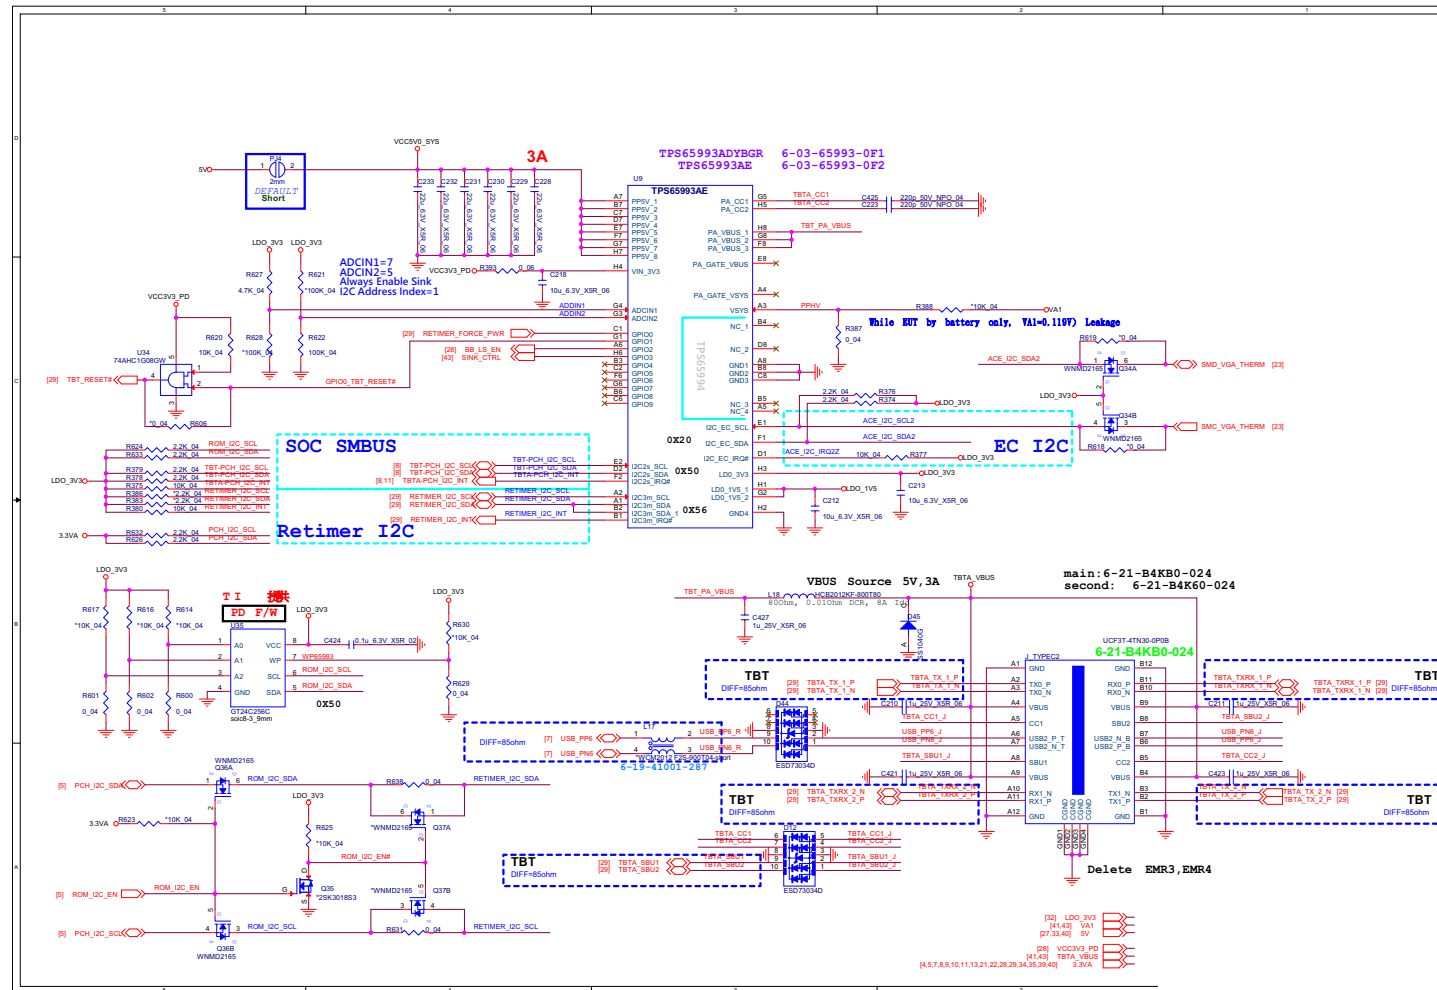


Sheet 30 of 49
Type-C

Sheet 31 of 49
Fan, TP

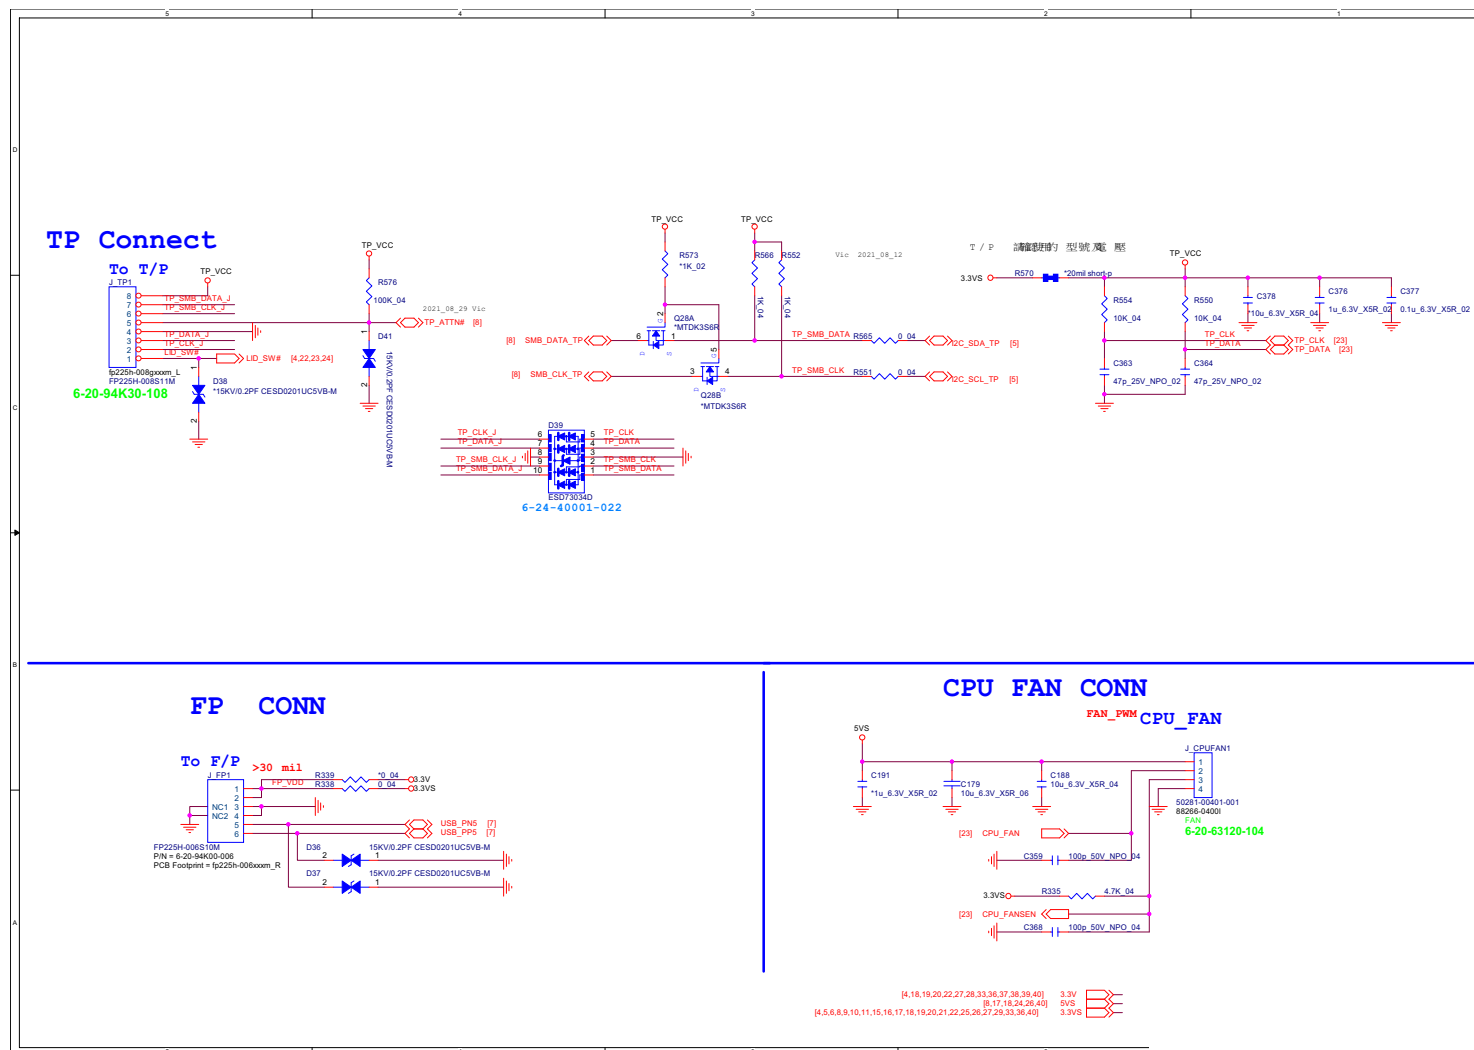


VDD3, VDD5

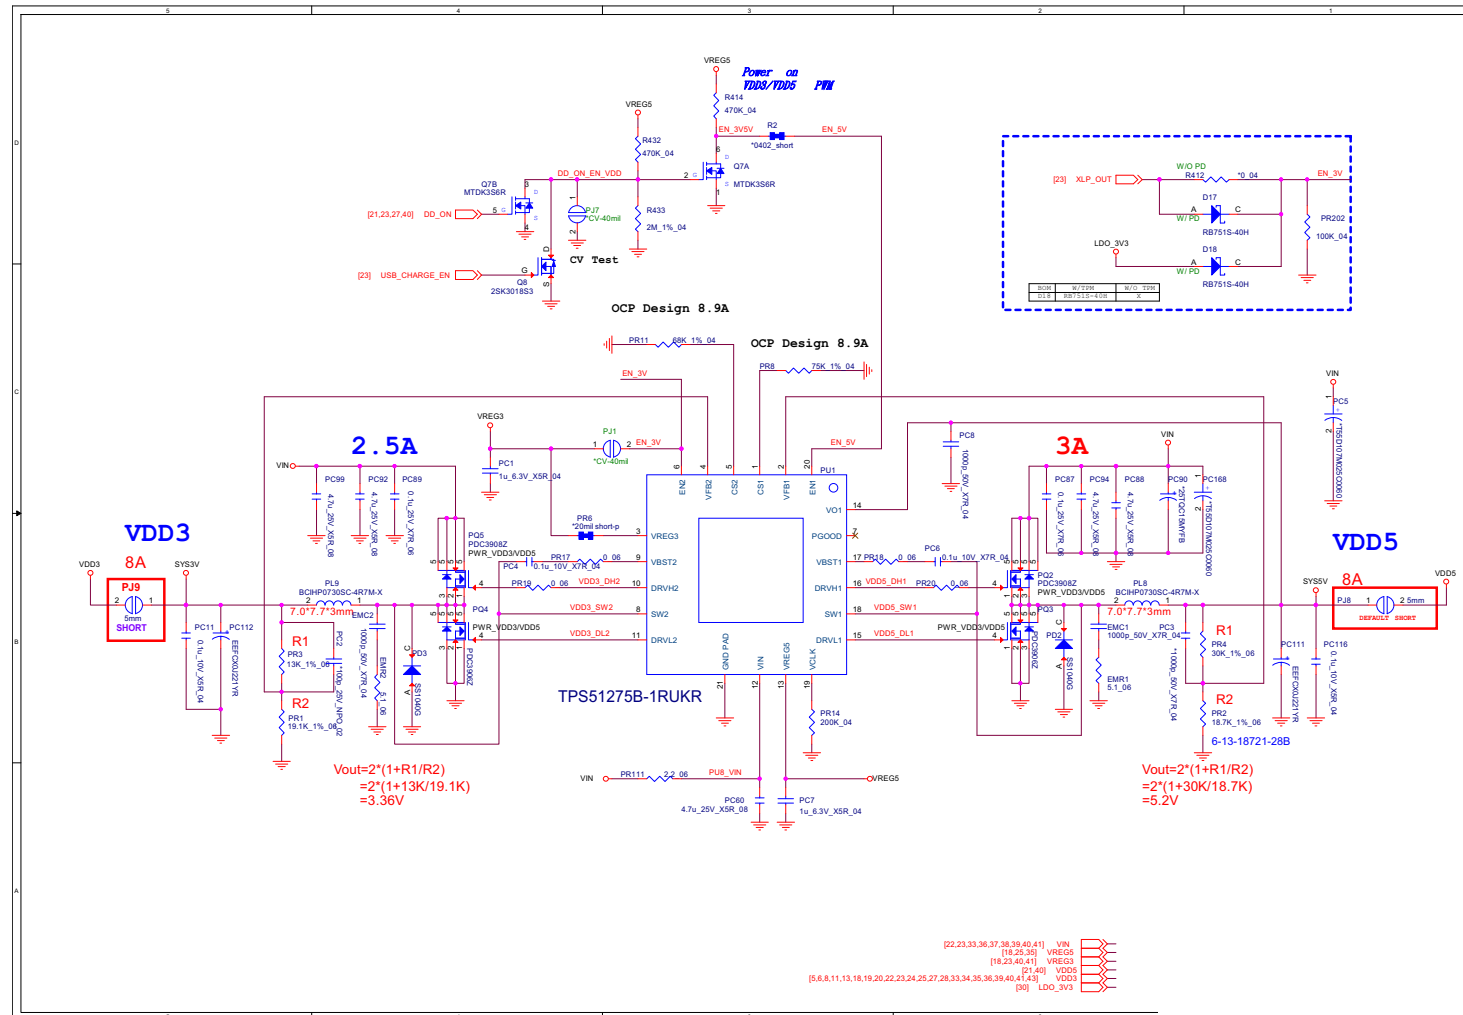

Schematic Diagrams


VDDQ, VDDQ_VTT, 1.8VA

Sheet 33 of 49
VDDQ, VDDQ_VTT,
1.8VA

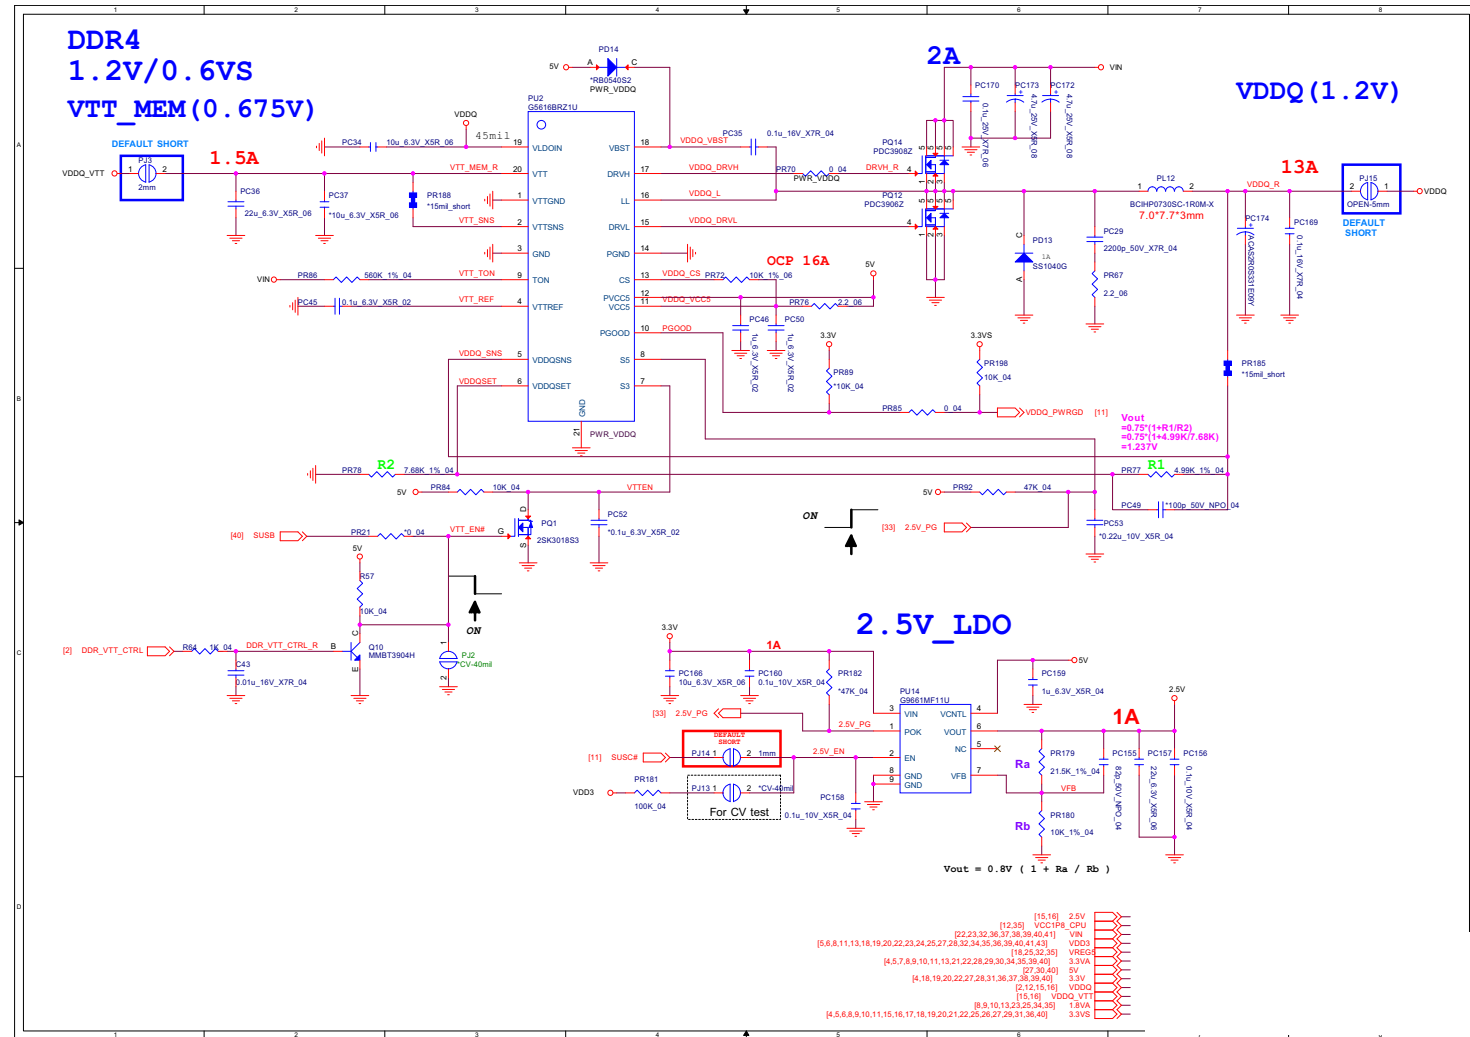


B. Schematic Diagrams

3.3VA, 1.8VS B - 35

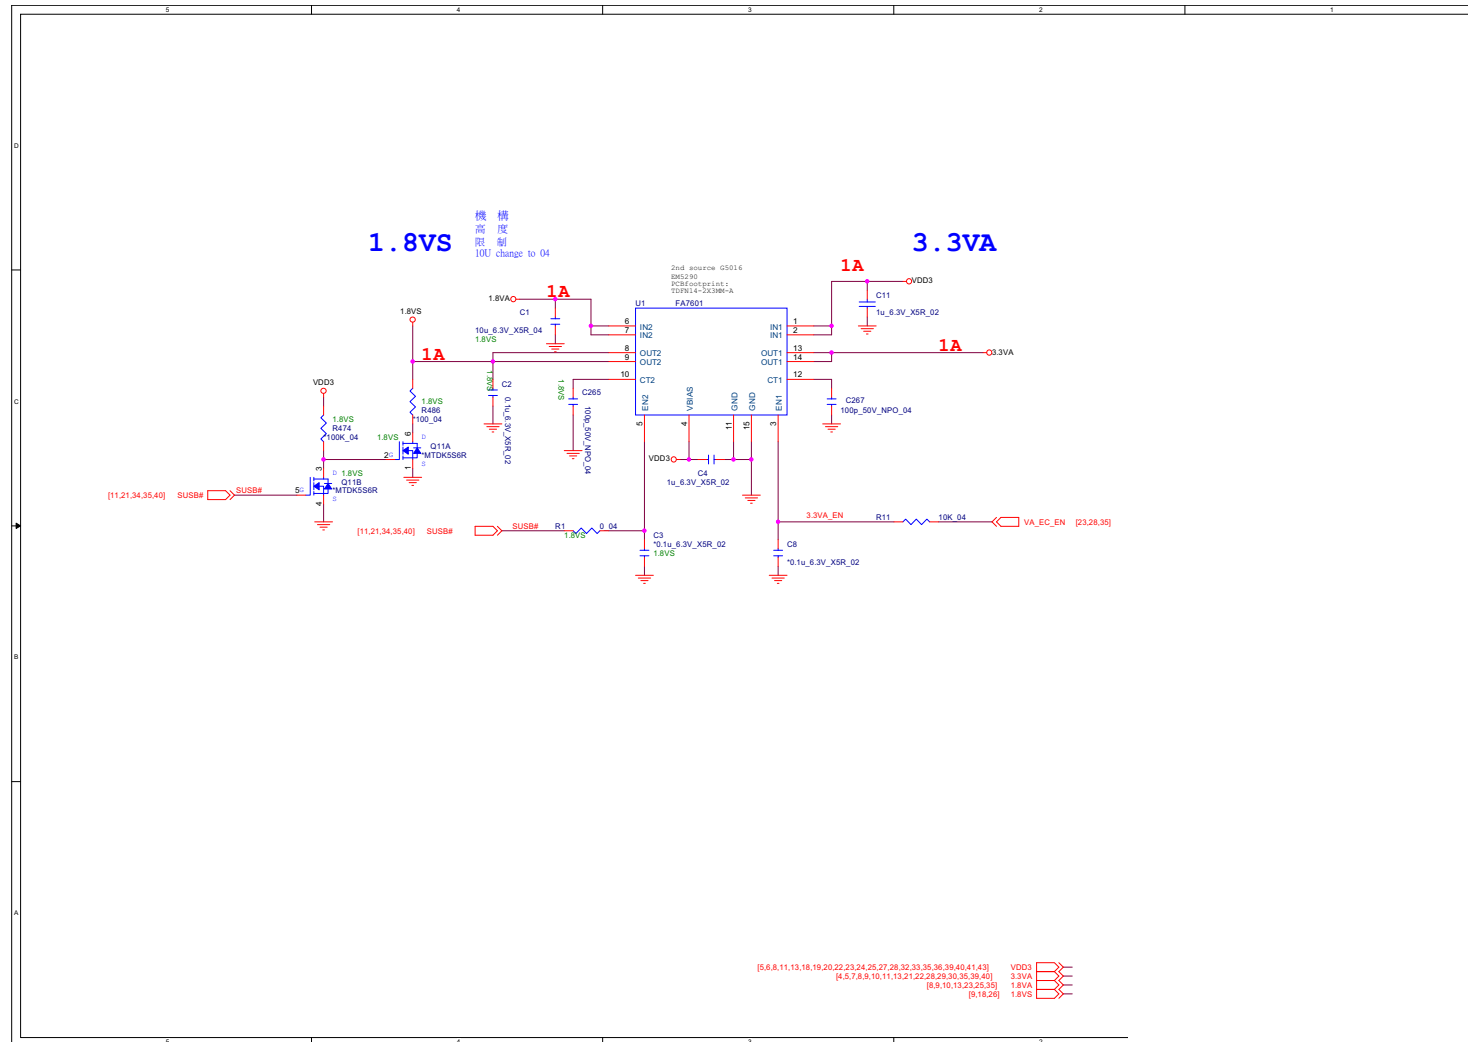


B. Schematic Diagrams

Sheet 35 of 49
2.5V, VCCST,
VCCSTG

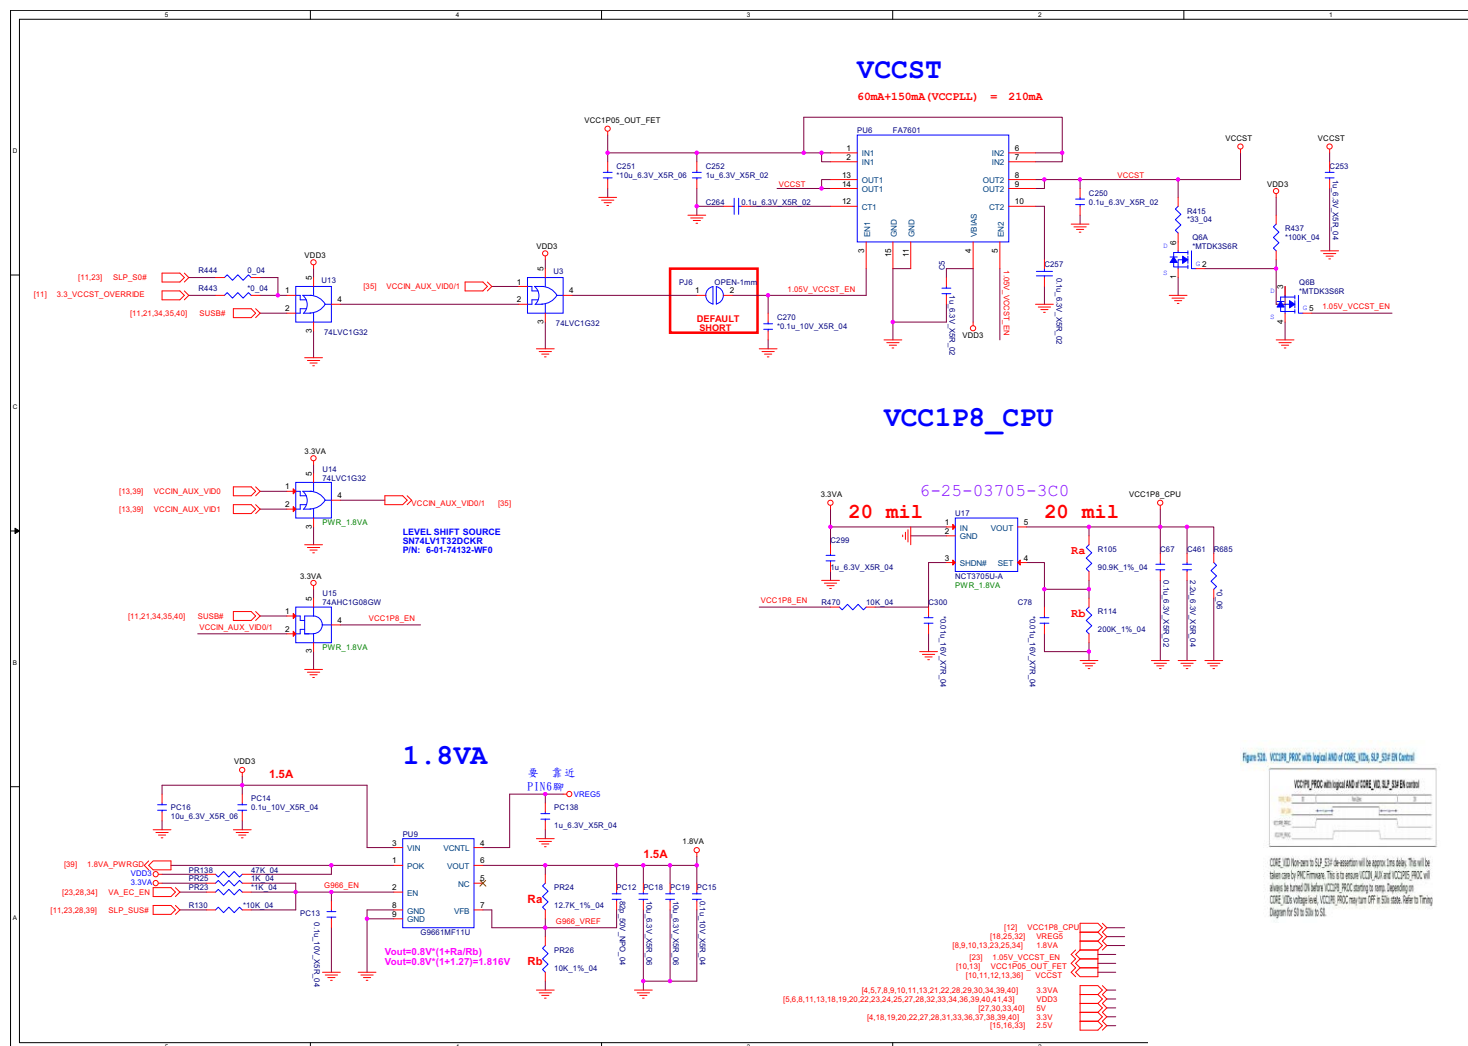

MP2964 Controller

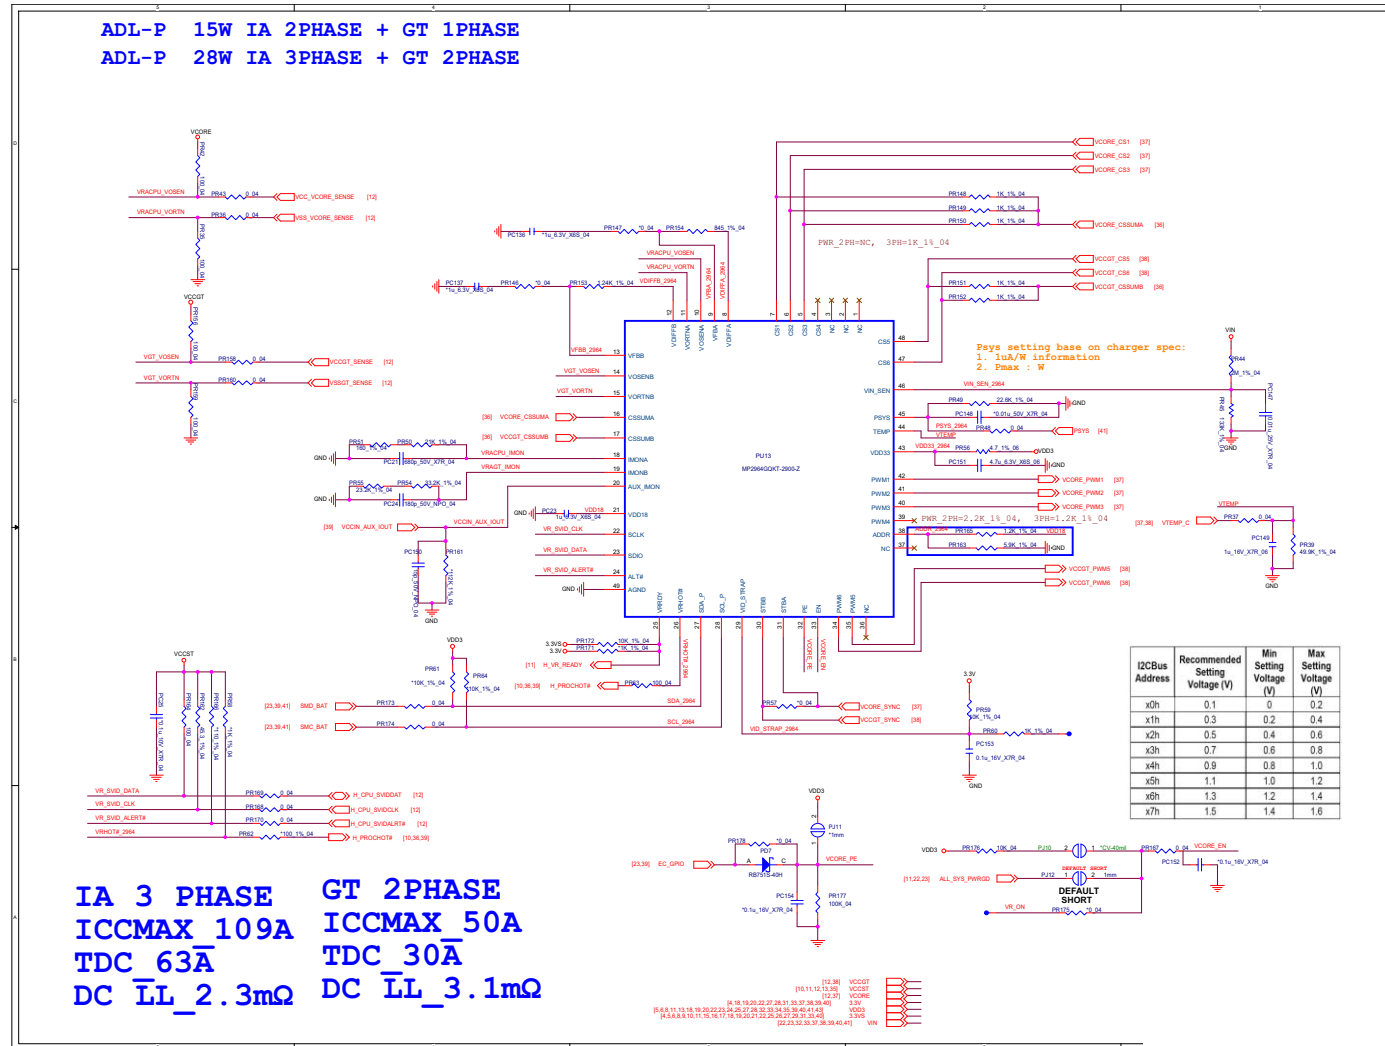


Sheet 36 of 49
MP2964 Controller


Schematic Diagrams

VCore

Sheet 37 of 49
VCore

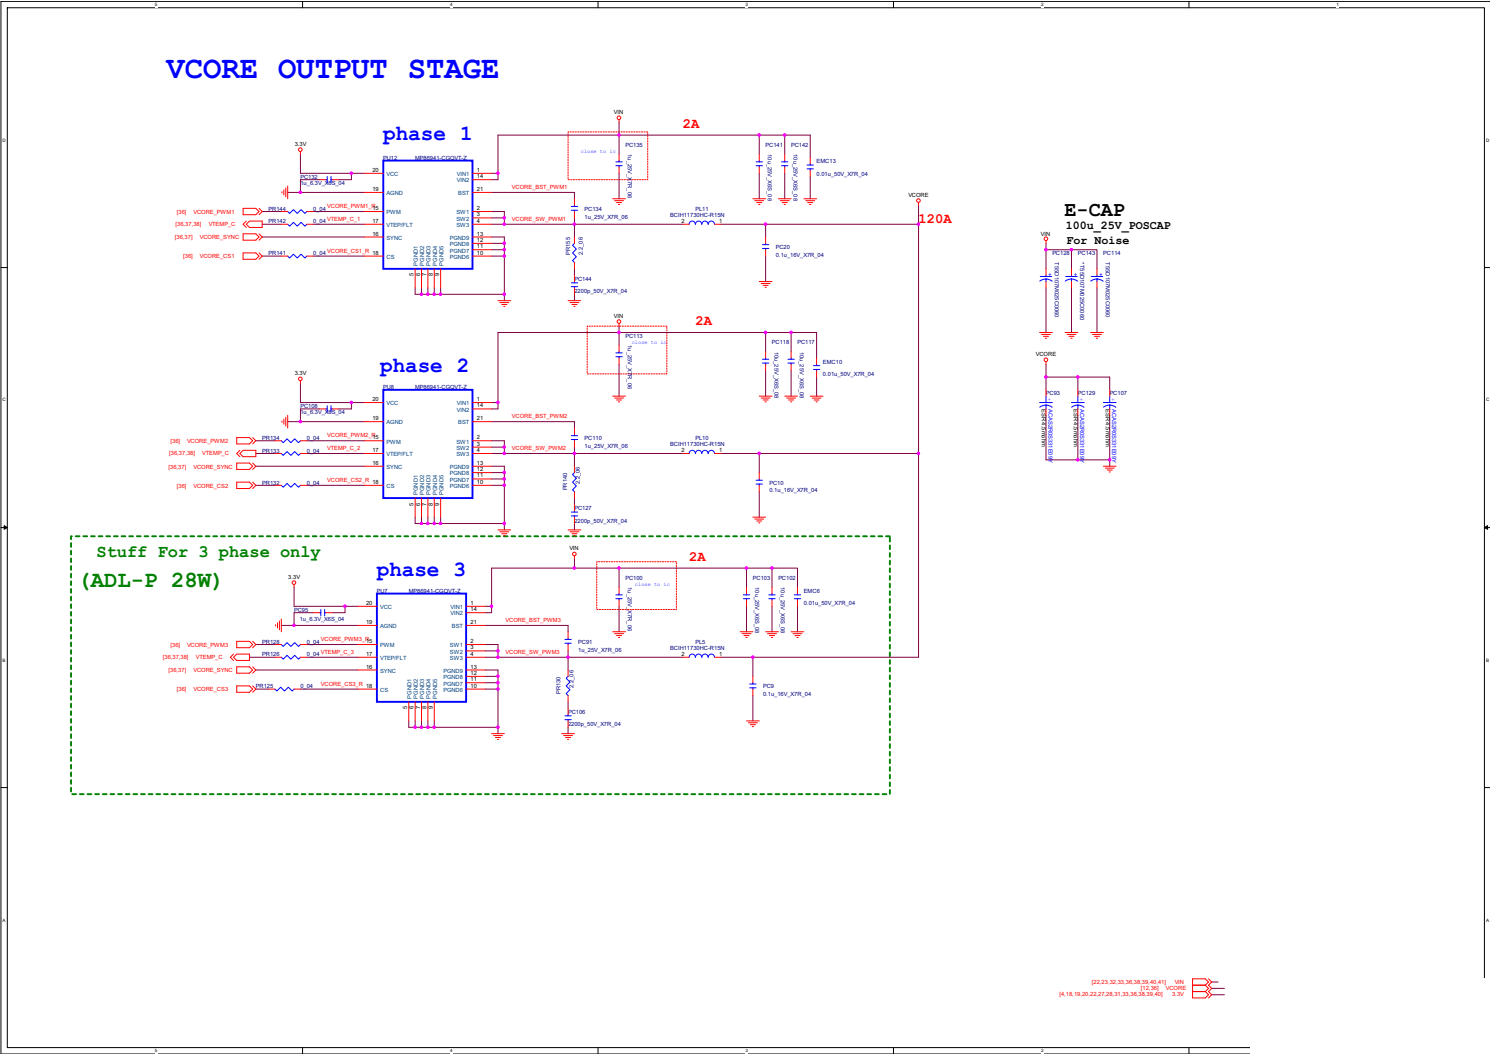


VCCGT

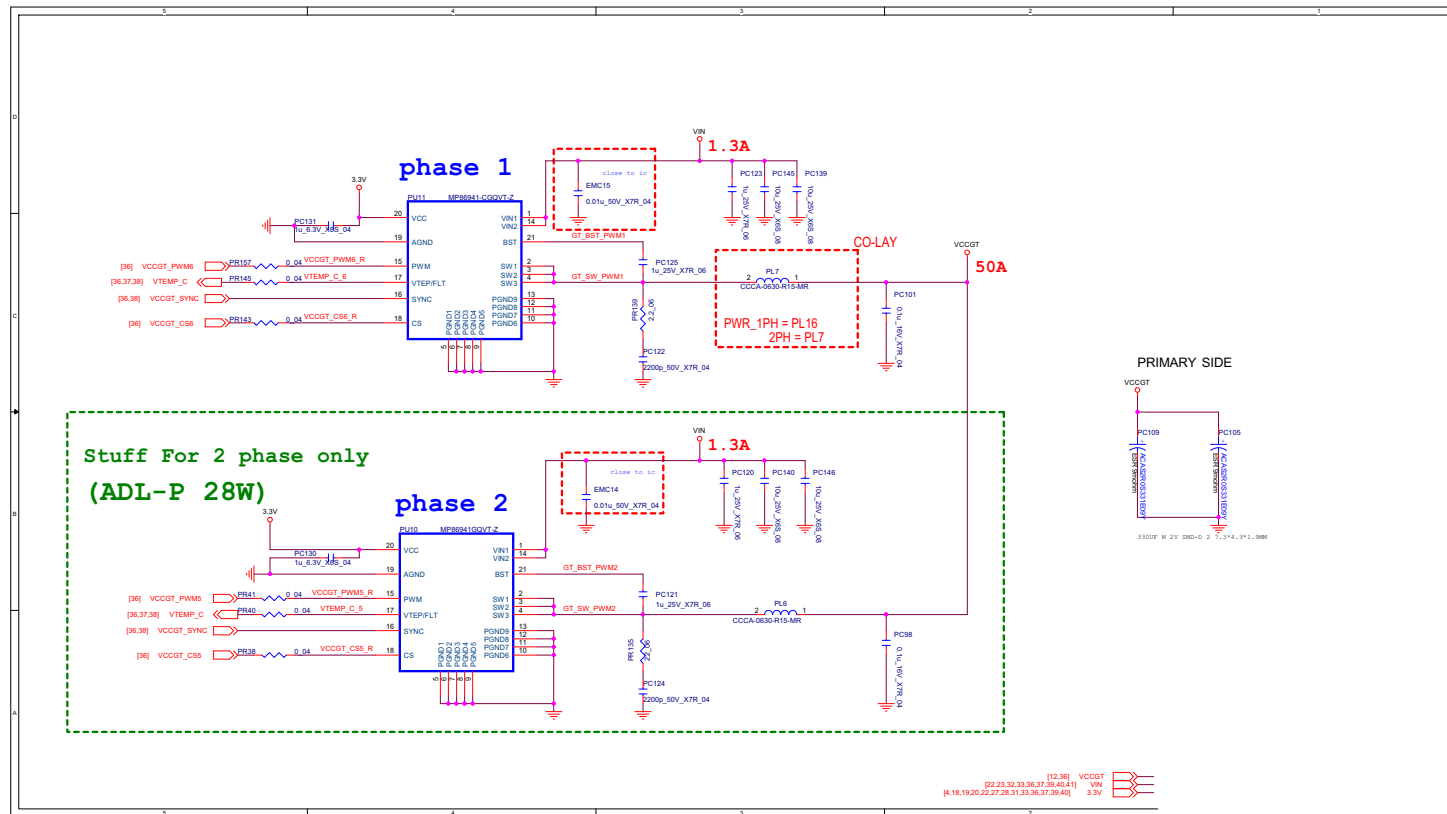


Sheet 38 of 49
VCCGT

VCCIN AUX

Sheet 39 of 49
VCCIN AUX

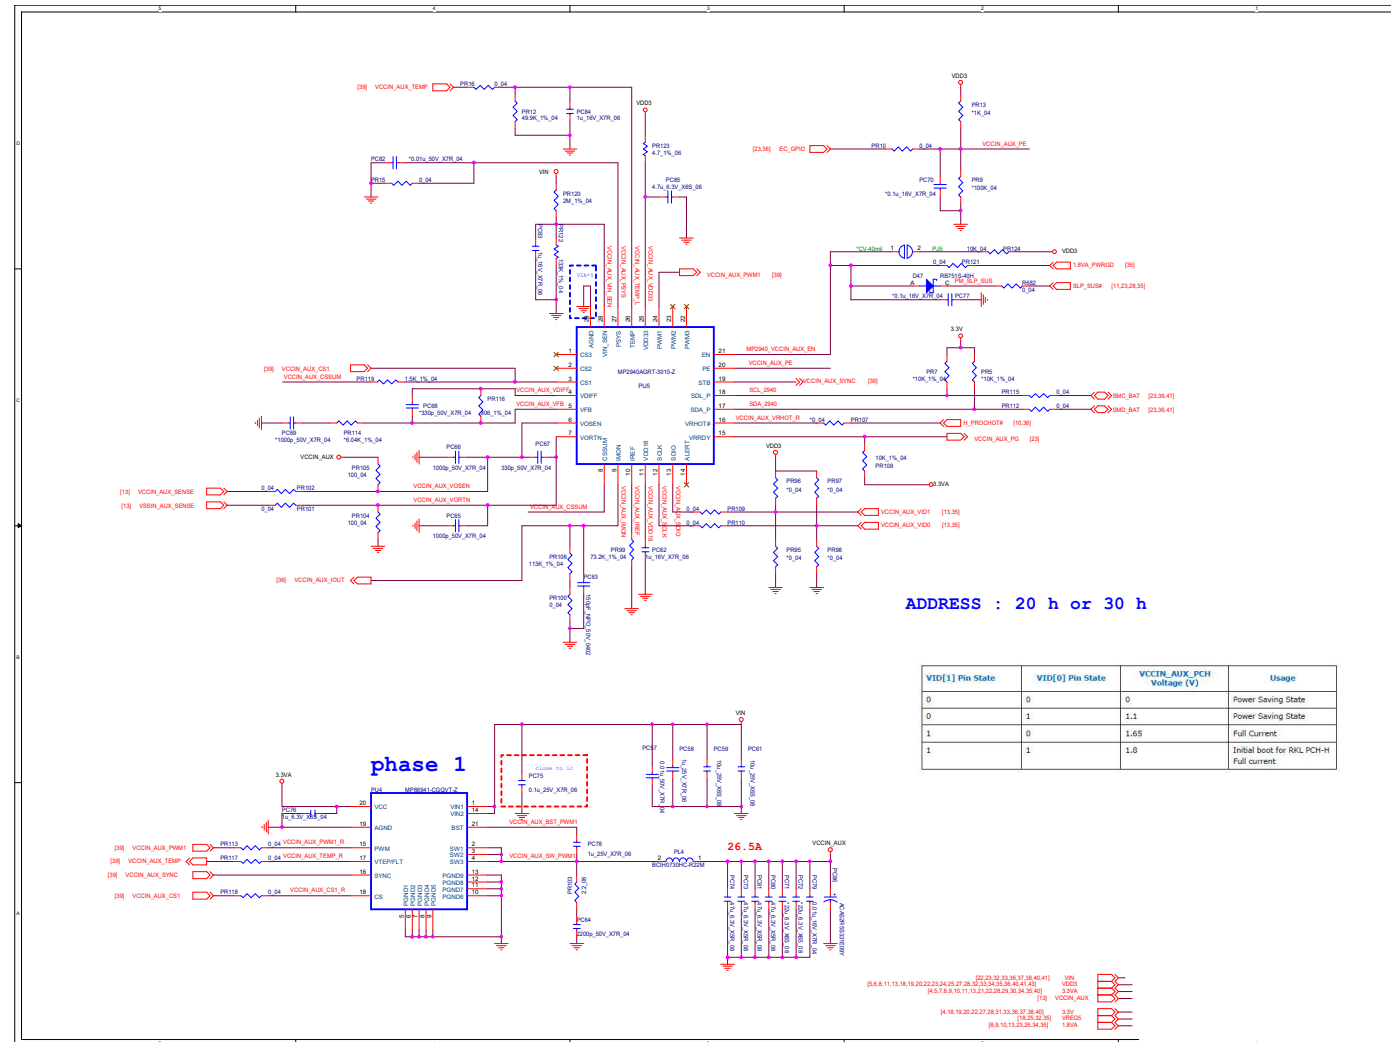

3.3V, 5V, 3VS, 5VS, CTL

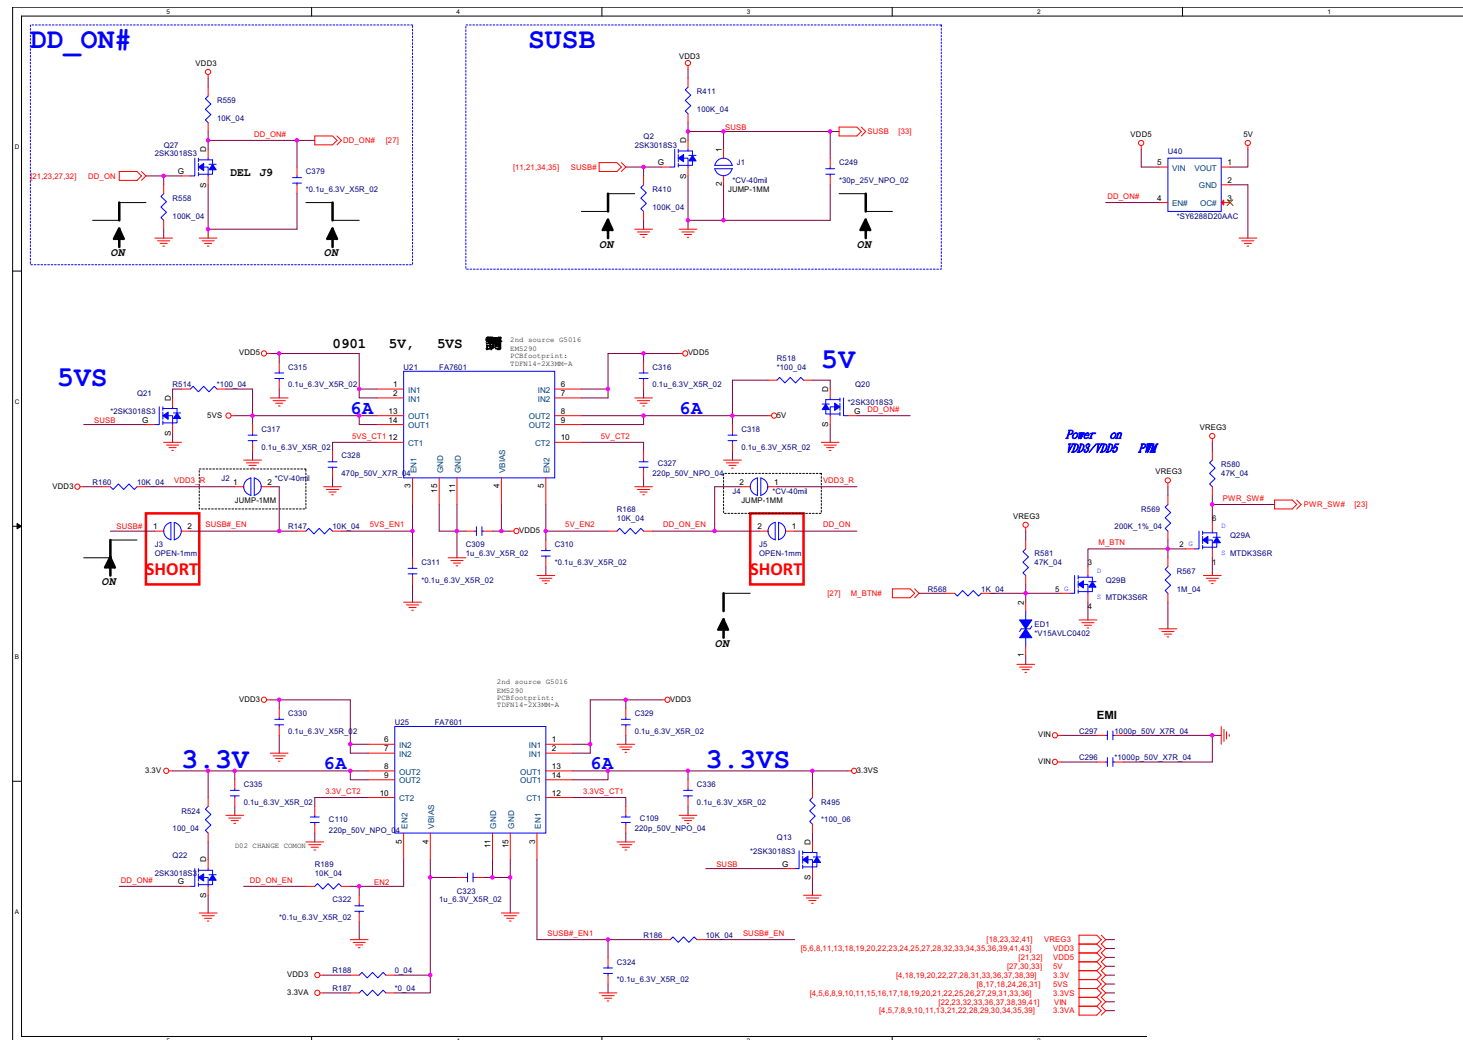


Sheet 40 of 49
3.3V, 5V, 3VS, 5VS,
CTL

Schematic Diagrams

Charger

Sheet 41 of 49
Charger

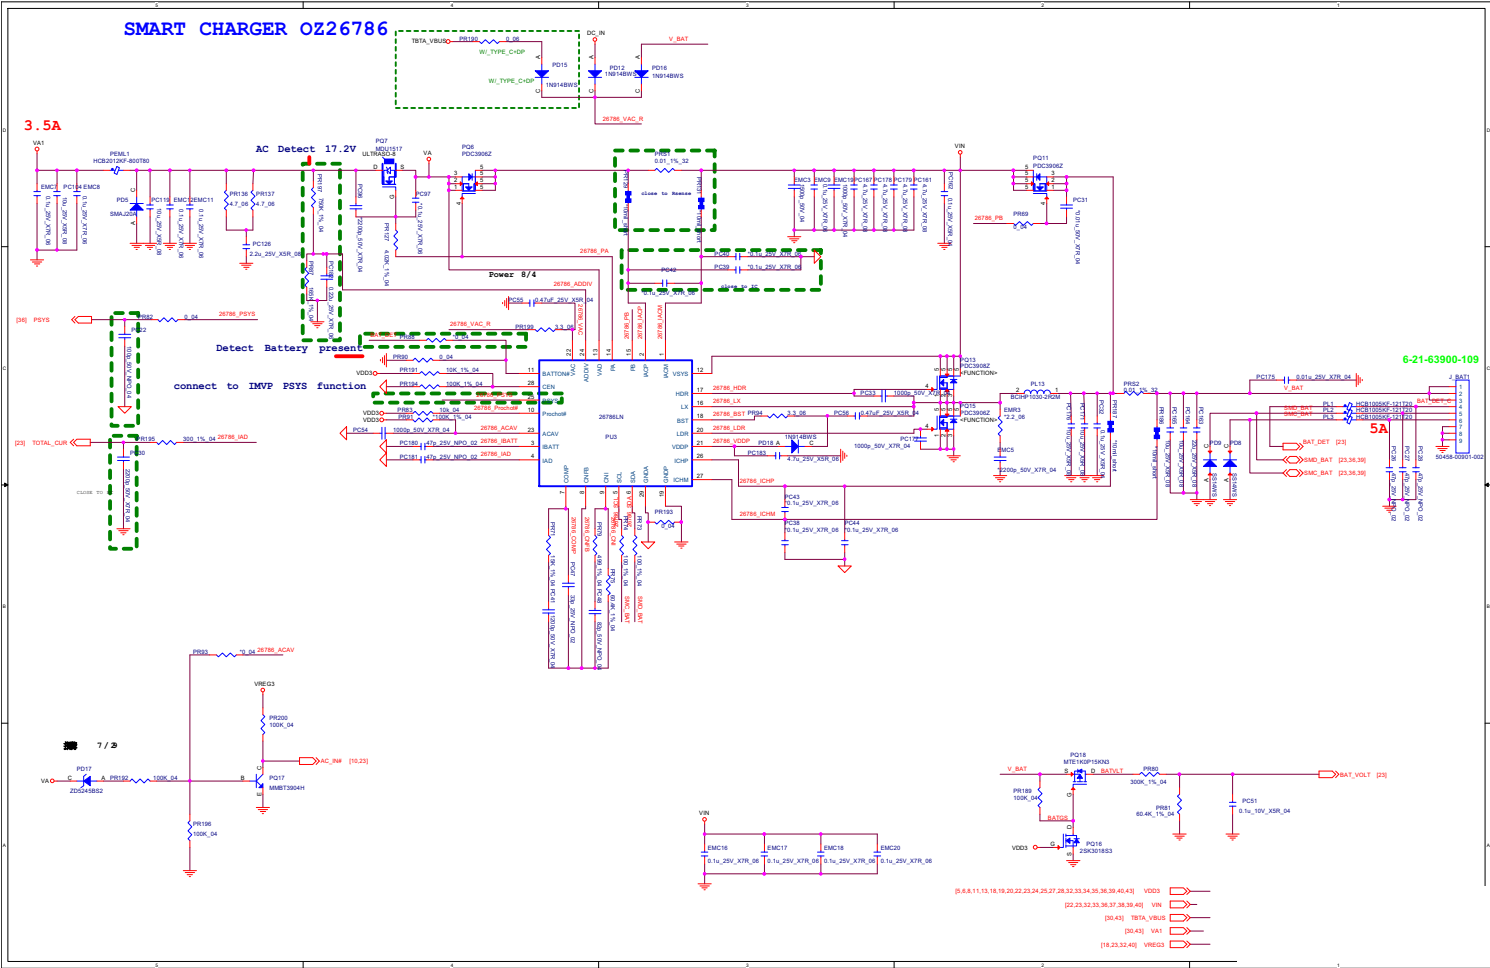


Option BOM


W/ TPM	W/O TPM	EC ID	Board ID
R204 56_04 6-14-5603B-11B R230 56_04 6-14-5603B-11B R235 56_04 6-14-5603B-11B R249 56_04 6-14-5603B-11B R143 10K_04 6-14-1033B-01B (ID) C92 0.1u 6.3V X5R_02 6-07-10421-2K0 C93 0.1u 6.3V X5R_02 6-07-10421-2K0 C106 0.1u 6.3V X5R_02 6-07-10421-2K0 C108 0.1u 6.3V X5R_02 6-07-10421-2K0 C352 0.1u 6.3V X5R_02 6-07-10421-2K0 C95 1u 6.3V X5R_02 6-07-10511-2K0 R140 4.7K_04 6-14-4723B-11B R141 4.7K_04 6-14-4723B-11B R299 3.3K 1%_04 6-13-33011-28B R304 3.3K 1%_04 6-13-33011-28B R543 33_04 6-14-3303B-11B R544 33_04 6-14-3303B-11B R545 33_04 6-14-3303B-11B R546 0_04 6-14-3303B-11B R658 20K_04 6-14-2243B-11B R659 10K_04 6-14-1033B-01B U4 SLB9670VQ F/W 7.85 6-03-09670-031 U29 GD25D10CTIGR 6-04-02510-A92 R239 5.1 1%_04 6-13-SR101-28B R247 5.1 1%_04 6-13-SR101-28B R255 5.1 1%_04 6-13-SR101-28B R256 5.1 1%_04 6-13-SR101-28B R259 5.1 1%_04 6-13-SR101-28B R121 0_04 6-14-3303B-11B	R145 10K_04 6-14-1033B-01B (ID) R229 0_04 6-14-0003B-01B R237 0_04 6-14-0003B-01B R244 0_04 6-14-0003B-01B R253 0_04 6-14-0003B-01B R301 0_04 6-14-0003B-01B R305 0_04 6-14-0003B-01B R306 0_04 6-14-0003B-01B R310 0_04 6-14-0003B-01B R122 0_04 6-14-0003B-01B R239 15 1%_04 6-13-15R01-28C R247 15 1%_04 6-13-15R01-28C R259 15 1%_04 6-13-15R01-28C R255 15 1%_04 6-13-15R01-28C R256 15 1%_04 6-13-15R01-28C	NS50PU R327 100K_04 6-14-1043B-11B NS70PU R324 100K_04 6-14-1043B-11B	TPS 65993ADY R476 10K_04 6-14-1033B-01B U9 TPS65993ADYBGR 6-03-65993-0F1 TPS 65993AE R478 10K_04 6-14-1033B-01B U9 TPS65993AE 6-03-65993-0F2

W/ USB CHARGER 3.1 TYPEA	W/O USB CHARGER 3.1 TYPEA	BIOS ID
C326 0.1u 6.3V X5R_02 6-07-10421-2K0 R322 10K_04 6-14-1033B-01B (ID) R511 0_04 6-14-0003B-01B R525 10K_04 6-14-1033B-01B U26 SLG55593AVTR 6-02-55593-9D1	R226 0_04 6-14-0003B-01B R227 0_04 6-14-0003B-01B R523 0_04 6-14-0003B-01B R321 10K_04 6-14-1033B-01B (ID)	NS50PU R138 100K_04 6-14-1043B-11B NS70PU R136 100K_04 6-14-1043B-11B

Sheet 42 of 49
Option BOM

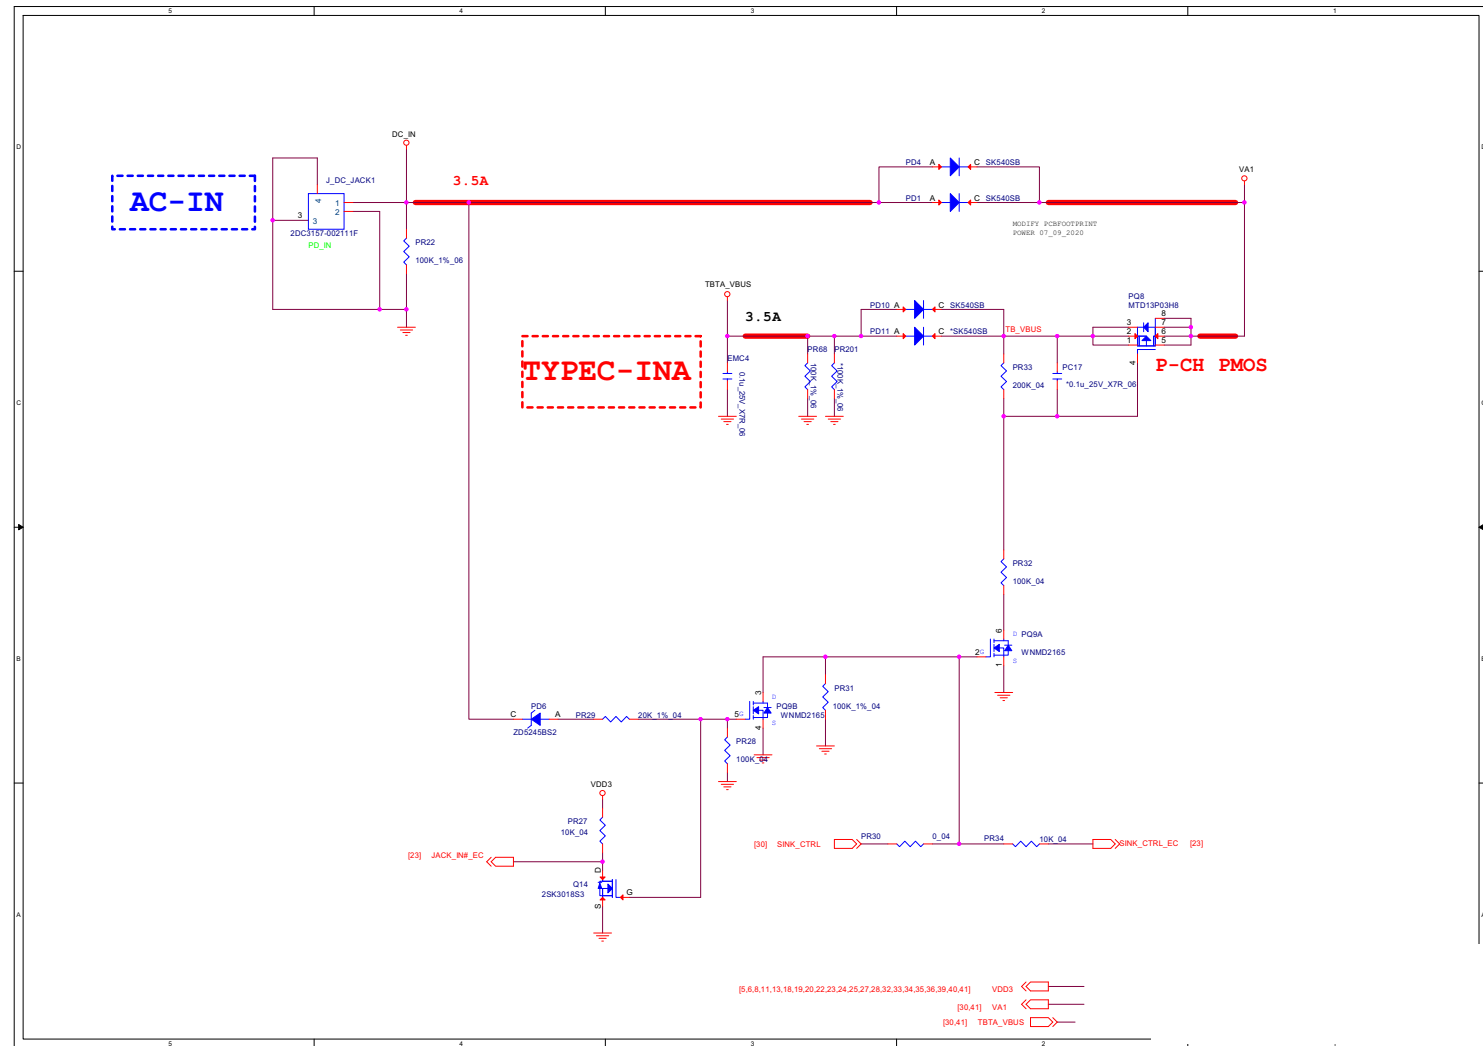


Multi Board - USB, LED

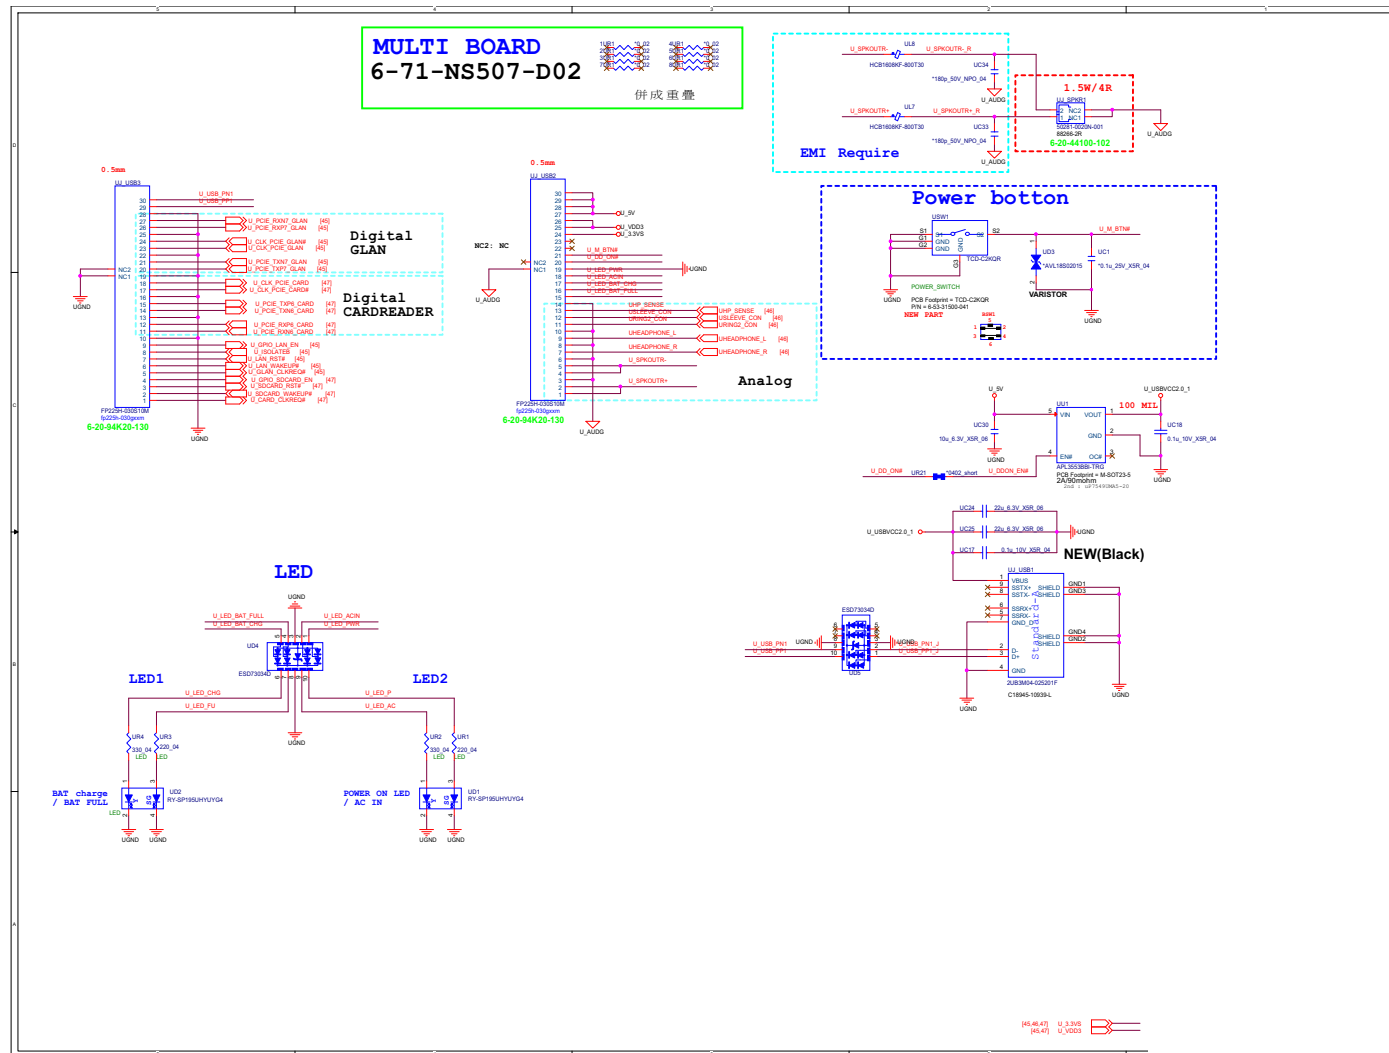


Sheet 44 of 49
Multi Board - USB,
LED

B.Schematic Diagrams

Sheet 45 of 49
Multi board -
RTL8111H RTD3

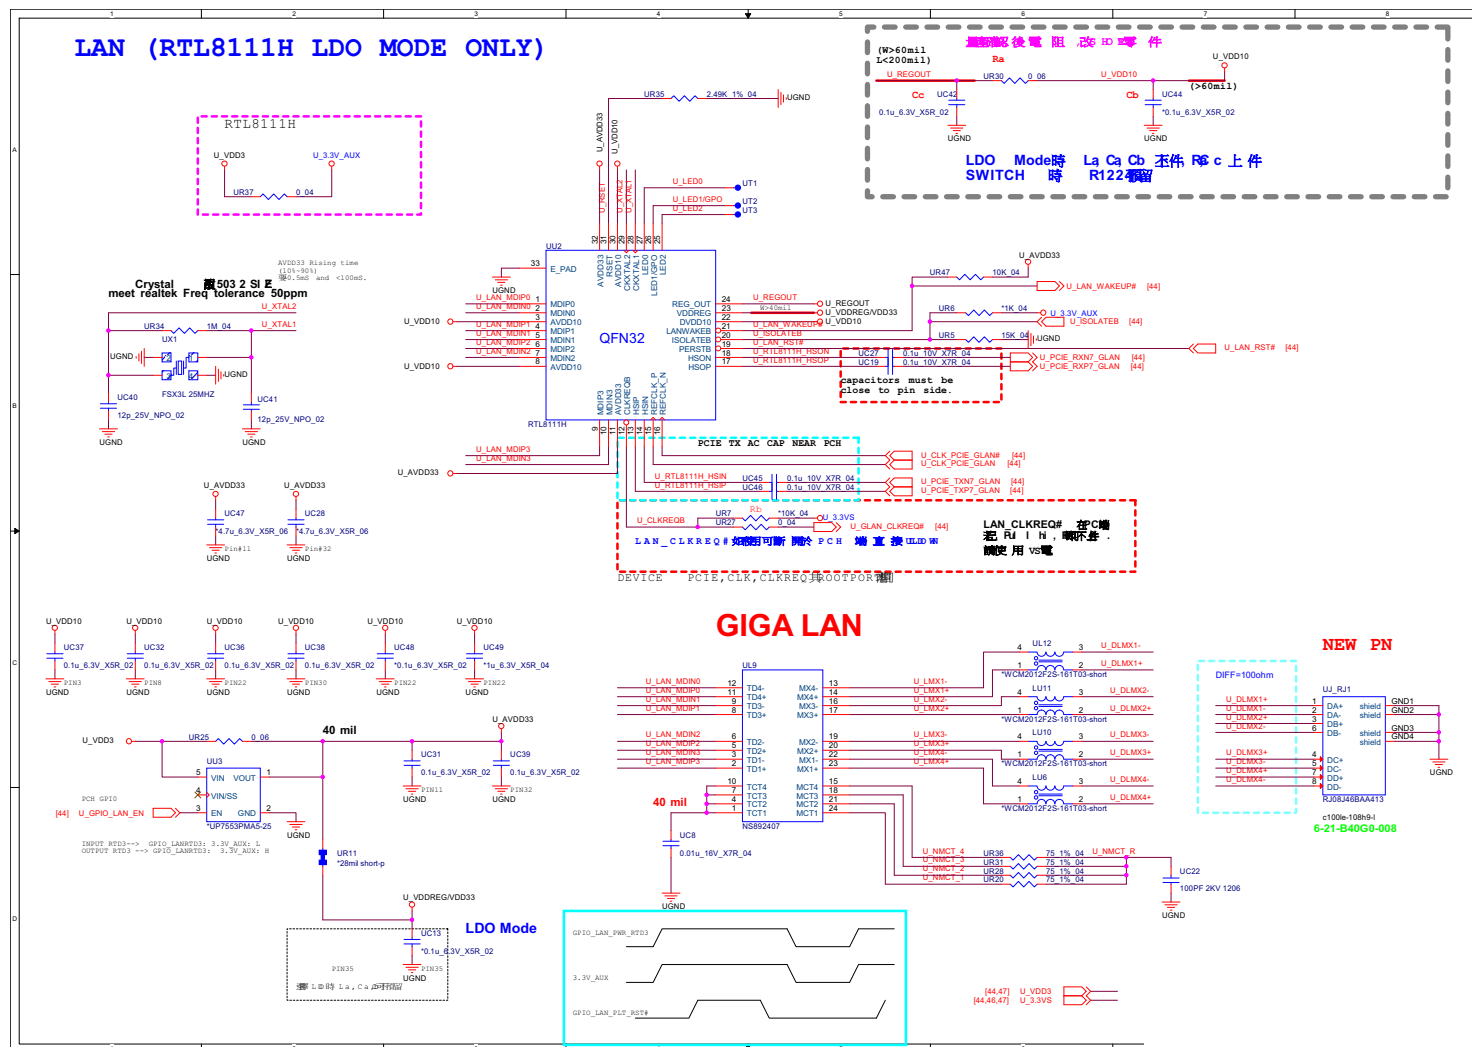


Audio Board B - 47

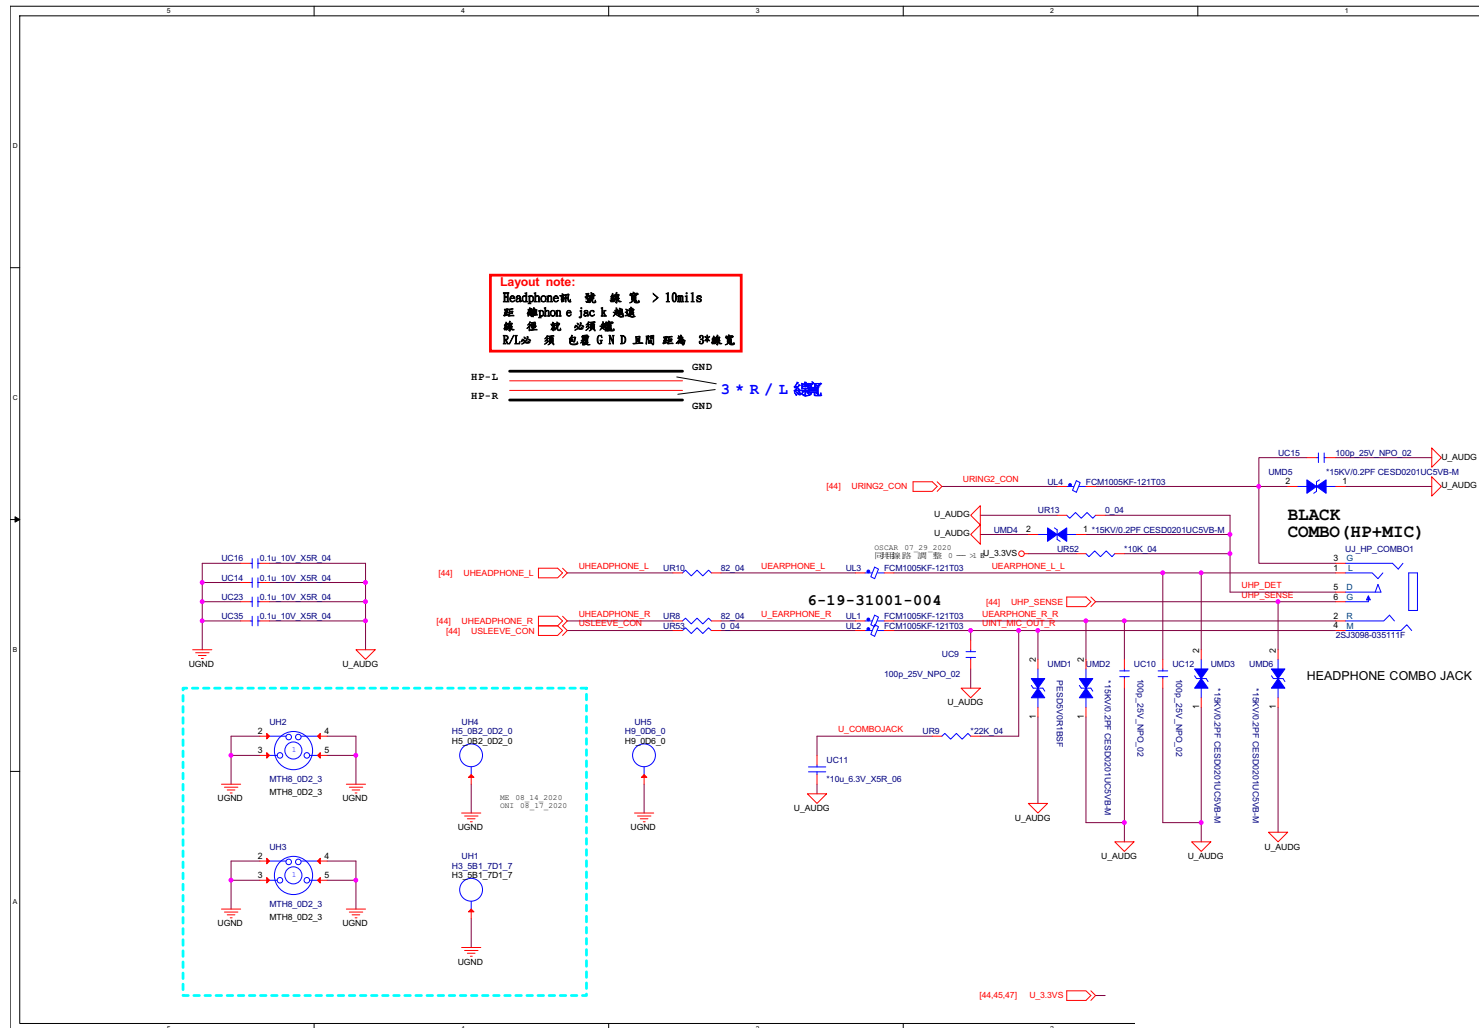

OZ711LV2

Sheet 47 of 49
OZ711LV2

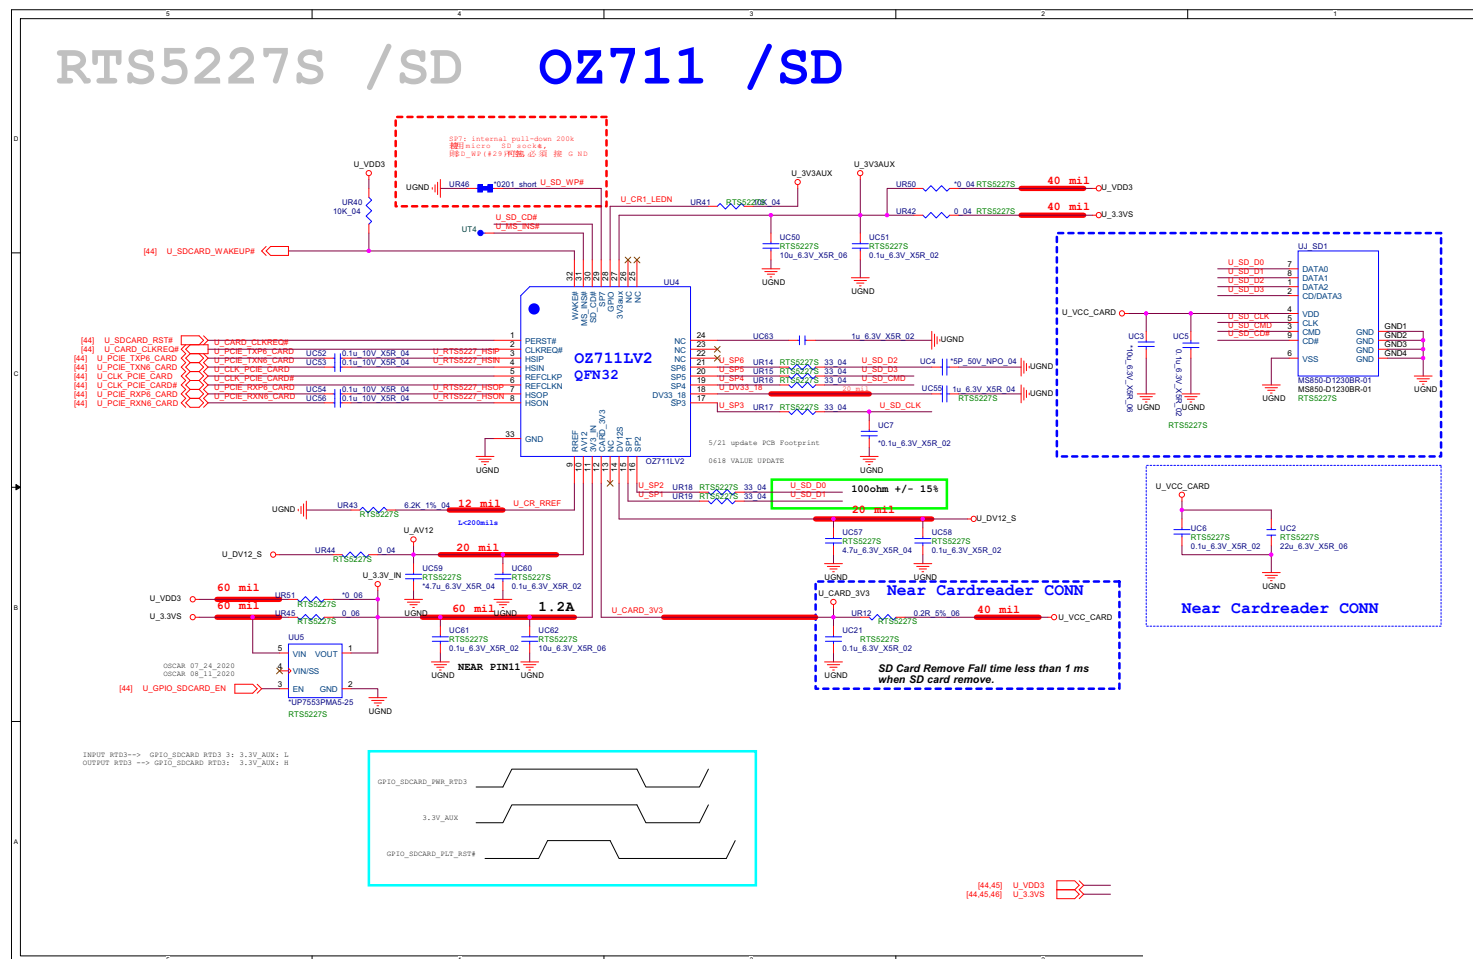

Hall Sensor BOARD

6-71-NS501-D03

併成重疊

Hall Sensor IC

LID IC VAULE FOR REFERENCE BY PROJECT

Modify LR1 函数 EC設定 pull p

LH2
H5_0D2_3
H5_0D2_3
LGND

LH3
H3_0D2_0
H3_0D2_0
LGND

Hall Sensor Board B - 49

Schematic Diagrams

Power Sequence

Sheet 49 of 49
Power Sequence

